

HT 2 1

Spare parts

Ersatzteile



Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar

GPL®

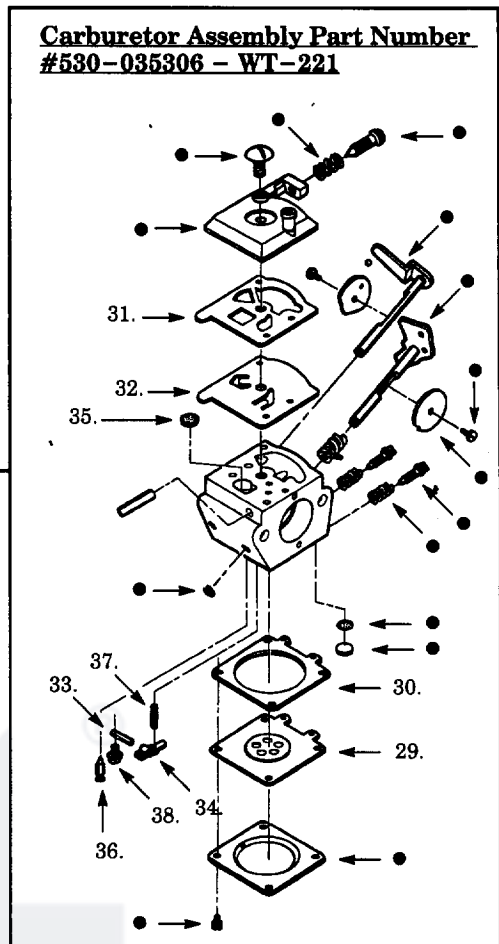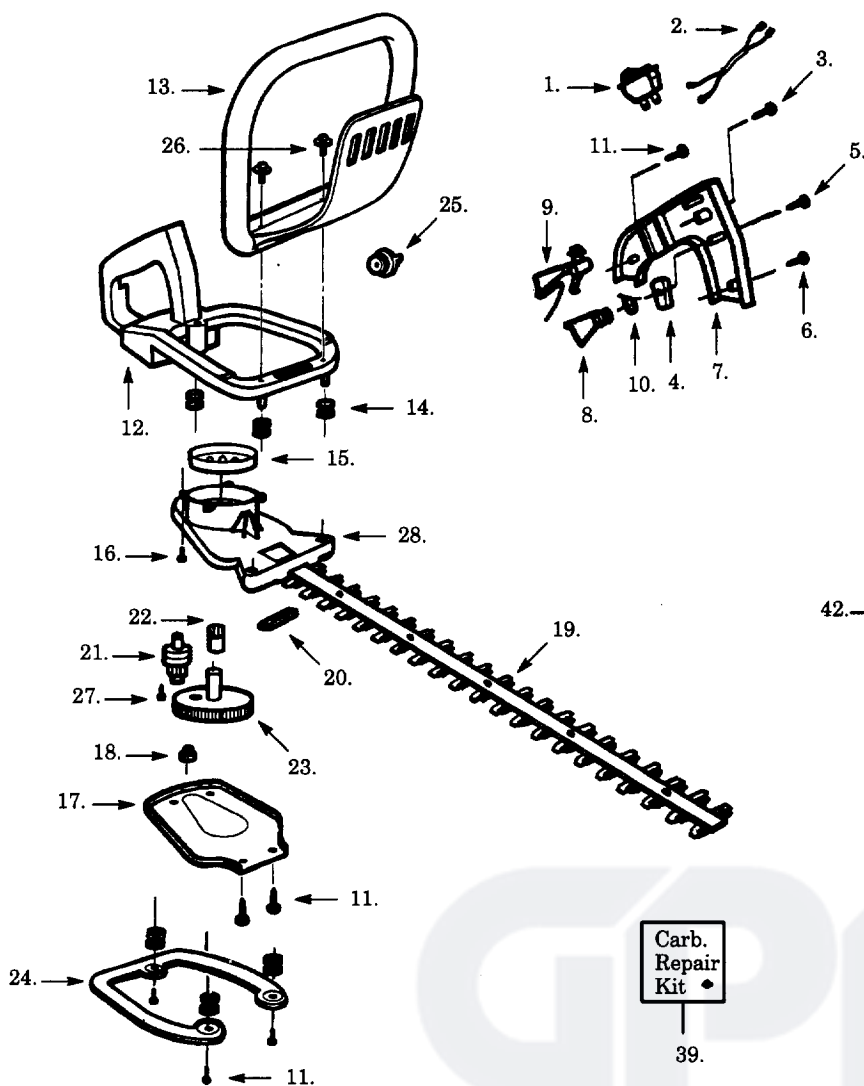


**KEY PART
NO. NO. DESCRIPTION**

1	530 02 99-54	Ignition Switch
2	530 03 64-43	Lead Wire Ass'y.
3	530 01 57-75	Screw
4	530 02 99-58	Trigger Lever
5	530 01 59-40	Screw
6	530 01 57-70	Screw
7	530 02 99-60	Handle Cover
8	530 02 99-56	Throttle Trigger
9	530 03 61-22	Throttle Lockout
10	530 03 61-23	Trigger Spring
11	530 01 59-34	Screw
12	530 03 77-01	Rear Handle & Tank Ass'y
13	530 09 49-92	Front Handle
14	530 02 99-46	Isolator Spring
15	530 04 81-13	Clutch Drum
16	530 01 59-34	Screw
17	530 02 99-16	Gear Box Plate
18	530 03 21-21	Bushing Blade
19	530 03 63-71	Blade Ass'y. (19")
20	530 02 99-48	Blade Seal
21	530 03 62-28	Pinion Ass'y.

**KEY PART
NO. NO. DESCRIPTION**

22	530 01 60-13	Drive Gear Bearings
23	530 06 93-55	Drive Gear Ass'y.
24	530 03 60-46	Isolator Plate
25	530 01 48-71	Fuel Cap Ass'y.
26	530 01 59-55	Screw
27	530 01 58-05	Screw
28	530 01 43-99	Gear Box Ass'y. (Incl. 21, 22 & 27)
29	504 13 08-08	Metering Diaphragm
30	530 03 53-20	Metering Diaphragm Gasket
31	504 13 09-06	Pump Gasket
32	504 13 08-07	Pump Diaphragm
33	505 52 01-25	Metering Pin
34	505 52 01-27	Metering Lever
35	530 03 51-78	Fuel Inlet Screen
36	503 56 34-01	Inlet Needle Valve
37	530 03 51-39	Metering Lever Spring
38	505 31 67-17	Metering Lever Pin Screw
39	530 03 53-12	Carburetor Repair Kit (Incl. 33-38. & 40)
42	530 03 53-06	Carburetor Ass'y.

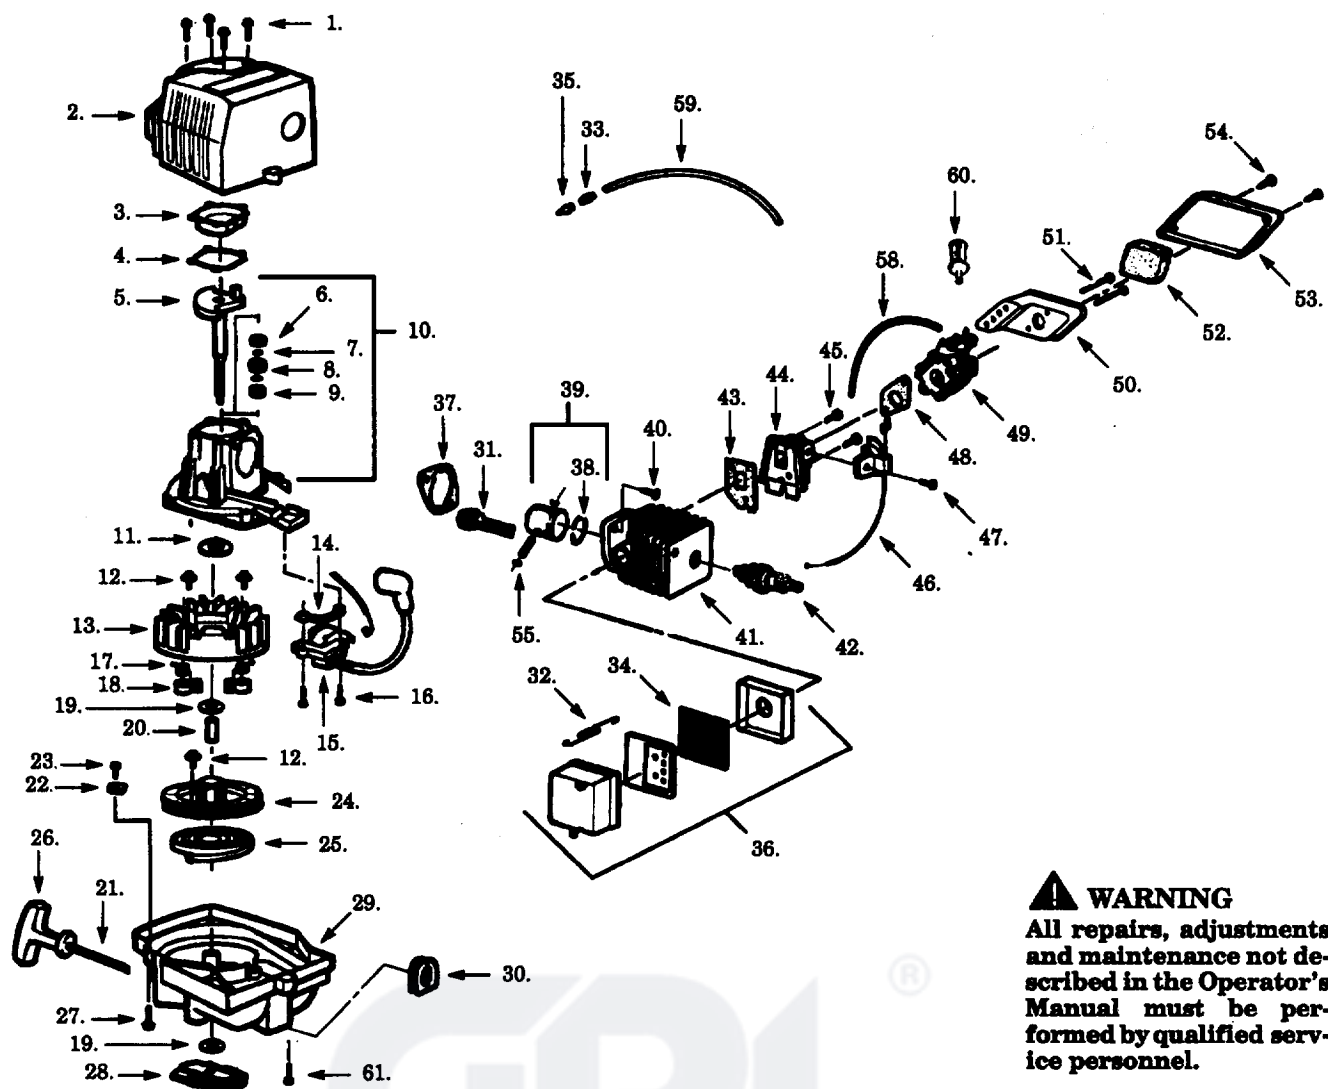

⚠ WARNING
 All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	530 01 59-35	Screw	31	530 01 43-97	Connecting Rod Ass'y.
2	530 03 80-13	Shroud	32	530 02 99-30	Muffler Spring
3	530 02 99-29	Crankcase Cover	33	530 02 44-75	Vent Fitting
4	530 01 91-81	Gasket	34	530 03 61-80	Muffler Screen
5	530 01 43-07	Crankshaft Ass'y.	35	530 02 61-19	Check Valve
6	530 03 21-25	Inner Bearing	36	530 06 93-52	Muffler Kit
7	530 01 59-45	Retaining Ring	37	530 01 91-87	Cylinder Gasket
8	530 01 91-79	Crankcase Seal	38	530 03 64-04	Piston Ring
9	530 03 21-24	Outer Bearing	39	530 06 93-87	Piston Kit (Incl. 38 & 55)
10	530 01 48-61	Crankcase Ass'y. (Incl. 6-9)	40	530 01 59-53	Screw
11	530 01 59-41	Retaining Ring	41	530 01 23-09	Cylinder
12	530 01 58-82	Screw	42	503 23 50-08	Spark Plug
13	530 03 91-49	Flywheel Ass'y.	43	530 01 91-85	Gasket
14	530 03 61-45	Spacer	44	530 03 80-17	Carb. Adaptor
15	530 03 91-63	Ignition Module	45	530 01 60-14	Screw
16	530 01 59-54	Screw	46	530 01 43-84	Throttle Cable Ass'y.
17	530 03 77-30	Spring	47	530 01 57-75	Screw
18	530 02 99-39	Starter Dog	48	530 01 91-83	Gasket
19	530 01 58-28	Washer	49	530 03 53-06	Carburetor
20	530 01 59-30	Flywheel Spacer	50	530 03 61-92	Air Box
21	530 06 92-32	Rope Kit	51	530 01 58-49	Screw
22	530 01 59-63	Retainer	52	530 02 99-34	Air Filter Foam
23	530 01 54-96	Screw	53	530 03 61-93	Air Filter Cover
24	530 06 93-53	Starter Pulley	54	530 01 56-35	Screw
25	530 02 93-95	Starter Spring	55	530 01 51-62	Piston Pin Retainer
26	530 02 75-69	Starter Handle	58	530 06 92-47	Fuel Line
27	530 01 58-86	Screw	59	530 06 92-16	Vent Line
28	530 01 43-96	Clutch Ass'y. Kit	60	530 01 43-62	Fuel Pick-up Ass'y.
29	530 01 46-10	Fan Housing	61	530 01 59-34	Screw
30	530 01 91-82	Grommet			