

HT 2 4

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen


Repuestos

Reservdelar

GPL®

A		61 - 501 36 53-80	E	
1 -	501 36 44-00	62 - 501 36 44-30	1 -	501 36 39-53
2 -	503 23 50-08	63 - 501 36 48-76	2 -	501 36 39-54
3 -	501 36 44-01	65 - 501 36 72-06	3 -	501 36 21-60
4 -	725 53 31-55	66 - 501 36 44-32	4 -	501 36 21-61
5 -	735 11 46-01	C	5 -	501 36 21-63
6 -	734 11 46-01	0 - 501 36 44-33	6 -	501 36 48-22
7 -	501 36 44-02	1 - 501 36 54-27	7 -	501 36 39-17
8 -	501 36 20-14	5 - 501 36 24-22	8 -	501 36 23-75
9 -	501 36 44-03	7 - 501 36 37-54	10 -	501 36 48-72
10 -	501 36 44-04	8 - 501 36 44-34	13 -	501 36 00-23
11 -	501 36 31-01	10 - 501 36 37-63	14 -	501 36 48-23
12 -	501 36 44-05	11 - 501 36 44-35	16 -	501 36 48-24
13 -	501 36 18-56	13 - 501 36 37-65	17 -	501 36 48-25
21 -	501 36 44-06	14 - 501 36 37-66	18 -	501 36 48-26
22 -	501 36 44-07	15 - 501 36 37-67	19 -	501 36 00-16
23 -	501 36 20-05	16 - 501 36 37-68	20 -	735 11 36-01
24 -	501 36 20-04	17 - 501 36 33-61	21 -	501 36 73-67
25 A -	501 36 21-76	18 - 501 36 54-30	22 -	732 25 12-01
25 B -	501 36 21-77	19 - 504 35 09-06	23 -	501 36 48-27
25 C -	501 36 21-78	20 - 504 13 08-08	24 -	501 36 48-73
25 D -	501 36 21-31	21 - 505 31 77-54	25 -	501 36 24 50
26 -	501 36 20-08	22 - 501 36 37-70		
27 -	501 36 44-08	D		
28 -	501 36 48-06			
29 -	735 11 46-01	1 - 501 36 49-47		
30 -	725 53 35-55	2 - 735 31 17-00		
31 -	501 36 44-09	3 - 501 36 10-21		
32 -	734 11 64-01	4 - 501 36 44-38		
33 -	735 11 64-01	5 - 501 36 49-19		
34 -	731 23 18-01	6 - 501 36 44-40		
35 -	501 36 15-03	7 - 501 36 44-41		
36 -	501 36 48-08	8 - 501 36 48-71		
B		9 - 501 36 49-33		
3 -	501 36 48-09	10 - 501 36 44-44		
4 -	501 36 44-12	11 - 501 36 44-45		
5 -	501 36 44-13	12 - 501 36 49-48		
6 -	501 36 44-14	13 - 501 36 48-83		
7 -	503 23 00-11	14 - 501 36 49-38		
8 -	725 53 41-55	16 - 501 36 44-49		
11 -	501 36 48-10	17 - 501 36 49-49		
12 -	501 36 31-15	18 - 501 36 48-17		
13 -	501 36 72-38	20 - 735 11 36-01		
14 -	501 36 72-39	21 - 501 36 44-50		
15 -	501 36 54-16	22 - 501 36 31-40		
16 -	501 36 44-16	23 - 501 36 44-51		
17 -	501 36 20-32	24 - 501 36 02-05		
18 -	501 36 72-40	25 - 501 36 48-78		
19 -	501 36 54-13	33 - 725 53 37-55		
20 -	501 36 48-11	35 - 501 36 48-18		
21 -	501 36 44-17	36 - 501 36 39-52		
22 -	501 36 44-18	37 - 501 36 48-19		
23 -	735 11 36-01	38 - 501 36 21-41		
24 -	725 52 87-55	39 - 501 36 11-94		
25 -	501 36 44-19	40 - 501 36 48-20		
26 -	501 36 44-20	41 - 501 36 48-81		
27 -	501 36 48-12	42 - 501 36 11-88		
30 -	501 36 44-21	43 - 735 11 53-01		
33 -	501 36 51-46	44 - 734 11 53-01		
35 -	501 36 44-22	49 - 501 36 48-82		
36 -	501 36 44-23	57 - 725 53 27-55		
37 -	501 36 44-24	58 - 735 11 46-01		
38 -	501 36 41-14	71 - 735 11 53-01		
39 -	501 36 22-30	72 - 731 23 16-55		
40 -	735 11 46-01	75 - 501 36 44-50		
41 -	725 53 43-55			
43 -	501 36 44-25			
44 -	501 36 44-26			
45 -	501 36 55-11			
47 -	501 36 44-27			
50 -	501 36 48-74			
51 -	501 36 17-69			
52 -	501 36 48-75			
53 -	501 36 48-14			
55 -	501 36 30-12			

A

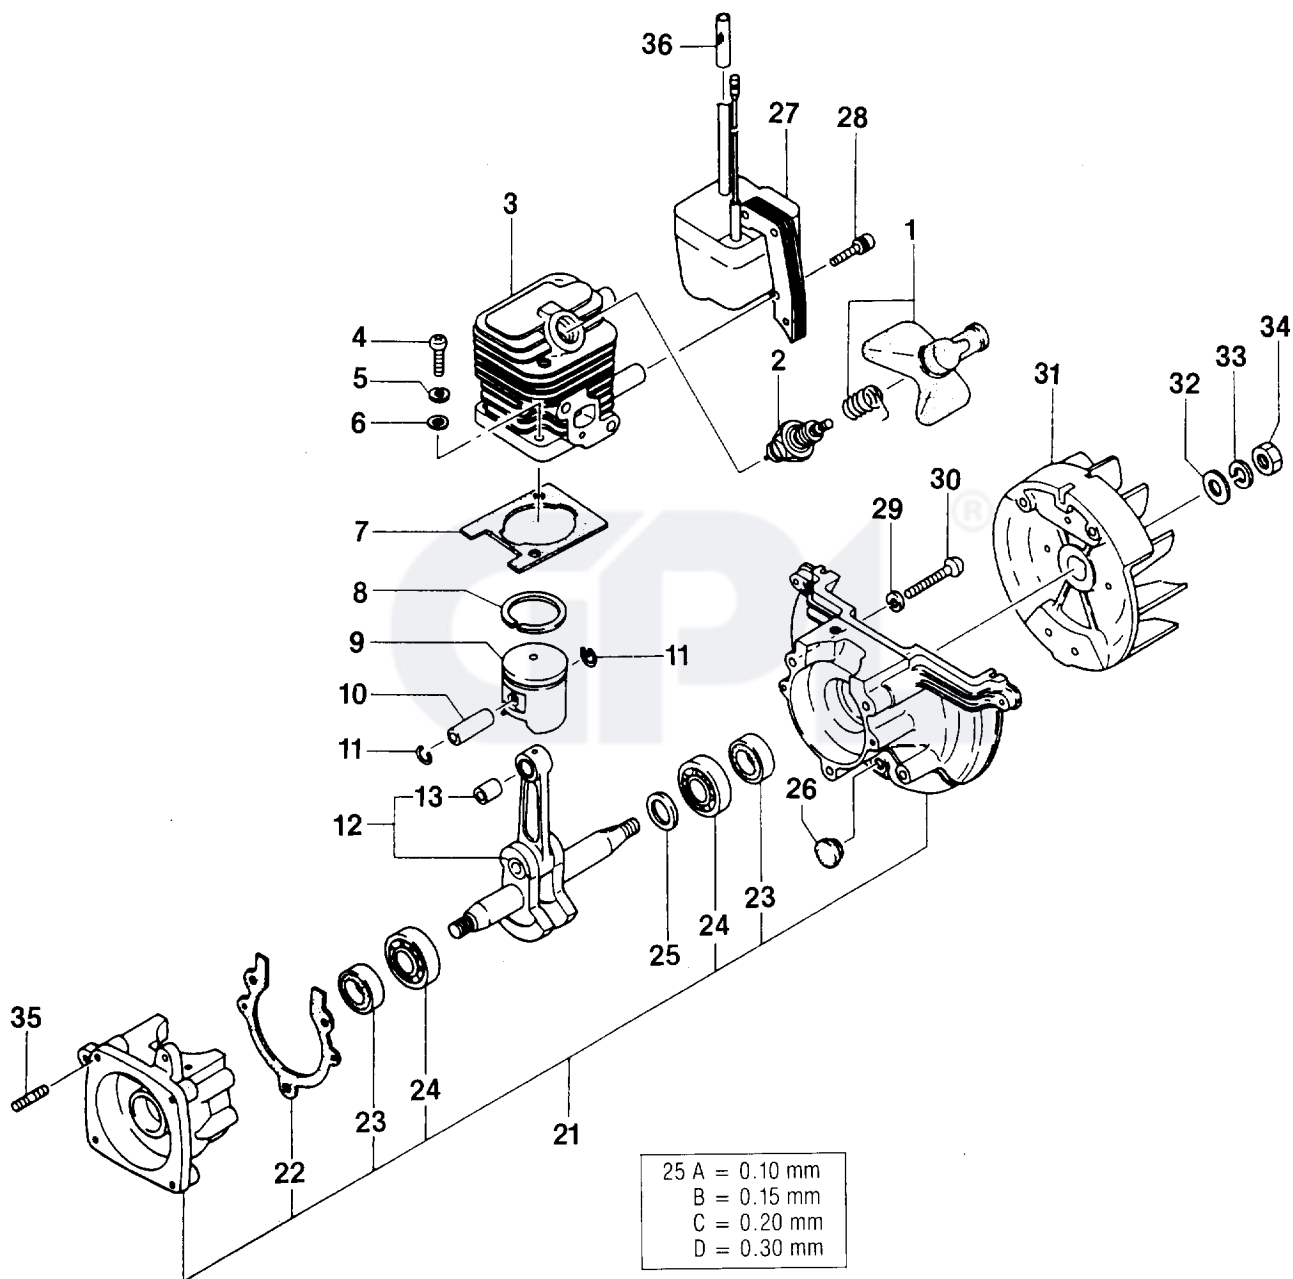


This exploded view diagram illustrates the assembly of a power tool, likely a reciprocating saw. The components are numbered as follows:


- 1**: Main housing (top)
- 2**: Trigger switch assembly
- 3**: Motor housing (top)
- 4**: Motor housing (bottom)
- 5**: Motor housing (side)
- 6**: Motor housing (side)
- 7**: Motor housing (side)
- 8**: Motor housing (side)
- 9**: Motor housing (side)
- 10**: Motor housing (side)
- 11**: Motor housing (side)
- 12**: Motor housing (side)
- 13**: Motor housing (side)
- 14**: Motor housing (side)
- 15**: Motor housing (side)
- 16**: Motor housing (side)
- 17**: Motor housing (side)
- 18**: Motor housing (side)
- 19**: Motor housing (side)
- 20**: Motor housing (side)
- 21**: Motor housing (side)
- 22**: Motor housing (side)
- 23**: Motor housing (side)
- 24**: Motor housing (side)
- 25**: Motor housing (side)
- 26**: Motor housing (side)
- 27**: Motor housing (side)
- 28**: Motor housing (side)
- 29**: Motor housing (side)
- 30**: Motor housing (side)
- 31**: Motor housing (side)
- 32**: Motor housing (side)
- 33**: Motor housing (side)
- 34**: Motor housing (side)
- 35**: Motor housing (side)
- 36**: Motor housing (side)
- 37**: Motor housing (side)
- 38**: Motor housing (side)
- 39**: Motor housing (side)
- 40**: Motor housing (side)
- 41**: Motor housing (side)
- 42**: Motor housing (side)
- 43**: Motor housing (side)
- 44**: Motor housing (side)
- 45**: Motor housing (side)
- 46**: Motor housing (side)
- 47**: Motor housing (side)
- 48**: Motor housing (side)
- 49**: Motor housing (side)
- 50**: Motor housing (side)
- 51**: Motor housing (side)
- 52**: Motor housing (side)
- 53**: Motor housing (side)
- 54**: Motor housing (side)
- 55**: Motor housing (side)
- 56**: Motor housing (side)
- 57**: Motor housing (side)
- 58**: Motor housing (side)
- 59**: Motor housing (side)
- 60**: Motor housing (side)
- 61**: Motor housing (side)
- 62**: Motor housing (side)
- 63**: Motor housing (side)
- 64**: Motor housing (side)
- 65**: Motor housing (side)
- 66**: Motor housing (side)

The diagram shows the assembly sequence from the motor housing (1) through the trigger switch (2), motor housing (3), and various internal components (4-66) to the final assembly (66). A reference to 'SEE FIG. 3' is included near part 30.

C

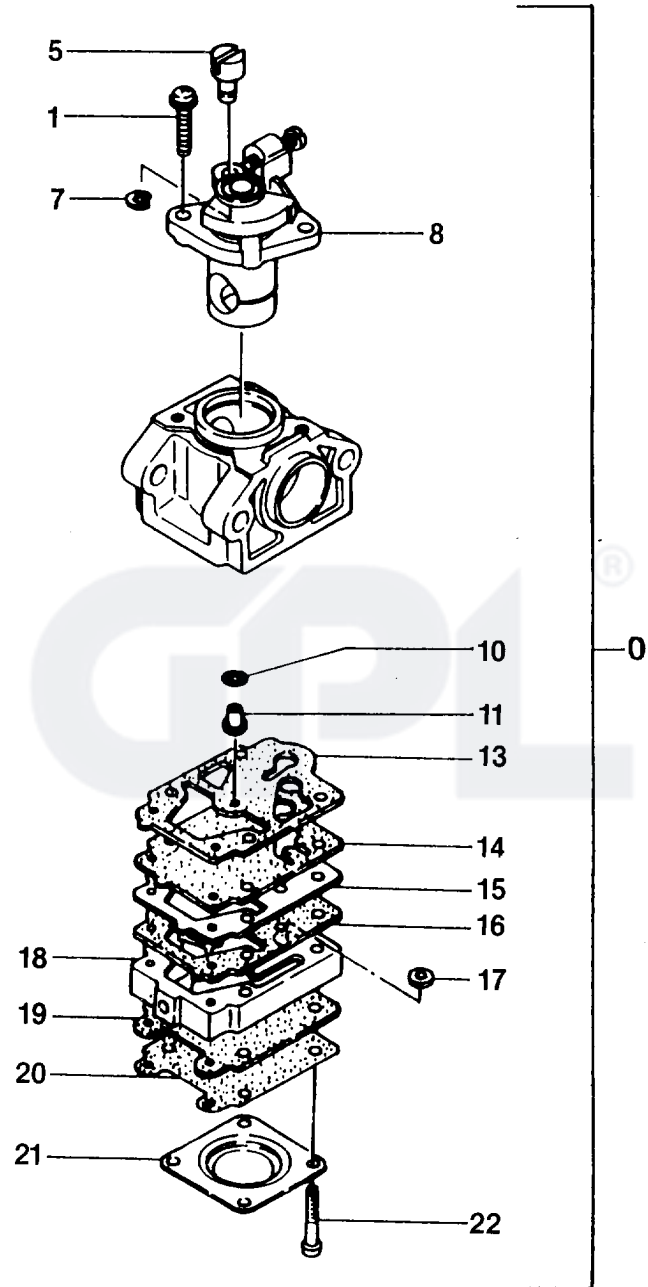

D

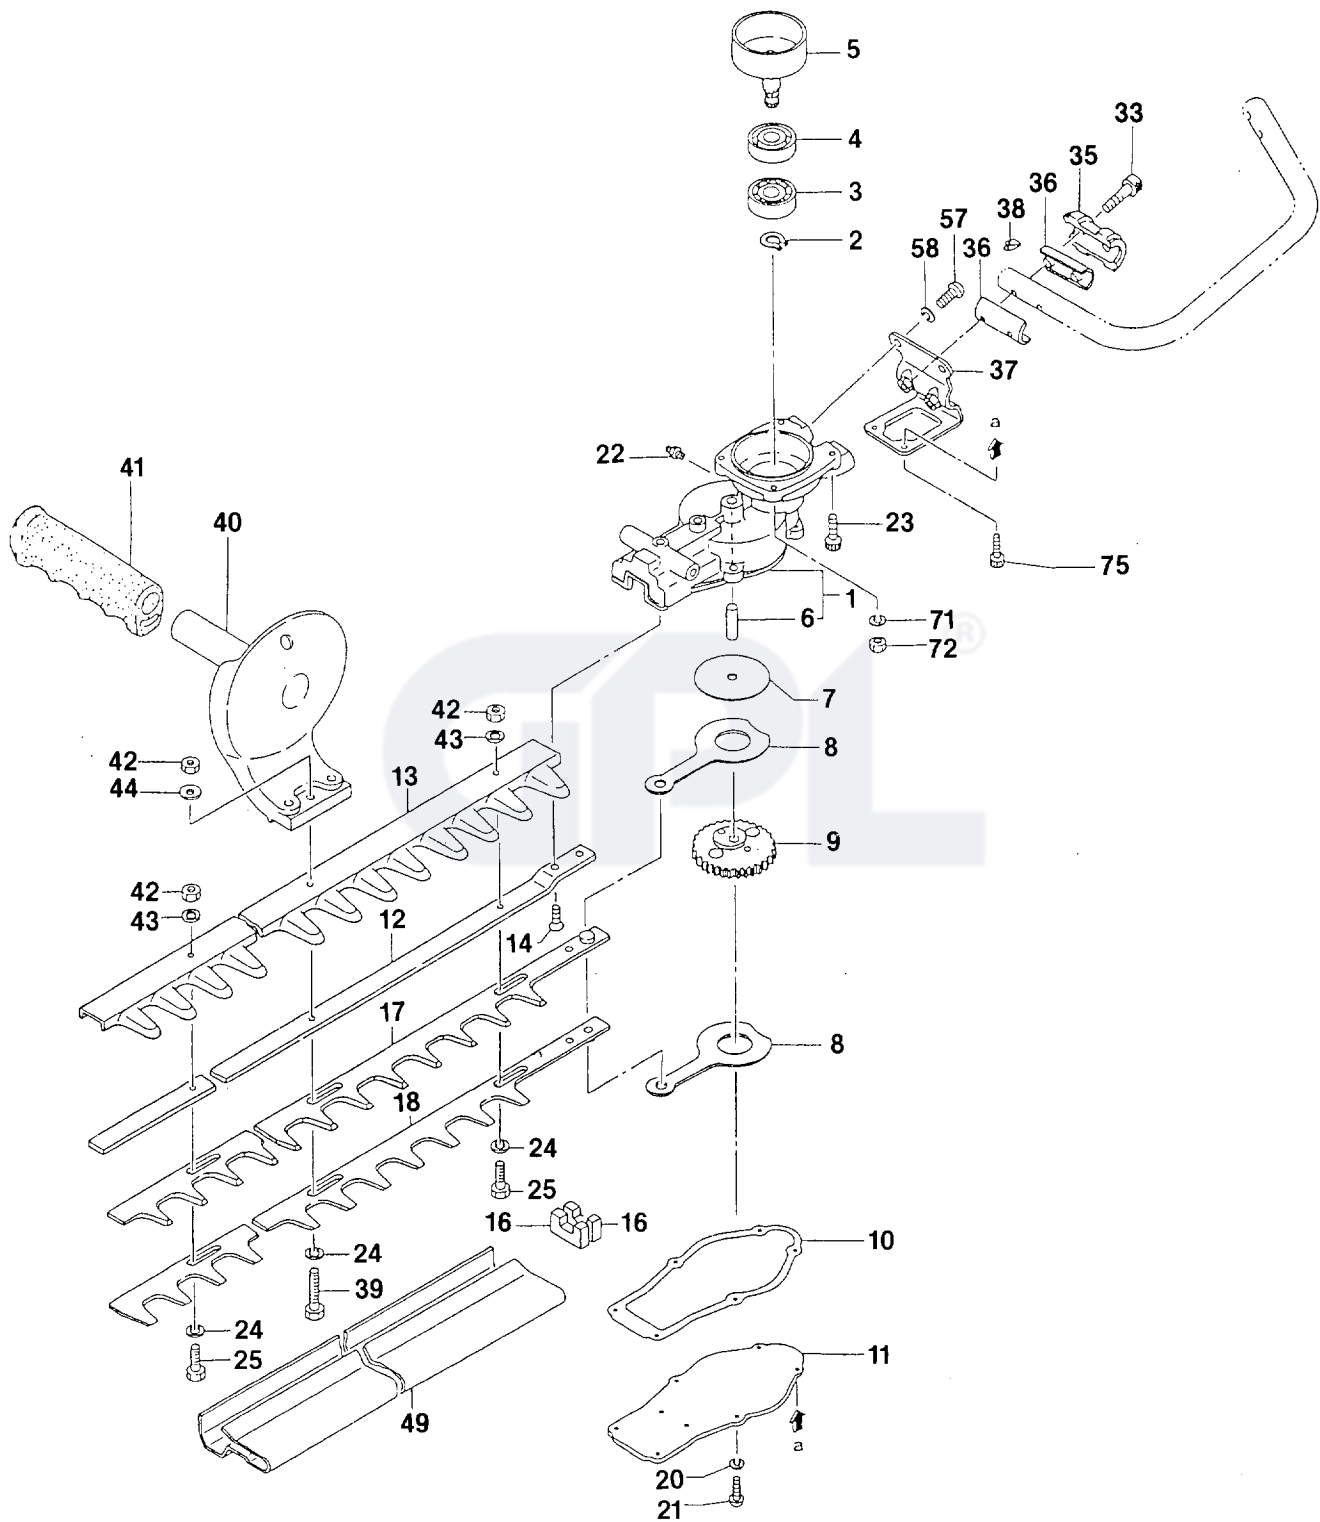

E

