

GT21 L II

Spare parts

Ersatzteile

Pièces détachées


Reserve onderdelen

Repuestos

Reservdelar

GPL®

MODELL GT21L II

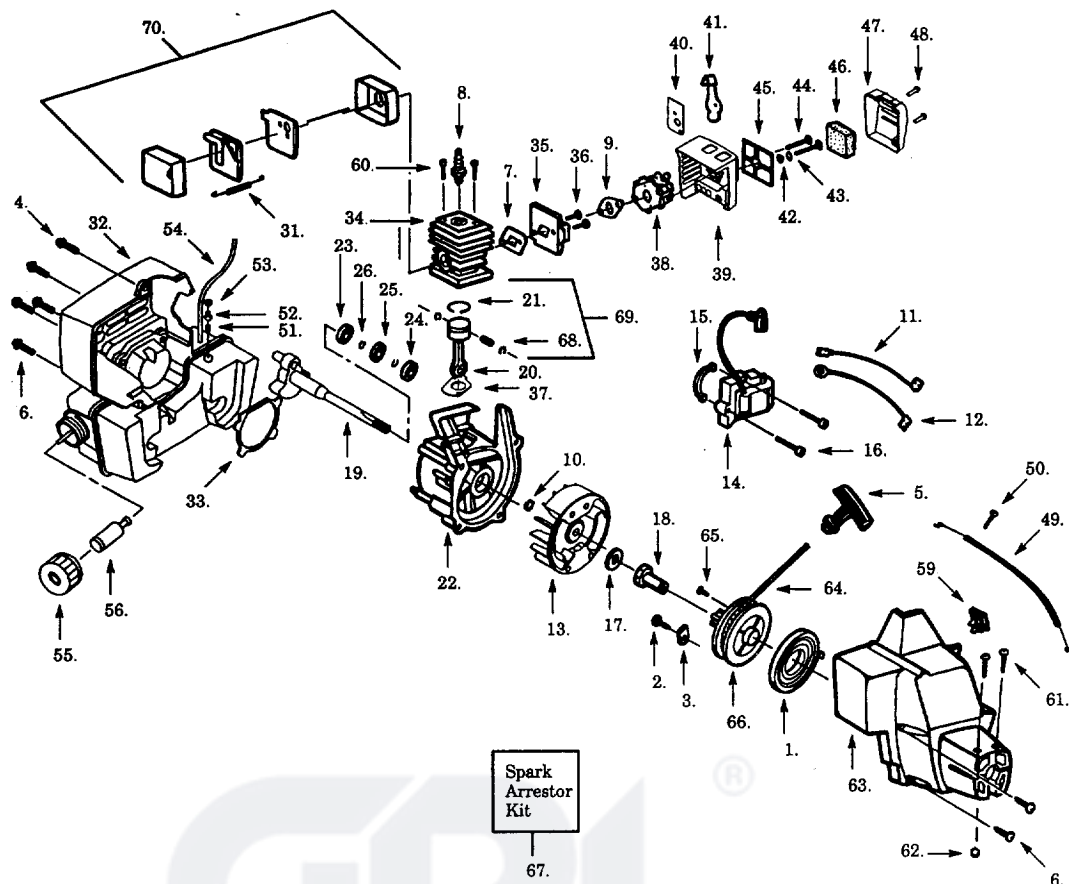


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	530 02 93-95	Starter Spring	38	530 03 53-08	Carburetor w/o Choke
2	530 01 57-75	Screw	39	530 03 73-11	Air Box
3	530 02 75-23	Retainer	40	530 03 73-26	Choke Plate
4	530 01 59-34	Screw	41	530 03 73-25	Choke Shutter
5	530 02 75-69	Starter Handle	42	530 01 52-54	Wave washer
6	530 01 58-10	Screw	43	530 01 58-52	Choke Spacer
7	530 01 91-85	Cylinder Gasket	44	530 01 58-49	Screw
8	503 23 50-08	Spark Plug	45	530 03 74-13	Filter Plate
9	530 01 91-83	Gasket	46	530 03 73-31	Air Filter Foam
10	530 01 59-41	Retainer	47	530 03 72-92	Air Filter Cover
11	530 01 46-63	Lead Wire	48	530 01 59-66	Screw
12	530 01 46-62	Ground Wire	49	530 03 67-44	Throttle cable Ass'y.
13	530 03 91-49	Flywheel Ass'y.	50	530 01 58-14	Screw
14	530 03 91-63	Ignition Module	51	530 02 61-19	Check valve
15	530 03 61-45	Spacer	52	530 02 97-17	Element
16	530 01 59-54	Screw	53	530 02 96-96	Retainer
17	530 01 58-28	Washer	54	530 06 92-47	Fuel Line
18	530 02 79-53	Drive Coupling	55	530 03 68-74	Fuel Cap Ass'y.
19	530 01 45-32	Crankshaft Ass'y.	56	530 01 43-62	Fuel Pickup Ass'y.
20	530 01 43-97	Connecting Rod Ass'y.	59	530 02 92-39	On/Off Switch
21	530 03 64-04	Piston Ring	60	530 01 59-53	Screw
22	530 01 48-61	Crankcase Ass'y.	61	530 01 57-67	Screw
23	530 03 21-25	Inner Bearing	62	530 01 57-68	Locknut
24	530 03 21-24	Outer Bearing	63	530 01 48-13	Fan Housing/Shroud Ass'y.
25	530 01 91-79	Case Seal	64	530 06 92-32	Rope Kit
26	530 01 59-45	Retaining Ring	65	530 01 58-23	Screw
31	530 02 99-30	Muffler Spring	66	530 06 94-00	Starter Pulley
32	530 03 74-87	Shroud & Tank Ass'y.	67	530 06 93-80	Spark Arrestor Kit
33	530 01 91-81	Gasket	68	530 01 51-62	Piston Pin Retainer
34	530 06 93-73	Cylinder	69	530 06 94-02	Piston Pin (Incl. 21.68 & Pin)
35	530 03 65-17	Carb. Adaptor	70	530 06 93-89	Muffler Kit
36	530 01 60-14	Screw			
37	530 01 91-86	Gasket			

MODELL GT21L II

WARNING

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

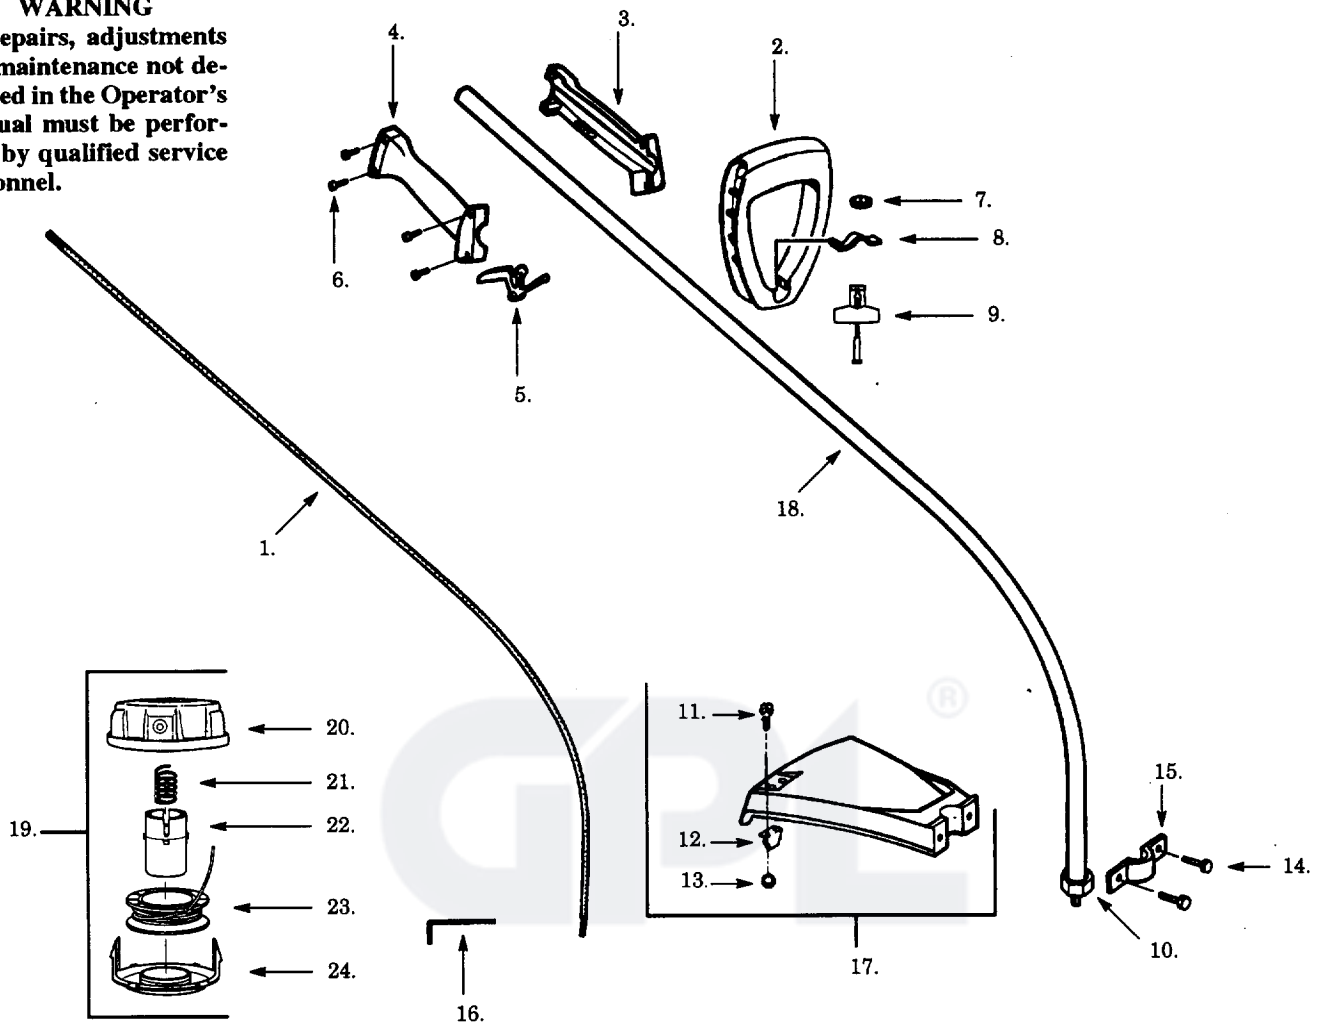

KEY NO.	PART NO.	DESCRIPTION
---------	----------	-------------


1	530 09 50-18	Drive Shaft
2	530 01 06-18	"D" Handle
3	530 03 65-14	Throttle Hsg. (Left)
4	530 03 65-15	Throttle Hsg. (Right)
5	530 03 65-56	Throttle lever
6	530 01 59-66	Screw
7	530 01 56-10	Nut
8	530 09 47-42	Clamp
9	530 06 92-52	"T" Handle Ass'y.
10	530 09 45-43	Dust Cup
11	530 01 53-37	Screw
12	530 09 45-70	Line Limiter

KEY NO.	PART NO.	DESCRIPTION
---------	----------	-------------

13	530 01 56-53	Locknut
14	530 09 22-43	Screw
15	530 09 36-53	Shield Bracket
16	502 71 36-01	Hex Wrench
17	530 06 92-49	Shield Kit Ass'y.
18	530 09 51-48	Drive Shaft Hsg.
19	952 71 55-40	Cutting Head Ass'y. (Incl. 20-24)
20	530 09 48-78	Hub Ass'y.
21	530 09 48-30	Spring
22	530 09 48-27	Release Button
23	952 71 55-44	Spool w/Line
24	530 09 48-28	Cover

MODELL GT21L II

Carburetor Assembly Part Number
#530-035329 - WT-245

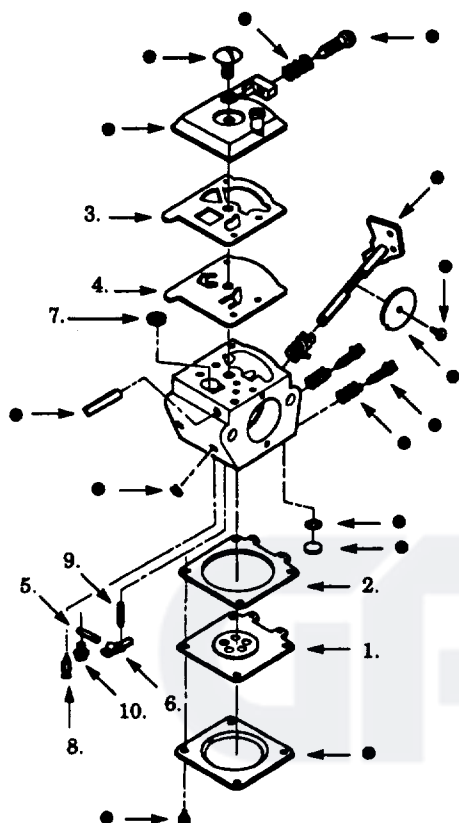


● Carb.
Repair
Kit

11.

KEY PART

NO.	NO.	DESCRIPTION
1	504 13 08-08	Metering Diaphragm
2	-	Metering Diaphragm Gasket
	530 03 53-32	WT245
	530 03 50-11	WA215
3	504 13 09-06	Pump Gasket
4	504 13 08-07	Pump Diaphragm
5	505 52 01-25	Metering Pin
6	505 52 01-27	Metering Lever
7	530 03 51-78	Fuel Inlet Screen
8	-	Inlet Needle Valve
	503 56 34-01	WT245
	503 11 70-01	WA215

Carburetor Assembly Part Number
#530-035308 - WA-215

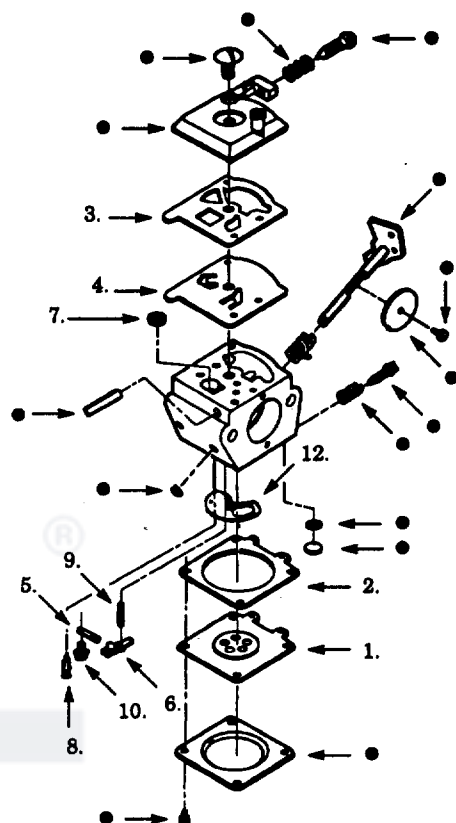

Gasket/
Dia.
Kit

13.

● Carb.
Repair
Kit

11.

KEY PART

NO.	NO.	DESCRIPTION
9	-	Metering Lever Spring
	530 03 51-39	WT245
	530 03 73-30	WA215
10	-	Metering Lever Pin Screw
	505 31 67-17	WT245
	530 03 50-16	WA215
11	530 06 94-60	Carburetor Repair Kit
12	530 03 52-11	Circuit Plate Gasket
13	530 06 94-61	Gasket Diaphragm Kit