

GT21 L III

Spare parts

Ersatzteile

Pièces détachées


Reserve onderdelen

Repuestos

Reservdelar

GPL®

MODELL GT21L III

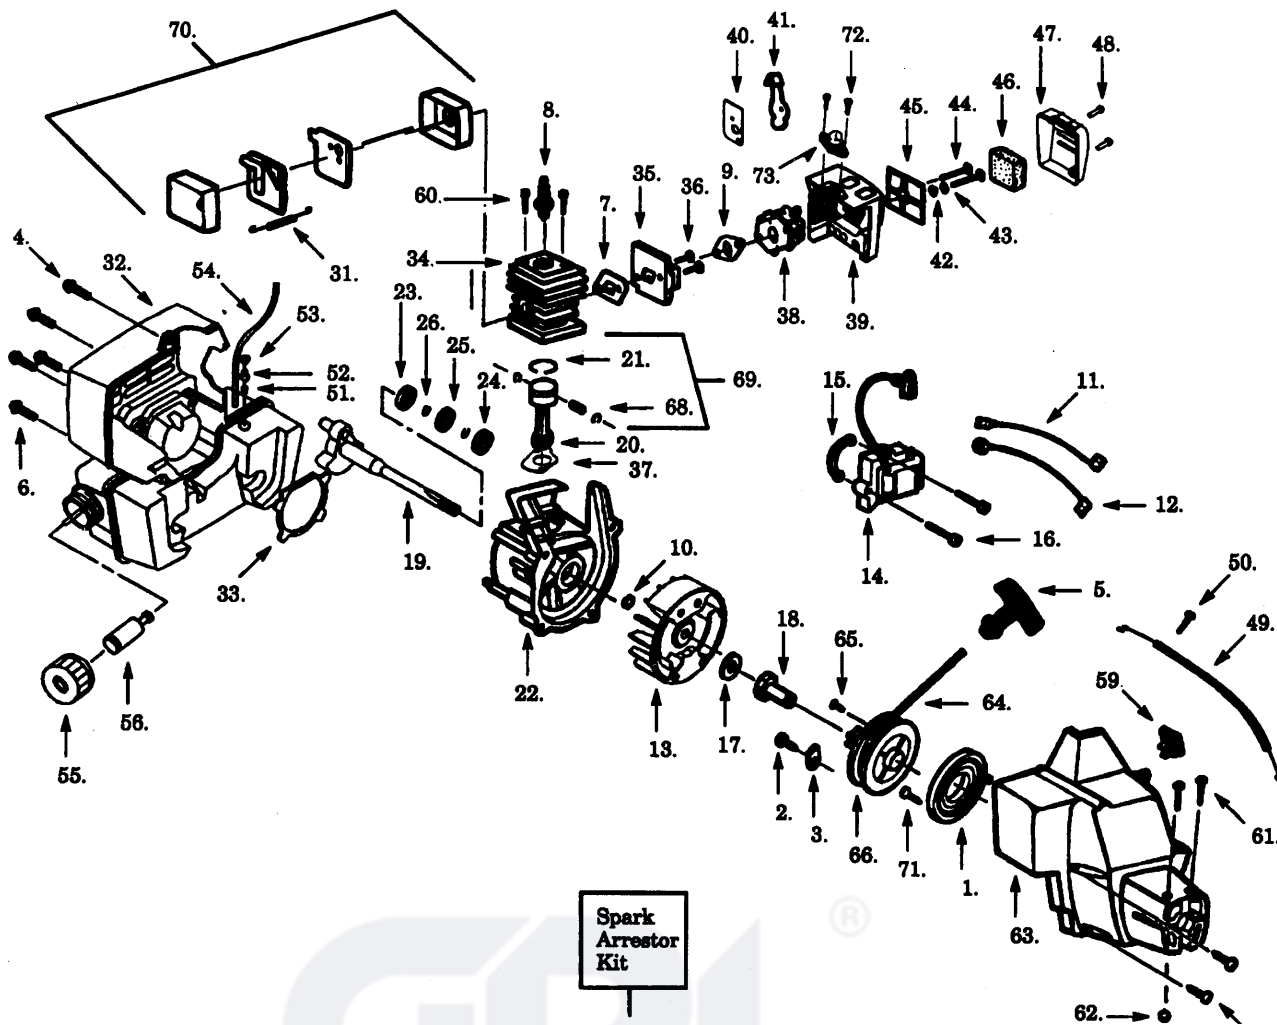


KEY NO.	PART NO.	DESCRIPTION
1	530 02 93-95	Starter Spring
2	530 01 57-75	Screw
3	530 02 75-23	Retainer
4	530 01 59-34	Screw
5	530 02 75-69	Starter Handle
6	530 01 58-10	Screw
7	530 01 91-85	Cylinder Gasket
8	503 23 50-08	Spark Plug
9	530 01 91-83	Gasket
10	530 01 59-41	Retainer
11	530 01 46-63	Lead Wire
12	530 01 46-62	Ground Wire
13	530 03 91-49	Flywheel Ass'y.
14	530 03 91-63	Ignition Module
15	530 03 61-45	Spacer
16	530 01 59-54	Screw
17	530 01 58-28	Washer
18	530 02 79-53	Drive Coupling
19	530 01 45-32	Crankshaft Ass'y.
20	530 01 43-97	Connecting Rod Ass'y.
21	530 03 64-04	Piston Ring
22	530 01 48-61	Crankcase Ass'y.
23	530 03 21-25	Inner Bearing
24	530 03 21-24	Outer Bearing
25	530 01 91-79	Case Seal
26	530 01 59-45	Retaining Ring
31	530 02 99-30	Muffler Spring
32	530 04 70-90	Shroud & Tank Ass'y.
33	530 01 91-81	Gasket
34	530 06 93-73	Cylinder
35	530 03 65-17	Carb. Adaptor
36	530 01 60-14	Screw
37	530 01 91-86	Gasket

KEY NO.	PART NO.	DESCRIPTION
38	530 03 53-47	Carburetor
39	530 03 79-66	Air Box
40	530 03 73-26	Choke Plate
41	530 03 73-25	Choke Shutter
42	530 01 52-54	Wave Washer
43	530 01 58-52	Choke Spacer
44	530 01 58-49	Screw
45	530 03 74-13	Filter Plate
46	530 03 73-31	Air Filter Foam
47	530 03 72-92	Air Filter Cover
48	530 01 59-66	Screw
49	530 03 67-44	Throttle cable Ass'y.
50	530 01 58-14	Screw
51	530 02 61-19	Check Valve
52	530 02 97-17	Element
53	530 02 96-96	Retainer
54	530 06 92-47	Fuel Line
55	530 03 68-74	Fuel Cap Ass'y.
56	530 01 43-62	Fuel Pickup Ass'y.
59	530 02 92-39	On/Off Switch
60	530 01 59-53	Screw
61	530 01 60-72	Screw
62	530 01 57-68	Locknut
63	530 01 48-13	Fan Housing/Shroud Ass'y.
64	530 06 92-32	Rope Kit
65	530 01 58-23	Screw
66	530 06 94-00	Starter Pulley
67	530 06 93-80	Spark Arrestor Kit
68	530 01 51-62	Piston Pin Retainer
69	530 06 94-02	Piston Pin (Incl. 21.68 & Pin)
70	530 06 93-89	Muffler Kit
71	530 01 58-82	Screw
72	530 01 57-80	Screw
73	530 03 79-72	Bulb Ass'y.

⚠ WARNING

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

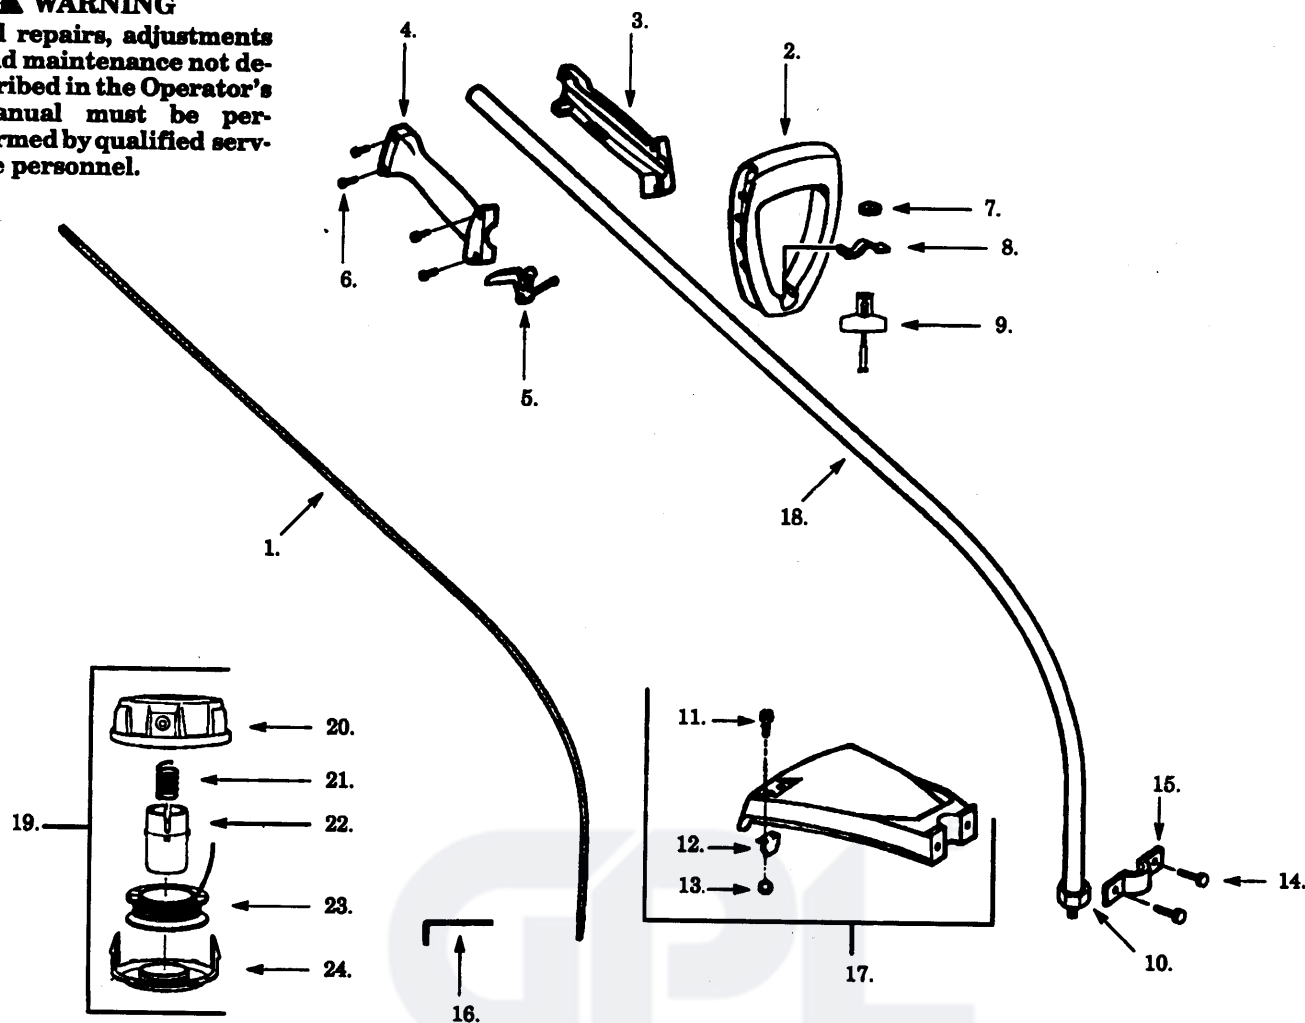


KEY NO.	PART NO.	DESCRIPTION
1	530 09 50-18	Drive Shaft
2	530 01 06-18	"D" Handle
3	530 03 65-14	Throttle Hsg. (Left)
4	530 03 65-15	Throttle Hsg. (Right)
5	530 03 65-56	Throttle Lever
6	530 01 59-66	Screw
7	530 01 56-10	Nut
8	530 09 47-42	Clamp
9	530 06 92-52	"T" Handle Ass'y.
10	530 09 45-43	Dust Cup
11	530 01 53-37	Screw
12	530 09 45-70	Line Limiter

KEY NO.	PART NO.	DESCRIPTION
13	530 01 56-53	Locknut
14	530 09 22-43	Screw
15	530 09 36-53	Shield Bracket
16	502 71 36-01	Hex Wrench (5/32)
17	530 06 92-49	Shield Kit Ass'y.
18	530 09 51-48	Drive Shaft Hsg.
19	952 71 55-40	Cutting Head Ass'y. (Incl. 20-24)
20	530 09 48-78	Hub Ass'y.
21	530 09 48-30	Spring
22	530 09 48-27	Release Button
23	952 71 55-44	Spool w/Line
24	530 09 48-28	Cover

MODELL GT21L III

Carburetor Assembly Part Number
#530 03 53-47 – WA-218

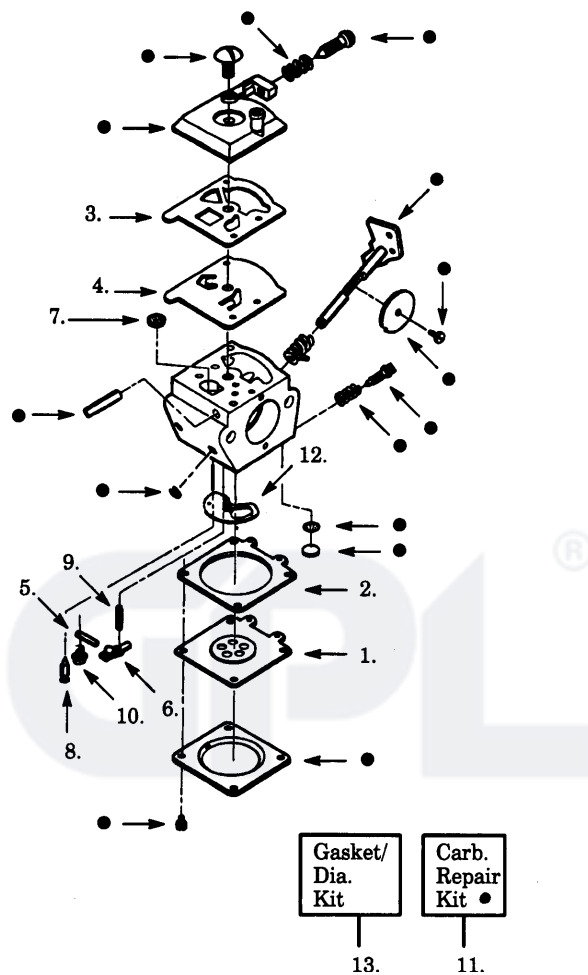

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	504 13 08-08	Metering Diaphragm	9	530 03 73-30	Metering Lever Spring
2	530 03 50-11	Metering Diaphragm Gasket	10	530 03 50-16	Metering Lever Pin Screw
3	504 13 09-06	Pump Gasket	11	530 06 94-60	Carburetor Repair Kit
4	504 13 08-07	Pump Diaphragm	12	530 03 52-11	Circuit Plate Gasket
5	505 52 01-25	Metering Pin	13	530 06 94-61	Gasket/Diaphragm Kit
6	505 52 01-27	Metering Lever			
7	530 03 51-78	Fuel Inlet Screen			
8	503 11 70-01	Inlet Needle Valve			