

GT22 L, GT24 L

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen


Repuestos

Reservdelar

GPL®

Model GT22L GT24L

Type I – Type II

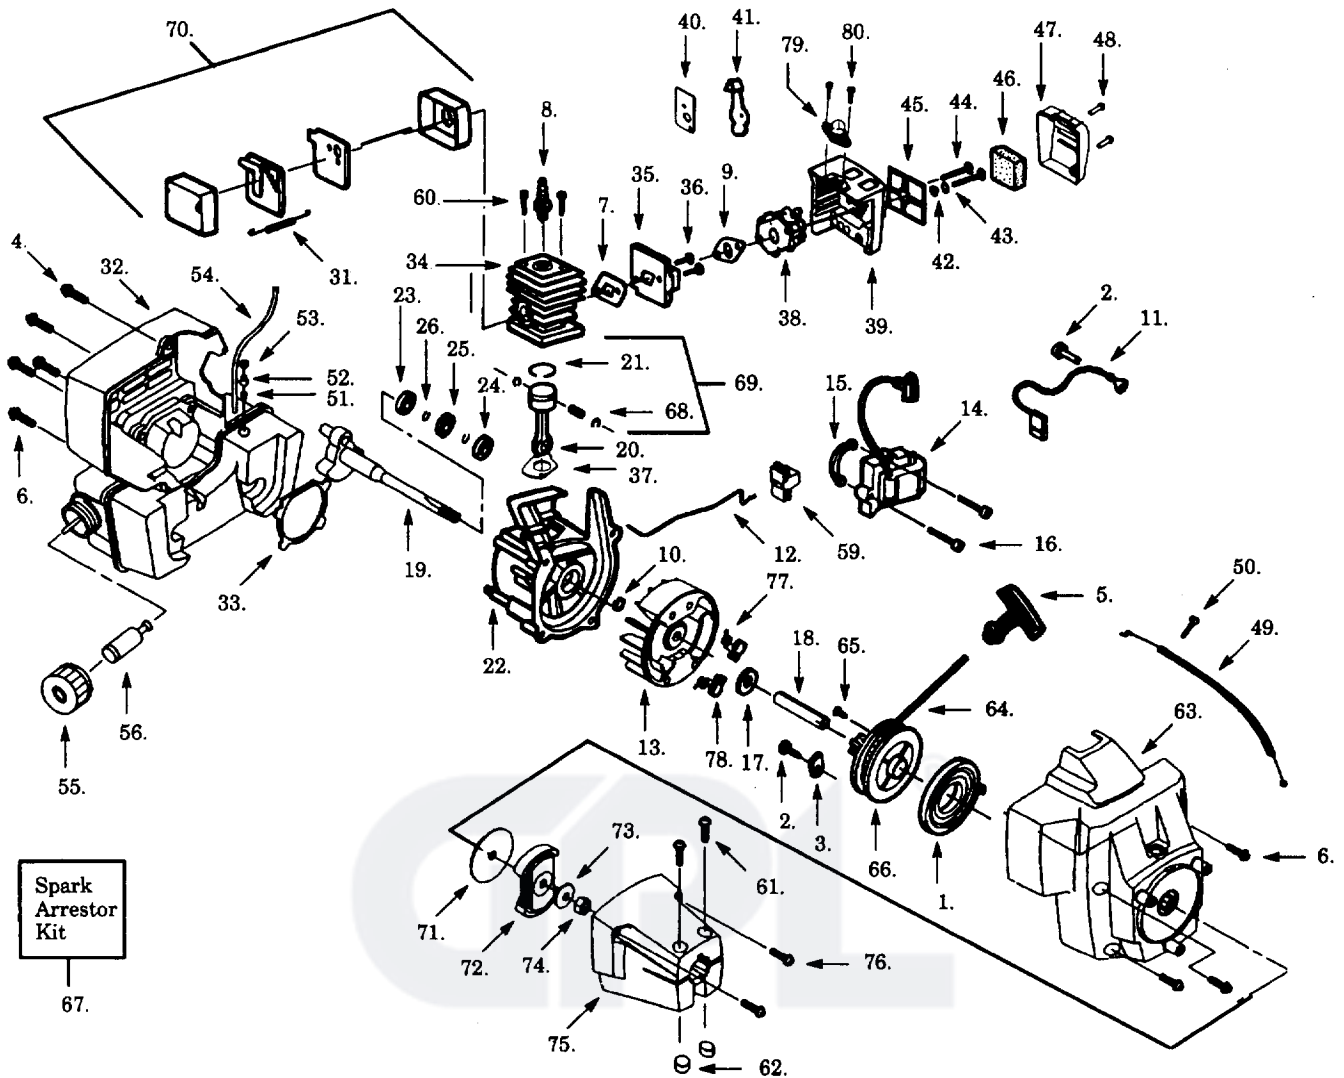

Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530 02 93-95	Starter Spring	32.	-----	Shroud & Tank Ass'y.	53.	530 02 96-96	Retainer
2.	530 01 57-75	Screw	33.	530 01 59-81	Gasket	54.	530 06 92-47	Fuel Line
3.	530 02 75-23	Retainer	34.	530 06 93-73	Cylinder	55.	530 03 68-74	Fuel Cap Ass'y.
4.	530 01 59-34	Screw	35.	530 03 72-90	Carb. Adaptor	56.	530 01 43-62	Fuel Pickup Ass'y.
5.	530 02 75-69	Starter Handle	36.	530 01 60-14	Screw	59.	530 02 79-58	Switch Button
6.	530 01 58-10	Screw	37.	530 01 91-86	Gasket	60.	530 01 59-53	Screw
7.	530 01 91-85	Cylinder Gasket	38.	-----	Carburetor	61.	530 01 57-67	Screw
8.	503 23 50-08	Spark Plug	39.	530 03 53-29	WT-245	62.	530 01 57-68	Locknut
9.	530 01 91-83	Gasket	40.	530 03 74-13	Choke Plate	63.	530 01 49-22	Fan Housing
10.	530 01 59-41	Retainer	41.	530 03 73-25	Choke Shutter	64.	530 06 92-32	Rope Kit
11.	530 02 96-06	Lead Wire	42.	530 01 52-54	Wave Washer	65.	530 01 58-23	Screw
12.	530 03 73-21	Switch Wire Form	43.	530 01 58-52	Choke Spacer	66.	530 06 94-00	Starter Pulley
13.	530 03 91-48	Flywheel Ass'y.	44.	530 01 58-49	Screw	67.	530 06 93-80	Spark Arrestor Kit
14.	530 03 91-63	Ignition Module	45.	530 03 74-13	Filter Plate	68.	530 01 51-62	Piston Pin Retainer
15.	530 03 61-45	Spacer	46.	530 03 73-31	Air Filter Foam	69.	530 06 94-19	Piston Kit
16.	530 01 59-54	Screw	47.	530 03 72-92	Air Filter Cover			(Inc 21,68 & Pin)
17.	530 01 58-28	Washer	48.	530 01 59-66	Screw	70.	530 06 94-20	Muffler Kit
18.	530 03 74-14	Spacer	49.	530 03 74-15	Throttle Cable Ass'y.	71.	530 01 56-11	Washer
19.	530 01 48-64	Crankshaft Assty.	50.	530 01 58-14	Screw	72.	530 06 94-91	Clutch Ass'y. Kit
20.	530 01 43-97	Connecting Rod Ass'y.	51.	530 02 61-19	Check Valve	73.	530 01 51-27	Washer
21.	530 03 64-04	Piston Ring	52.	530 02 97-17	Element	74.	530 62 66-05	Nut
22.	530 01 48-61	Crankcase Ass'y.				75.	530 04 70-13	Clutch Hsg.
23.	530 03 21-25	Inner Bearing				76.	530 01 58-86	Screw
24.	530 03 21-24	Outer Bearing				77.	530 02 99-39	Starter Dog
25.	530 01 91-79	C'case Seal				78.	530 02 99-40	Starter Dog Spring
26.	530 01 59-45	Retaining Ring				79.	530 03 79-72	Bulb
31.	530 02 99-30	Muffler Spring				80.	530 01 57-80	Screw


Model GT22L

Type I – Type II

B0

WARNING

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

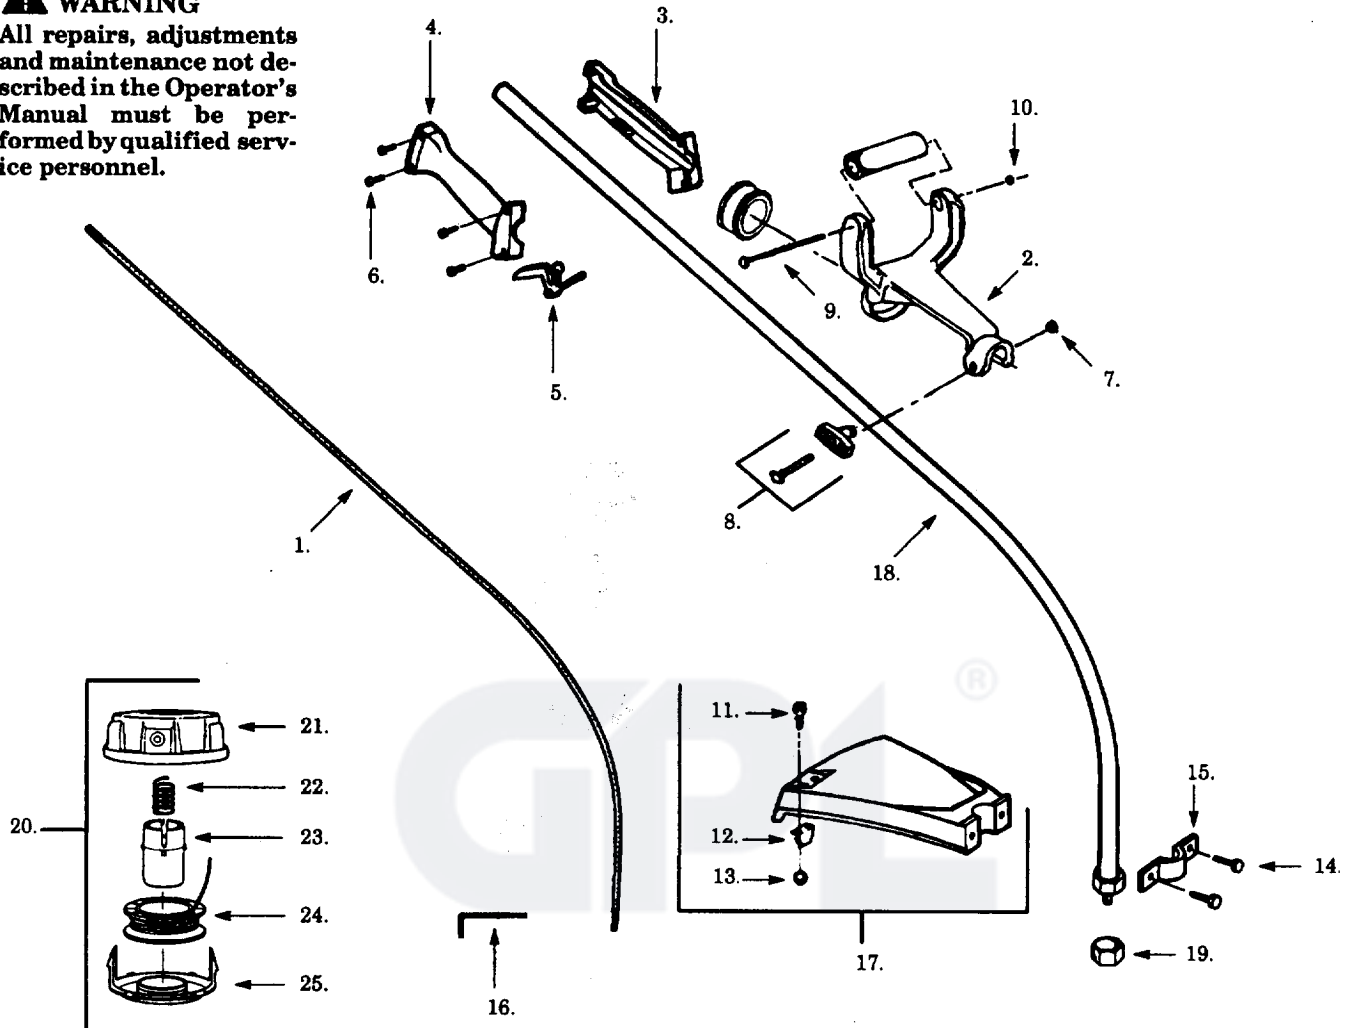


Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530 09 45-51	Drive Shaft	14.	530 09 22-43	Screw
2.	530 01 09-58	Antivibe Handle Ass'y.	15.	530 09 36-53	Bracket Shield
3.	530 03 65-14	Throttle Hsg. (Left)	16.	502 71 36-05	Hex Wrench
4.	530 03 65-15	Throttle Hsg. (Right)	17.	530 06 92-49	Shield Kit Ass'y.
5.	530 03 65-56	Throttle Lever	18.	530 09 51-48	Drive Shaft Hsg.
6.	530 01 59-66	Screw	19.	530 09 45-43	Dust Cup
7.	530 01 51-97	Nut	20.	952 71 55-40	Cutting Head Ass'y. (Incl. 21-25)
8.	530 06 92-52	"T" Handle	21.	530 09 48-78	Hub Ass'y.
9.	530 01 57-84	Screw	22.	530 09 48-30	Spring
10.	530 01 57-85	Locknut	23.	530 09 48-27	Release Button
11.	530 01 53-37	Screw	24.	952 71 55-44	Spool w/Line
12.	530 09 45-70	Line Limiter	25.	530 09 48-28	Cover
13.	530 00 15-43	Locknut			

Model GT22L GT24L

Type I – Type II

Carburetor Assembly Part Number #530 03 53-29 -WT-245
#530 03 -53-50 -WT-299

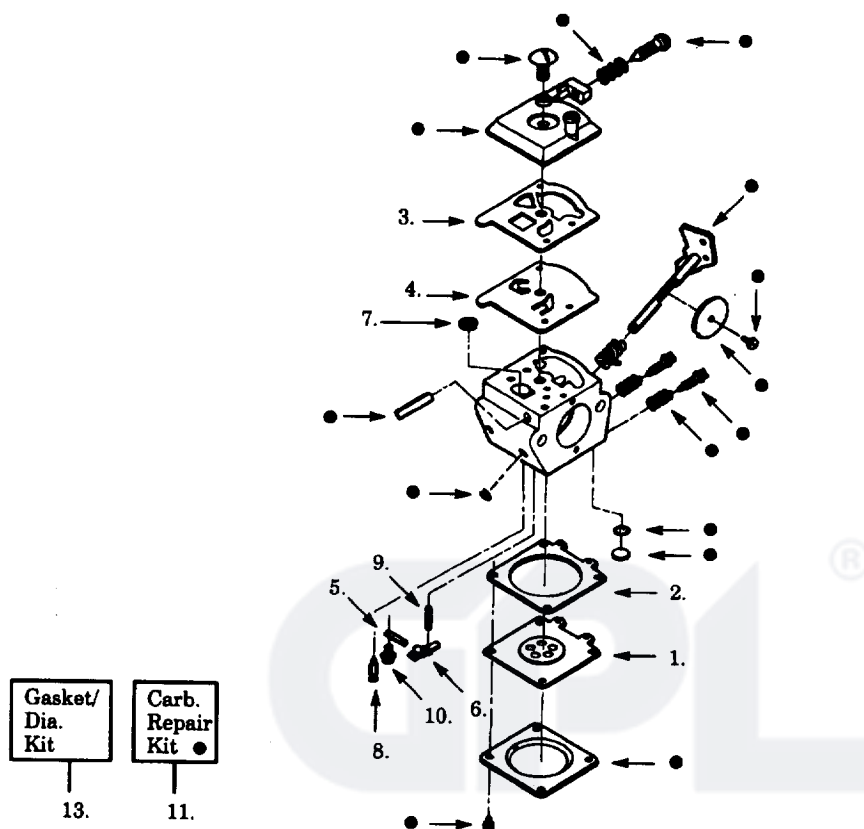

Ref.	Part No.	Description
1.	504 13 08-08	Metering Diaphragm
2.	530 03 53-32	Metering Diaphragm Gasket
3.	504 13 09-06	Pump Gasket
4.	504 13 08-07	Pump Diaphragm
5.	505 52 01-25	Metering Pin
6.	505 52 01-27	Metering Lever
7.	530 03 51-78	Fuel Inlet Screen
8.	503 11 70-01	Inlet Needle Valve
9.	530 03 73-30	Metering Lever Spring
10.	530 03 50-16	Metering Lever Pin Screw
11.	530 06 94-60	Carburetor Repair Kit
12.	530 03 52-11	Circuit Plate Gasket
13.	503 06 94-62	Gasket/Diaphragm Kit