


REPAIR PARTS MANUAL MODEL NUMBER **SB240** (MFG. ID. NO. 96191000500) Snow Thrower

PARTIER

AUGER HOUSING / IMPELLER ASSEMBLY

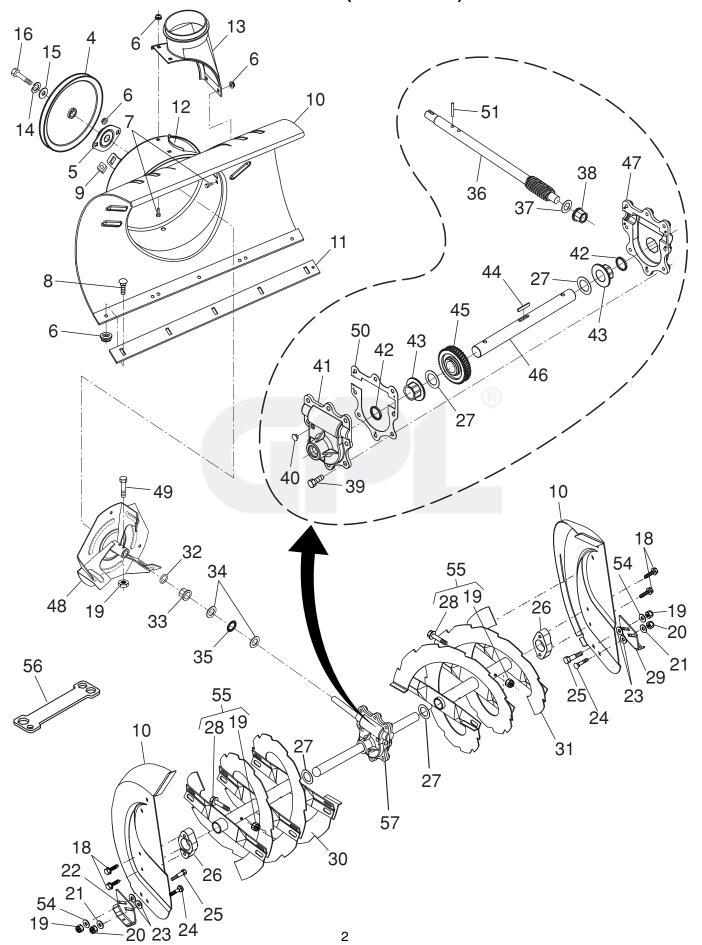


AUGER HOUSING / IMPELLER ASSEMBLY

SNOW THROWER - - MODEL NO. **SB240** (96191000500) PRODUCT NO. 961 91 00-05

KEY NO.	PART NO.	DESCRIPTION		
4	532 19 10-79	Pulley, Impeller		
5	532 18 89-09	Bearing Assembly, Flange		
6	532 15 53-77	• •		
7	532 18 03-55	Bolt, Flat Head, Carriage 5/16-18 x 5/8		
8	872 27 05-05	Bolt, Carriage 5/16-1 8 x 5/8		
9	532 17 88-20	Nut, Cage 3/8-16		
10	532 18 45-09	Housing, Auger		
11	532 18 40-96	Bar, Scraper		
12	532 18 40-95	Bracket, Corner Discharge		
13	532 17 53-22	·		
14	819 11 15-07	Washer, Flat		
15 16	810 04 05-00 874 95 05-12	Washer, Lock 5/16 Screw, Hex Head 5/16-18 x 3/4		
18	532 17 95-82	Screw, Hex Head 5/16 x 1		
19	873 80 04-00	Nut, Hex Lock 1/4-20		
20	873 80 05-00	Nut, Hex Lock 5/16-18		
21	532 15 54-15	Washer, Flat 5/16		
22	532 18 40-94	Skid Plate, RH		
23	532 17 92-46	Washer, Nylon, Friction		
24	872 27 05-06	Bolt, Carriage 5/16-18 x 3/4		
25	532 18 56-00	Bolt, Shoulder 1/4-20		
26	532 17 46-58	Bearing, Auger		
27	532 17 46-97			
28	532 19 20-90	Bolt, Shear		
29	532 18 40-93	Skid Plate, LH		
30	532 19 94-74	Auger Assembly, RH		
31	532 19 94-73	•		
32	532 17 46-99	O-Ring		
33 34	532 17 47-00 532 17 46-81	Bushing, Flange 3/4 Washer, Thrust 3/4		
35	532 17 46-84	Bearing, Thrust 3/4		
36	532 17 46-60	Shaft, Impeller		
37	532 17 46-83	Washer, Thrust 5/8		
38	532 17 46-86	Bushing, Flange 5/8		
39	532 15 00-78	Screw, Hex Head 5/16-18 x 3/4		
40	532 08 64-47	Plug, Case		
41		Housing, Gearbox, RH		
42	532 17 46-98			
43		Bushing, Flange, 1"		
44		Key, Square 1/4 x 1/4 x 7/8		
45	532 17 46-59			
46	532 17 46-57			
47	532 17 46-87			
48	532 18 41-05	·		
49 50		Screw, Hex Head 1/4-20 x 1-5/8		
50 51	532 17 53-11 532 18 42-05	Gasket, Gearbox Pin, Roll 3/16 x 1-1/8		
		Washer, Flat 1/4		
		Kit, Shear (Contains 6 each of Key Numbers 19 and 28)		
	532 18 06-84			
57		Gearbox Assembly		

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your unit and void your warranty.


CONTROL PANEL / DISCHARGE CHUTE

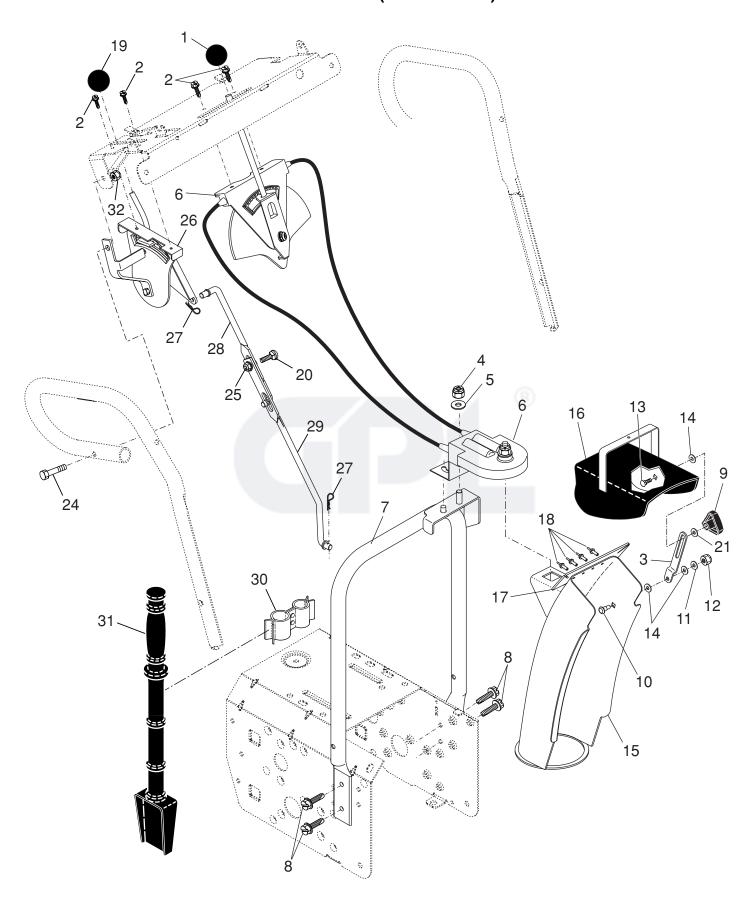

CONTROL PANEL / DISCHARGE CHUTE

KEY NO.	PART NO.	DESCRIPTION
1	532 18 33-34	Knob, Lever
2	817 50 10-10	Screw #10-24 x 5/8
3	532 18 41-14	Strap, Slotted
4	873 80 06-00	Nut, Lock 3/8-16
5	819 13 13-16	Washer, Flat 3/8
6	532 17 86-59	Control Assembly, Chute Rotater
7	532 18 40-89	Support, Pivot
8	532 15 00-78	Screw, Hex Head 5/16-18 x 3/4
9	532 18 04-53	Knob, Deflector
10 11	532 18 56-00 532 05 38-47	Bolt, Shoulder Washer, Flat 1/4
12	873 80 04-00	Nut, Lock 1/4-20
13	872 27 05-05	Bolt, Carriage 5/16-18 x 5/8
14	532 17 92-46	Washer, Nylon
15	532 18 45-10	Chute Assembly
16	532 18 45-11	Deflector Assembly
17	532 17 91-45	Seal, Deflector
18	532 12 84-15	Rivet, Blind
19	532 18 33-33	Knob, Speed Control Lever
20	872 27 05-06	Bolt, Carriage 5/16-18 x 3/4
21	532 15 54-15	Washer, Flat
24	874 78 05-28	Screw, Hex Head 5/16-18 x 1-3/4
25	532 15 53-77	Nut, Lock 5/16-18
26	532 19 88-75	Lever Assembly, Speed Control
27	532 16 96-75	Retainer, Hairpin
28	532 18 04-45	Rod, Upper, Speed Control
29	532 18 77-16	Rod, Lower, Speed Control
30	532 19 27-10	Clamp, Clean-Out Tool
31	532 19 21-99	Tool, Clean-Out
32	873 80 05-00	Nut, Lock 5/16-18


REPAIR PARTS HANDLES

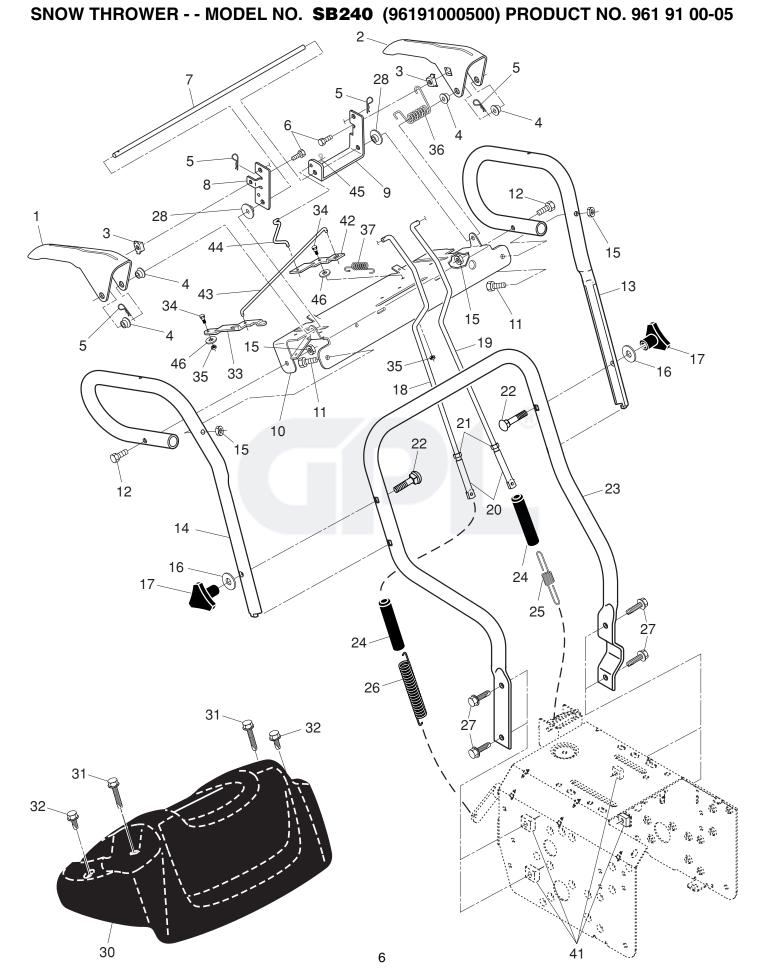

KEY NO.	PART NO.	DESCRIPTION
1	532 18 41-10	Lever, Auger Control, RH
2	532 18 41-09	Lever, Traction Drive Control, LH
3	532 17 94-39	Nut, Cage 1/4-20
4	532 17 88-88	Bushing, Flange
5	532 16 96-75	Retainer, Hairpin
6	532 18 04-02	Screw, Hex Head 1/4-20 x 3/4
7	532 17 86-52	Rod, Interlock
8	532 19 95-76	Arm, Impeller Rod
9	532 19 95-75	Arm, Traction Rod
10	532 19 95-31	Panel, Control
11	874 78 05-24	Screw, Hex Head 5/16-18 x 1-1/2
12	874 78 05-28	Screw, Hex Head 5/16-18 x 1-3/4
13	532 18 41-07	Handle Tube, LH
14	532 18 41-08	Handle Tube, RH
15	873 80 05-00	Nut, Lock 5/16-18
16	819 13 13-16	Washer, Flat 3/8
17	532 17 88-99	Knob, Handle
18	532 18 45-94	Rod, Auger Control
19	532 19 30-81	Rod, Traction Control
20	532 18 04-28	End, Control Rod
21	873 35 05-00	Nut, Hex, Jam 5/16-18
22 23	872 12 06-18	Bolt, Carriage 3/8-16 x 2-1/4 Handle Tube, Lower
23 24	532 18 40-87 532 18 04-47	Sleeve, Spring
25	532 18 09-26	Spring, Traction Drive
26	532 17 86-69	Spring, Auger Control
27	871 21 06-16	Screw, Hex Head 3/8-16 x 1
28	532 17 53-31	Bushing, Pivot
30	532 18 33-52	Console, Panel
31	532 17 52-62	Screw, Hex Head, Tapping #10-24 x 1-1/4
32	532 18 44-71	Screw, Hex Head, Tapping #10-24 x 1/2
33	532 19 95-77	Latch, Interlock
34	532 18 35-18	Bolt, Shoulder
35	532 06 80-38	Nut, Lock 1/4-20
36	532 17 88-31	Spring, Torsion
37	532 19 38-85	Spring, Interlock
41	532 17 88-90	Nut, Cage 3/8-16
42	532 19 95-78	Lever, Interlock
43	532 19 63-37	Rod, Latch, Interlock
44	532 19 63-38	Rod, Arm, Interlock
45	532 70 02-79	Clip
46	532 17 92-46	Washer, Friction


REPAIR PARTS

DRIVE
SNOW THROWER - - MODEL NO. **SB240** (96191000500) PRODUCT NO. 961 91 00-05

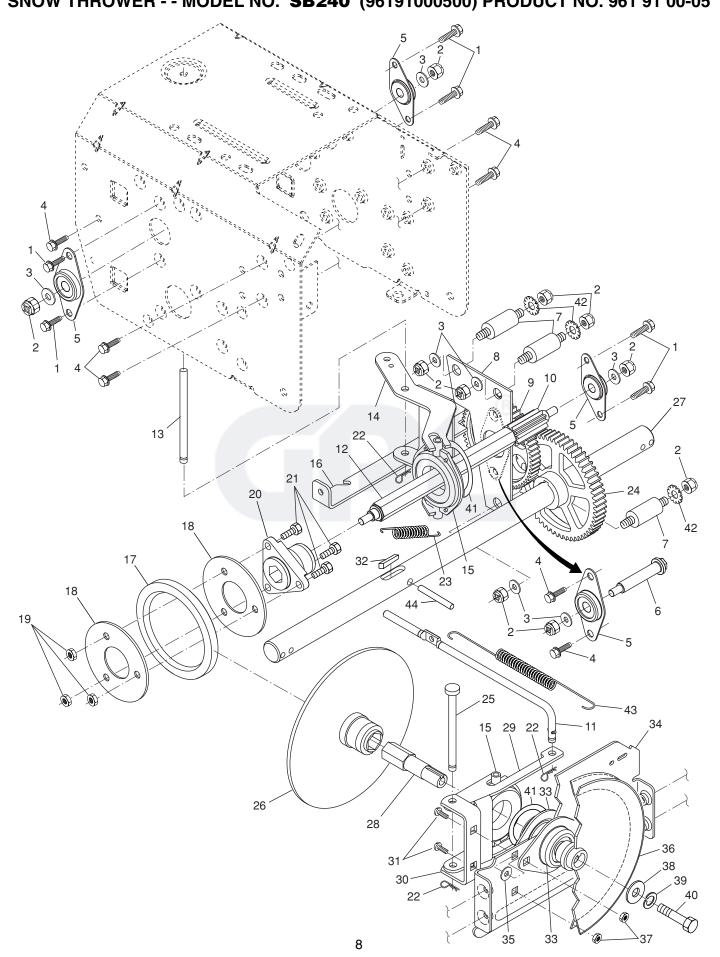

KEY NO.	PART NO.	DESCRIPTION
1	532 14 63-15	Screw, Hex Head 5/16-18 x 3/4
2	873 80 05-00	Nut, Lock 5/16-18
3 4	532 15 54-15 817 49 05-08	Washer, Flat Screw, Hex Head 5/16-18 x 1/2
5	532 18 00-17	Bearing, Flange
6	532 18 01-34	Shaft, Auxiliary
7	532 17 92-70	Spacer, Plate
8	532 19 29-07	Plate, Auxiliary
9	532 18 00-82	Gear, Intermediate (12/58)
10	532 18 00-65	Gear, Pinion
11	532 18 77-14	Rod, Clutch
12 13	532 18 00-66 532 17 88-07	Shaft, Long, Hex Pin, Pivot
14	532 18 40-80	Lever, Shifter / Wheel
15	532 17 53-44	Trunnion Bearing Assembly
16	532 18 78-57	Bracket, Pivot, Shift
17	532 17 98-31	Ring, Rubber Wheel
18	532 19 95-09	Plate, Rubber Wheel
19	873 93 05-00	Nut, Lock 5/16-18
20 21	532 17 86-13 874 76 05-14	Hub, Rubber Wheel Screw, Hex Head 5/16-18 x 7/8
22	532 08 51-79	Retainer, Hairpin
23	532 18 01-35	Spring, Bias
24	532 18 00-81	Gear, Axle (58 Teeth)
25	532 17 86-95	Pin, Pivot Lever
26	532 19 77-63	Plate Assembly, Drive
27	532 17 93-52	Shaft, Axle
28 29	532 19 77-64 532 18 40-77	Shaft, Short Hex Lever, Shifter Plate
30	532 18 40-76	Bracket, Shifter Support
31	872 27 05-05	Bolt, Carriage 5/16-18 x 5/8
32		Key, Square 1/4 x 1/4 x 7/8
33	532 18 89-09	Bearing, Flange
34	532 18 40-75	Plate, Drive Mounting
35	532 18 25-04	Spacer, Bearing
36 37	532 19 10-80 532 15 53-77	Pulley, Traction Drive
38	819 11 15-07	Nut, Lock 5/16-18 Washer, Flat
39	810 04 05-00	Washer, Lock 5/16
40	874 95 05-12	Screw, Hex Head 5/16-18 x 3/4
41	812 00 00-12	Ring, Retaining
42	811 05 05-00	Washer, Lock, External Tooth 5/16
43	532 17 90-95	Spring, Return
44	532 18 42-06	Pin, Roll


SNOW THROWER - - MODEL NO. **SB240** (96191000500) PRODUCT NO. 961 91 00-05

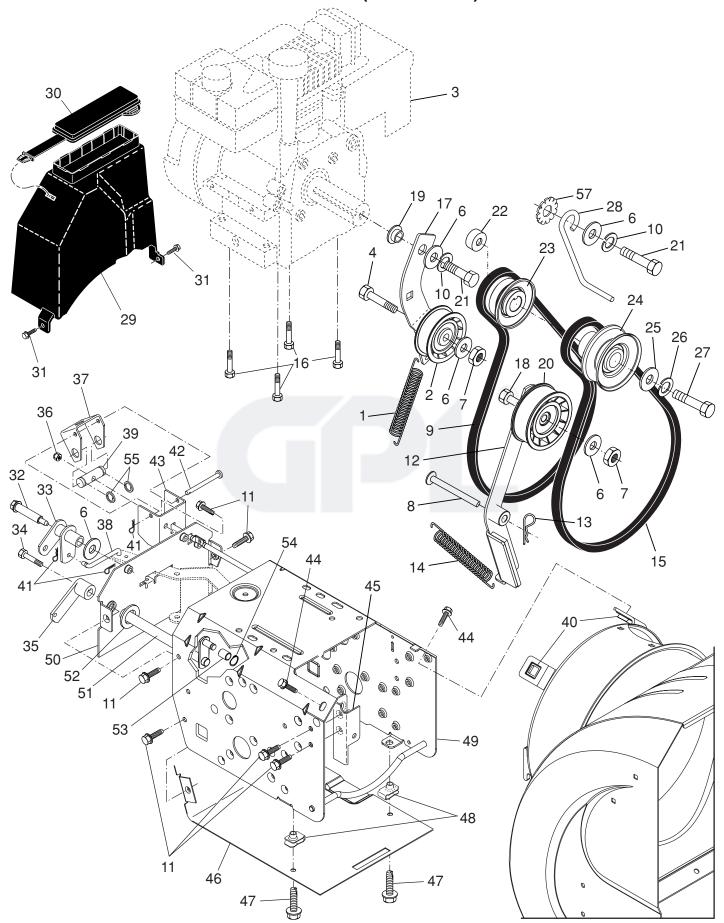


CHASSIS / ENGINE / PULLEYS

KEY	PART		KEY	PART	
NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION
1	532 18 10-44	Spring, Traction Idler	28	532 15 54-52	Guide, Belt
2	532 18 05-22	Pulley, Idler (2-1/4)	29	532 19 22-13	Belt Cover Assembly
3		Engine, Tecumseh,			(Includes Toolbox Cover)
		Model Number OH195SA (Order	30	532 17 88-30	Cover, Toolbox
		parts from Engine manufacturer)	31	817 49 04-08	Screw, Hex Head 1/4-20 x 1/2
4	874 78 05-20	Screw, Hex Head 5/16-18 x 1-1/4	32	532 17 92-56	Bolt, Shoulder 5/16-18
5	532 15 00-78	Screw, Hex Washer Head	33	532 18 78-53	Bellcrank Shifter
		5/16-18 x 3/4	34	532 18 04-01	Screw, Hex Head 1/4-28 x 3/4
6	532 05 92-89	Washer, Flat	35	532 19 57-67	Arm, Auger Control
7	873 93 05-00	Nut, Jam, Lock 5/16-18	36	873 80 05-00	Nut, Lock 5/16-18
8	532 17 53-30	Pin, Idler Pivot	37	532 18 40-86	Bellcrank
9	532 17 90-92	V-Belt, Traction Drive	38	532 18 17-01	Link, Speed Control
10	810 04 05-00	Washer, Lock 5/16	39	532 19 21-10	Trunnion, Pivot Bracket
11	817 49 05-08	Screw, Hex Head 5/16-18 x 1/2	40	532 17 88-20	Nut, Cage
12	532 17 92-59	Impeller Arm / Pad Assembly	41	532 70 02-79	Hairpin, Cotter 3/32 x 1/2
13	532 08 51-79	Retainer, Hairpin	42	532 17 90-65	Pin, Pivot Bracket
14	532 17 88-28	Spring, Brake	43	532 18 40-85	Bracket, Bellcrank
15	532 18 35-33	V-Belt, Impeller Drive	44	871 21 06-16	Screw, Hex Head
16	532 19 23-06	Screw, Hex Head 3/8-16 x 1-1/4	45	532 18 40-74	Bracket, Impeller Idler Arm
17	532 18 48-04	Arm, Idler	46	532 18 40-84	Pan, Frame Bottom
18	874 78 05-24	Screw, Hex Head 5/16-18 x 1-1/2	47	871 02 05-12	Screw, Hex Head 5/16-18 x 3/4
19	532 17 53-31	Bushing, Idler Pivot			Nut, Speed 5/16-18
20	532 18 05-23	Pulley, Idler (2-3/4)	49	532 18 45-07	Frame Assembly
21	874 61 05-16	Screw, Hex Head 5/16-18 x 1	50	532 18 83-69	Plate, Frame End
22	532 17 93-71	Spacer, Engine Pulley	51	532 19 95-14	Shaft, Auger Control
23	532 18 04-78	Pulley, Engine, Traction Drive	52	532 05 70-79	Washer, Hardened
24	532 17 91-57	Pulley, Engine, Impeller Drive	53	532 19 22-75	Roller
25	532 06 27-35		54	532 19 21-47	Ring, Crescent
26	532 85 02-63	Washer, Lock 3/8	55	812 00 00-02	E-Ring
27	532 85 10-84	Screw, Hex Head 3/8-24 x 1-3/8	57	811 05 05-00	Washer, Lock, External Tooth 5/16

REPAIR PARTS WHEELS / DECALS

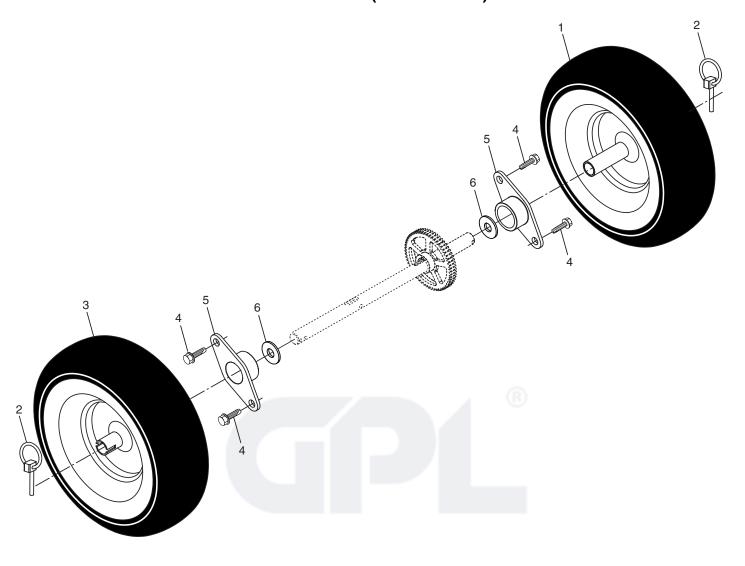

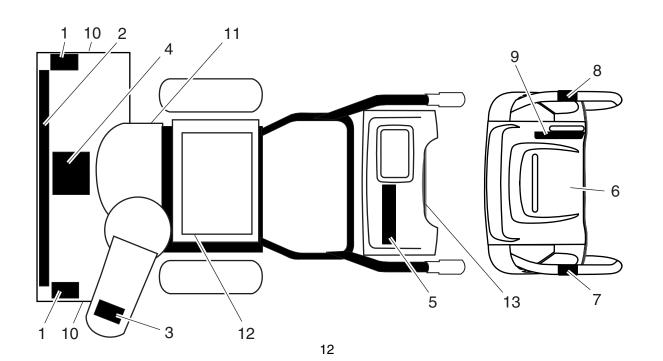

KEY NO.		DESCRIPTION
1	532 18 79-05	Wheel Assembly, 16", LH
2	532 15 54-43	Pin, Klik 1/4
3	532 18 79-04	Wheel Assembly, 16", RH
4	532 14 63-15	Screw, Hex Head 5/16-18 x 1/2
5	532 17 98-30	Bearing, Axle
6	532 17 46-97	Washer, Thrust, 1"

KEY NO.	PART NO.	DESCRIPTION
1	532 18 40-26	Decal, Danger
2	532 18 79-43	Decal, Partner
3	532 18 40-27	Decal, Danger, Deflector
4	532 18 40-45	Decal, Danger
5	532 18 79-42	Decal, Partner
6	532 18 40-30	Decal, Instruction
7	532 18 40-36	Decal, Traction Lever
8	532 18 40-35	Decal, Auger Lever
9	532 18 40-32	Decal, Speed Control
10	532 18 41-24	Decal, Height Adjust
11	532 18 40-28	Decal, Belt Guard
12	532 18 40-37	Decal, Fuel Shut-Off
13	532 18 04-33	Decal, Sound Level
	532 19 95-64	Operator's Manual, European
	532 19 95-65	Operator's Manual, Scandinavian
	532 19 95-67	Operator's Manual, East Bloc Euro
	532 19 95-66	Repair Parts Manual, English

SERVICE NOTES



SERVICE NOTES



LIMITED WARRANTY

The Manufacturer warrants to the original consumer purchaser that this product as manufactured is free from defects in materials and workmanship. For a period of two (2) years from date of purchase by the original consumer purchaser, we will repair or replace, at our option, without charge for parts or labor incurred in replacing parts, any part which we find to be defective due to materials or workmanship. This Warranty is subject to the following limitations and exclusions:

- This warranty does not apply to the engine. Please contact your nearest dealer where they will send the machine to the engine manufacturer.
- 2. Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by your dealer.
- 3. Battery Warranty: On products equipped with a Battery, we will replace, without charge to you, any battery which we find to be defective in manufacture, during the first ninety (90) days of ownership. After ninety (90) days, we will exchange the Battery, charging you 1/12 of the price of a new Battery for each full month from the date of the original sale. Battery must be maintained in accordance with the instructions furnished.
- The Warranty period for any products used for rental or commercial purposes is limited to 90 days from the date of original purchase.
- 5. This Warranty applies only to products which have been properly assembled, adjusted, operated, and maintained in accordance with the instructions furnished. This Warranty does not apply to any product which has been subjected to alteration, misuse, abuse, improper assembly or installation, delivery damage, or to normal wear of the product.
- 6. Exclusions: Excluded from this Warranty are belts, normal wear, normal adjustments, standard hardware and normal maintenance.
- 7. In case of any problem within the boundaries of this warranty, contact the nearest department store, indicate the model number, serial number and the date of purchase of your machine. This warranty does not apply to accidental damages. All implicit warranties are limited to the same time frames. Or contact:

E.M. Services 54 Rue Lambrechts 92400 Courbevoie France Telephone: (1) 46678078 Fax: (1) 46678095

THIS WARRANTY DOES NOT APPLY TO INCIDENTAL OR CONSEQUENTIAL DAMAGES. ANY IMPLIED WARRANTIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN.

