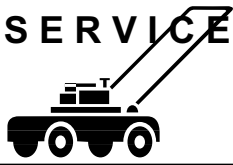


Accessories

		9
		I0100508

IPL, Snow Thrower, 2001-02, 106 24 65-62

T-40212, 531 02 06-04

Snow Thrower

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar

Replaces

Ersetzt

Remplace


Vervangt

Reemplaza

Ersätter


106 24 65-61




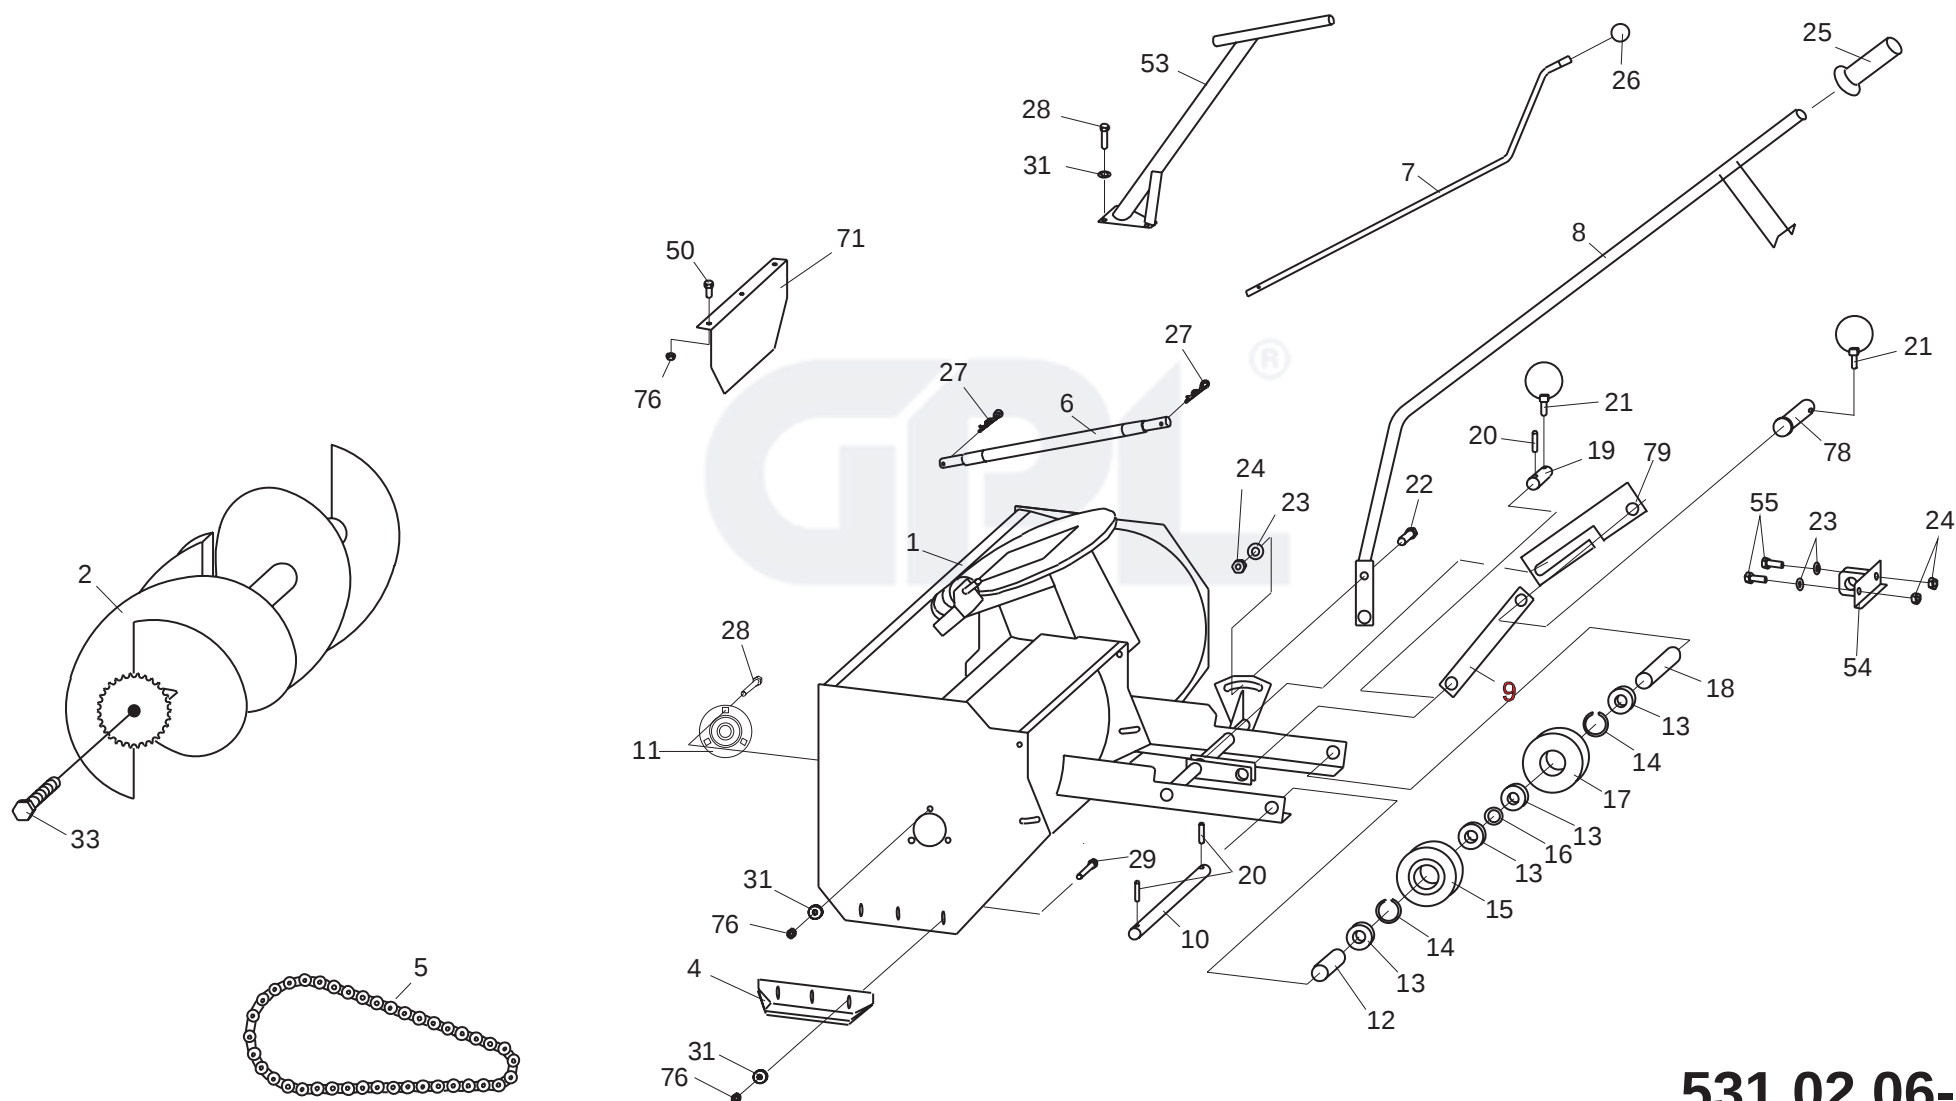

531 02 06-04

T-40212

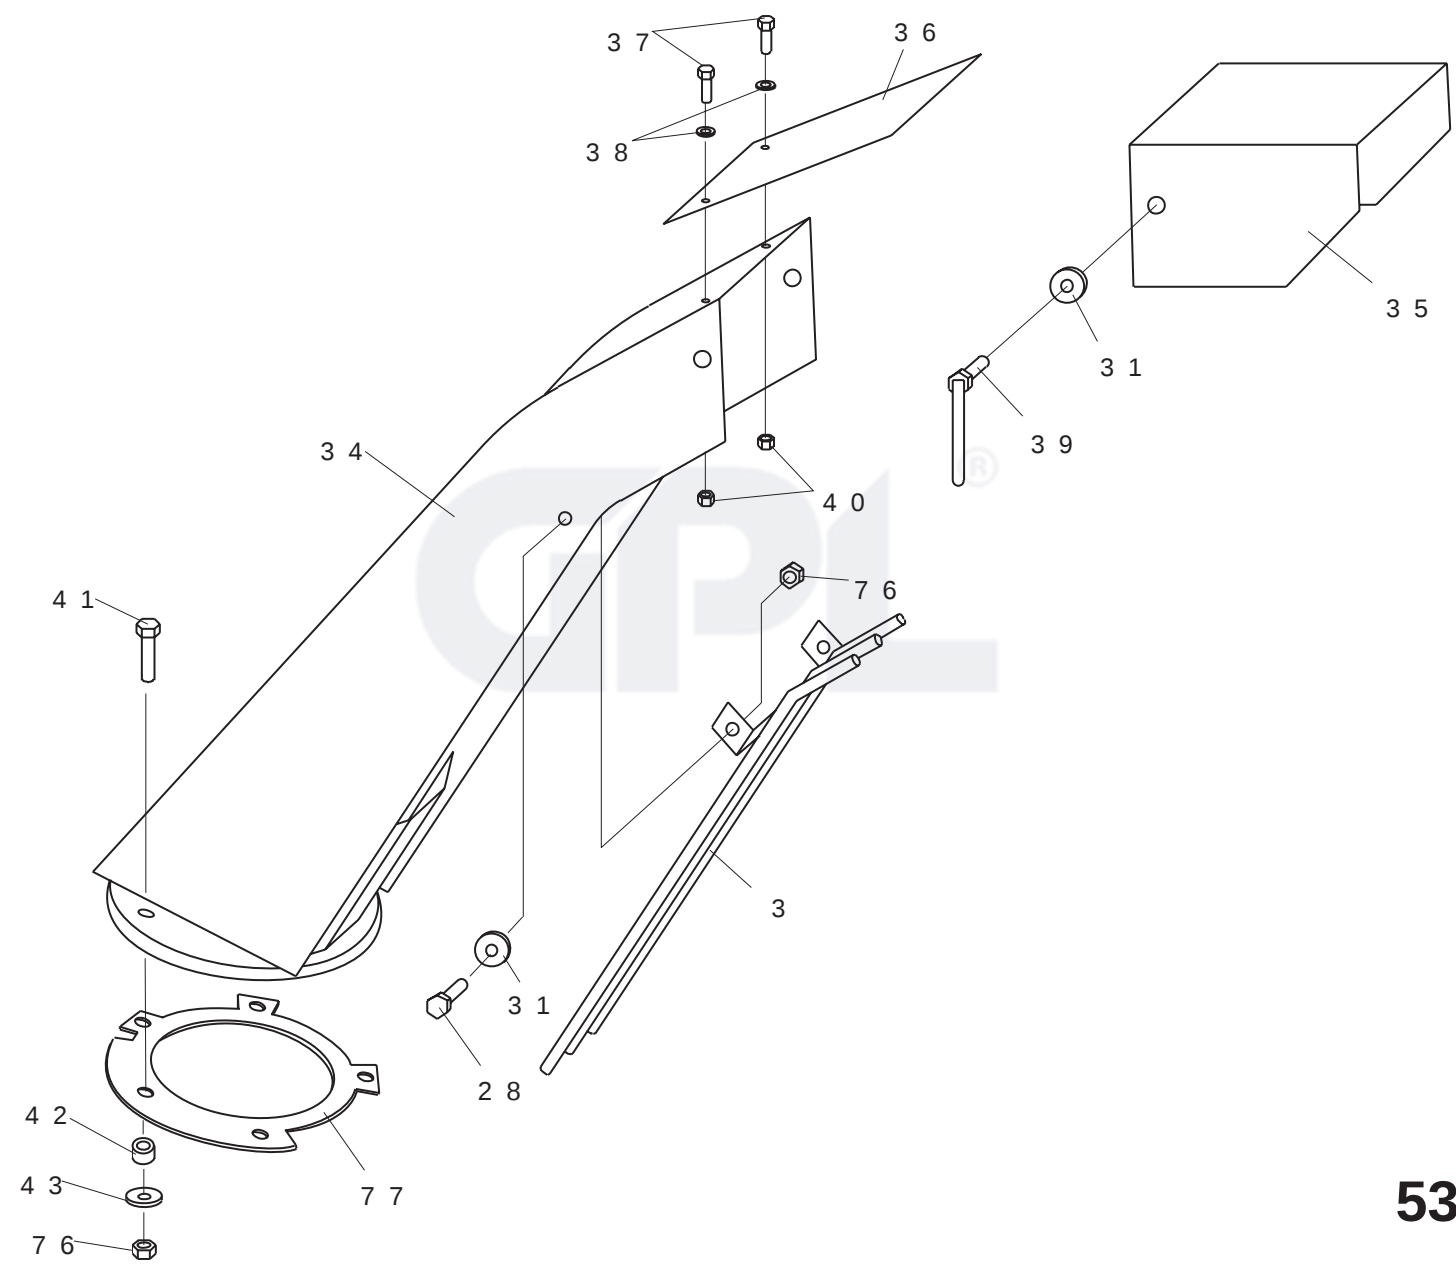


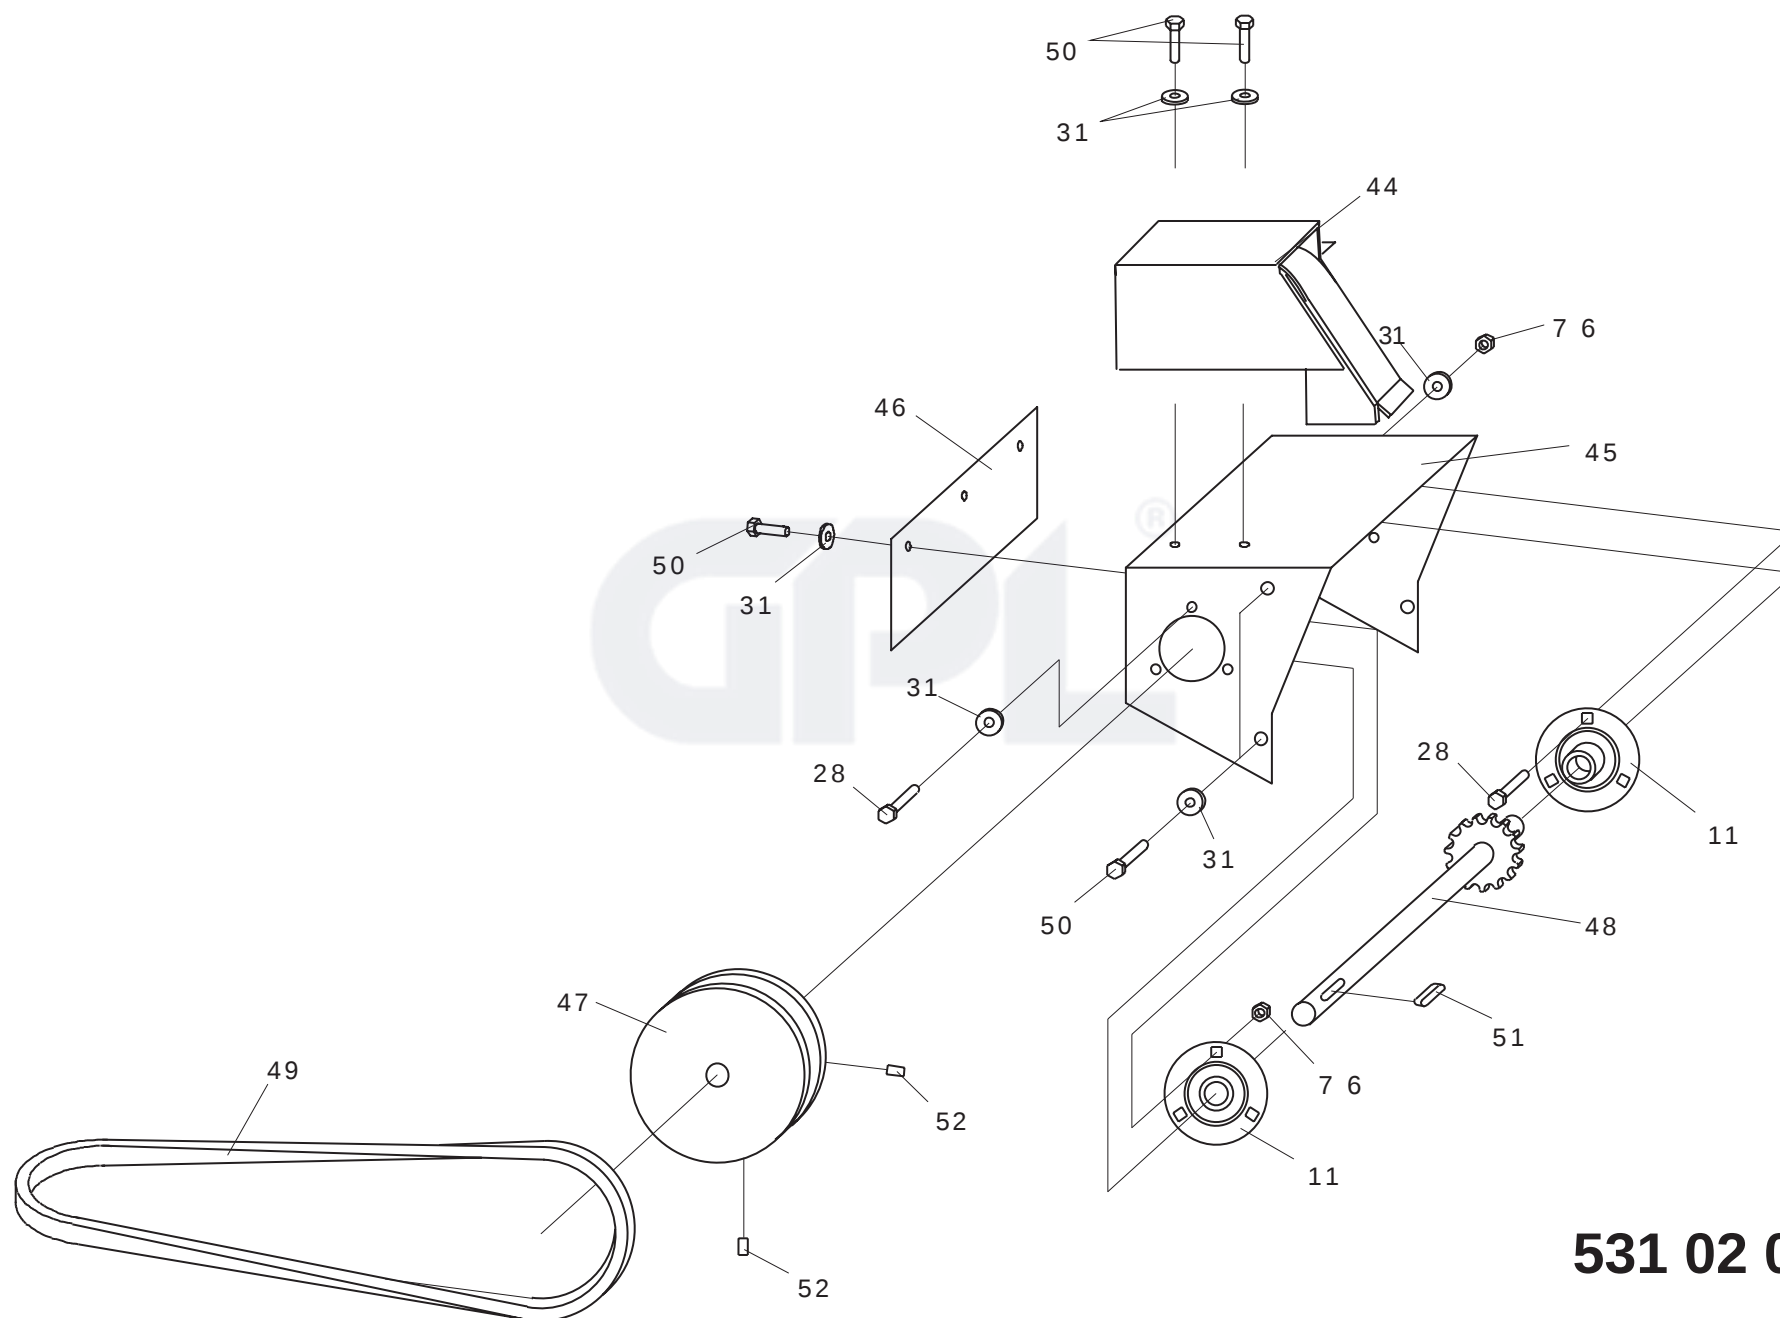


531 02 06-04

T-40212




B Clutch mounted on engine shaft,
electric or cable operated

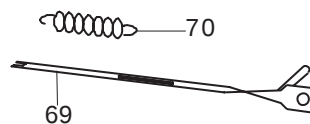

A Lever operated clutch

 

C Cable operated clutch,
cable attached to mower
deck

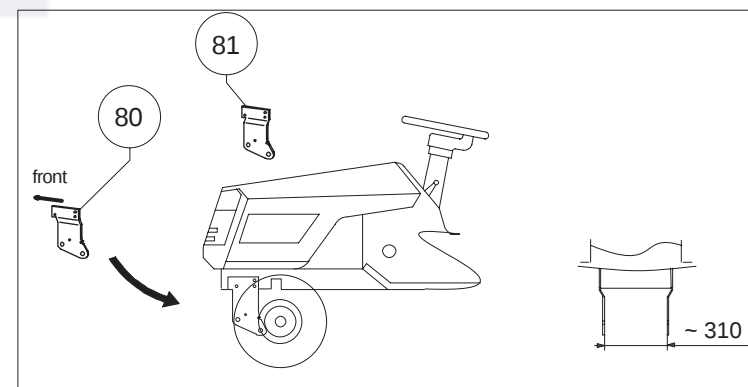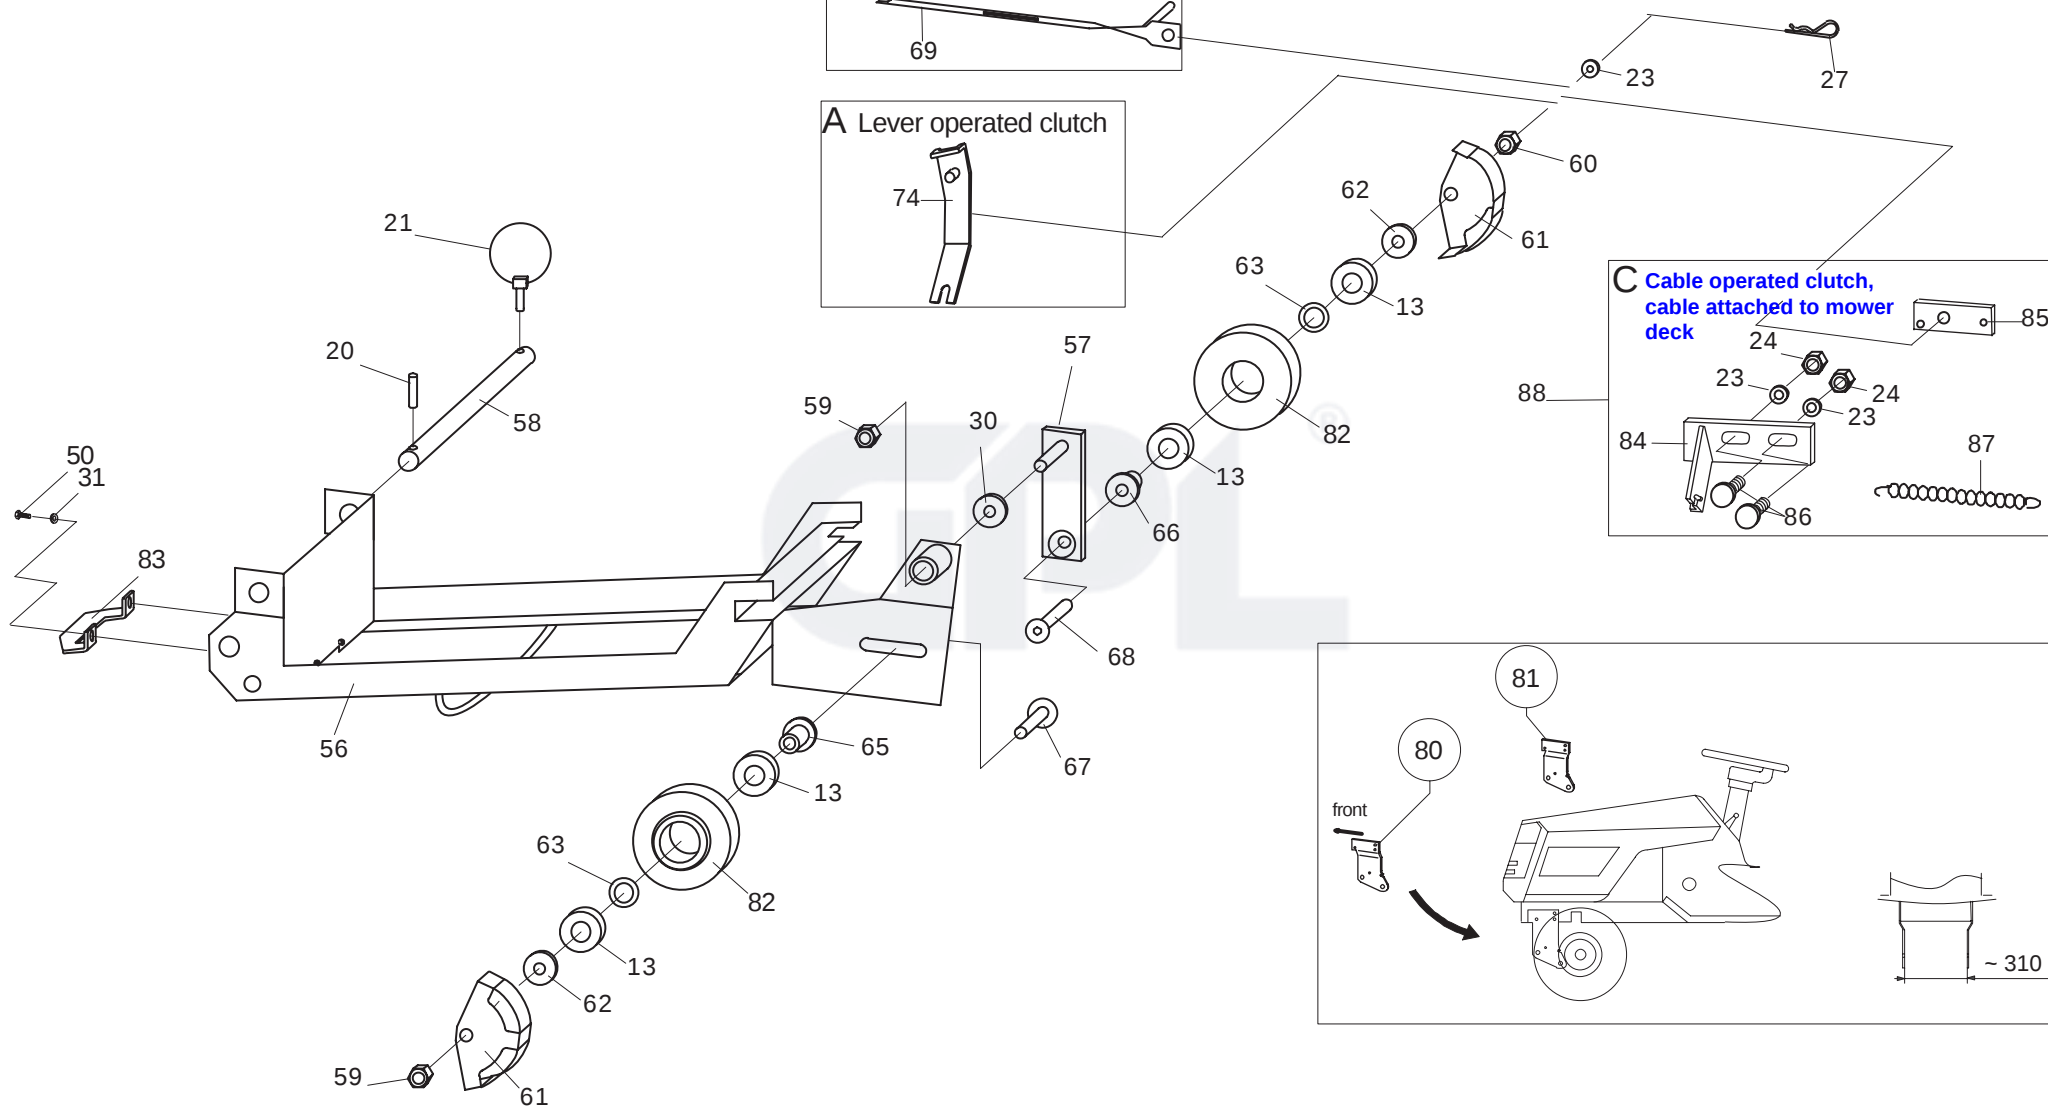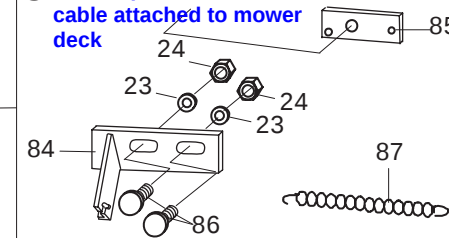

531 02 06-04

T-40212

531 02 06-04 Snow Thrower for tractors

Pos	Part number	Part name	Qty	Pos	Part number	Part name	Qty
1	531 02 11-01	Frame	1	55	531 02 11-28	Screw	2
2	531 02 11-02	Weldment, Spiral	1	56		Frame	1
3	531 00 52-52	Guard	1	57	531 00 52-83	Support	1
4	531 00 52-53	Skid Plate	2	58	531 02 12-18	Pin	1
5	531 00 52-54	Drive Chain	1	59	531 02 11-48	Nut, Lock	2
6	531 00 52-55	Joint	1	60	531 02 11-42	Nut	1
7	531 00 52-56	Control Rod	1	61	531 00 52-85	Guide, Belt	2
8	531 02 11-25	Weldment, Lift	1	62	531 00 52-86	Collar	2
9	531 02 11-04	Weldment, Lift	1	63	531 00 52-87	Collar	2
10	531 00 52-21	Shaft	1	65	531 00 52-89	Collar	1
11	531 00 52-59	Bearing	4	66	531 00 52-90	Collar	1
12	531 00 52-60	Collar	1	67	531 00 52-91	Screw, Lock	1
13	531 02 11-38	Bearing	8	68	531 02 11-40	Screw	1
14	531 00 51-98	Circlip	2	69	531 00 52-80	Belt Tightener	1
15	531 02 11-39	Pulley	1	70	531 00 52-03	Spring	1
16	531 00 51-97	Collar	1	71	531 00 52-93	Plate	1
17	531 00 52-62	Pulley	1	74	531 02 11-12	Lever	1
18	531 00 52-63	Collar	1	76	531 02 12-19	Nut, Lock	28
19	531 00 51-92	Shaft	1	77	531 02 11-13	Slide Ring	1
20	531 00 52-16	Pin, Spring	5	78	531 02 12-20	Pin	1
21	531 00 52-17	Pin Set	3	79	531 02 11-81	Limiter Plate	1
22	531 02 11-27	Screw	1	80	531 02 11-82	Side Plate, Left	1
23	531 02 11-37	Washer	6	81	531 02 11-83	Side Plate, Right	1
24	531 02 11-30	Nut, Lock	5	82	531 00 52-61	Pulley	2
25	531 00 51-41	Grip	1	83	531 02 12-23	Support	1
26	531 00 52-64	Grip	1	84	531 02 12-45	Mounting Plate	1
27	531 00 51-43	Pin, Spring	3	85	531 02 12-46	Mounting Plate	1
28	531 02 11-46	Screw	17	86	531 02 11-72	Screw (carriage bolt	2
29	531 00 52-66	Screw, Lock	6	87	531 02 12-68	Spring	1
30	531 00 52-65	Collar	1	88	531 02 12-70	Kit for cable clutch	0
31	531 02 11-84	Washer	36				
33	531 02 11-95	Screw, Special	2				
34	531 00 52-67	Discharge Pipe	1				
35	531 00 52-68	Chute	1				
36	531 00 52-69	Rubber	1				
37	531 02 11-96	Screw	2				
38	531 02 11-97	Washer	2				
39	531 00 52-70	Screw, Special	2				
40	531 02 11-98	Nut, Lock	2				
41	531 02 11-99	Screw	5				
42	531 02 11-05	Collar	5				
43	531 02 12-16	Washer	5				
44	531 02 11-06	Belt Guard	1				
45	531 02 11-07	Weldment	1				
46	531 02 11-08	Guard	1				
47	531 00 52-75	Pulley	1				
48	531 02 11-09	Drive Shaft	1				
49	531 00 51-31	V-Belt	1				
50	531 02 11-44	Screw	14				
51	531 00 52-78	Key	1				
52	531 02 12-17	Set Screw	2				
53	531 00 52-79	Weldment	1				
54	531 02 11-10	Support, Lift	1				