

RT5


Spare parts
Ersatzteile
Pièces détachées
Reserve onderdelen
Repuestos
Reservdelar

GPL®

REPAIR PARTS

TILLER - - MODEL NUMBER RT5 (JRT5Q)

HANDLE ASSEMBLY

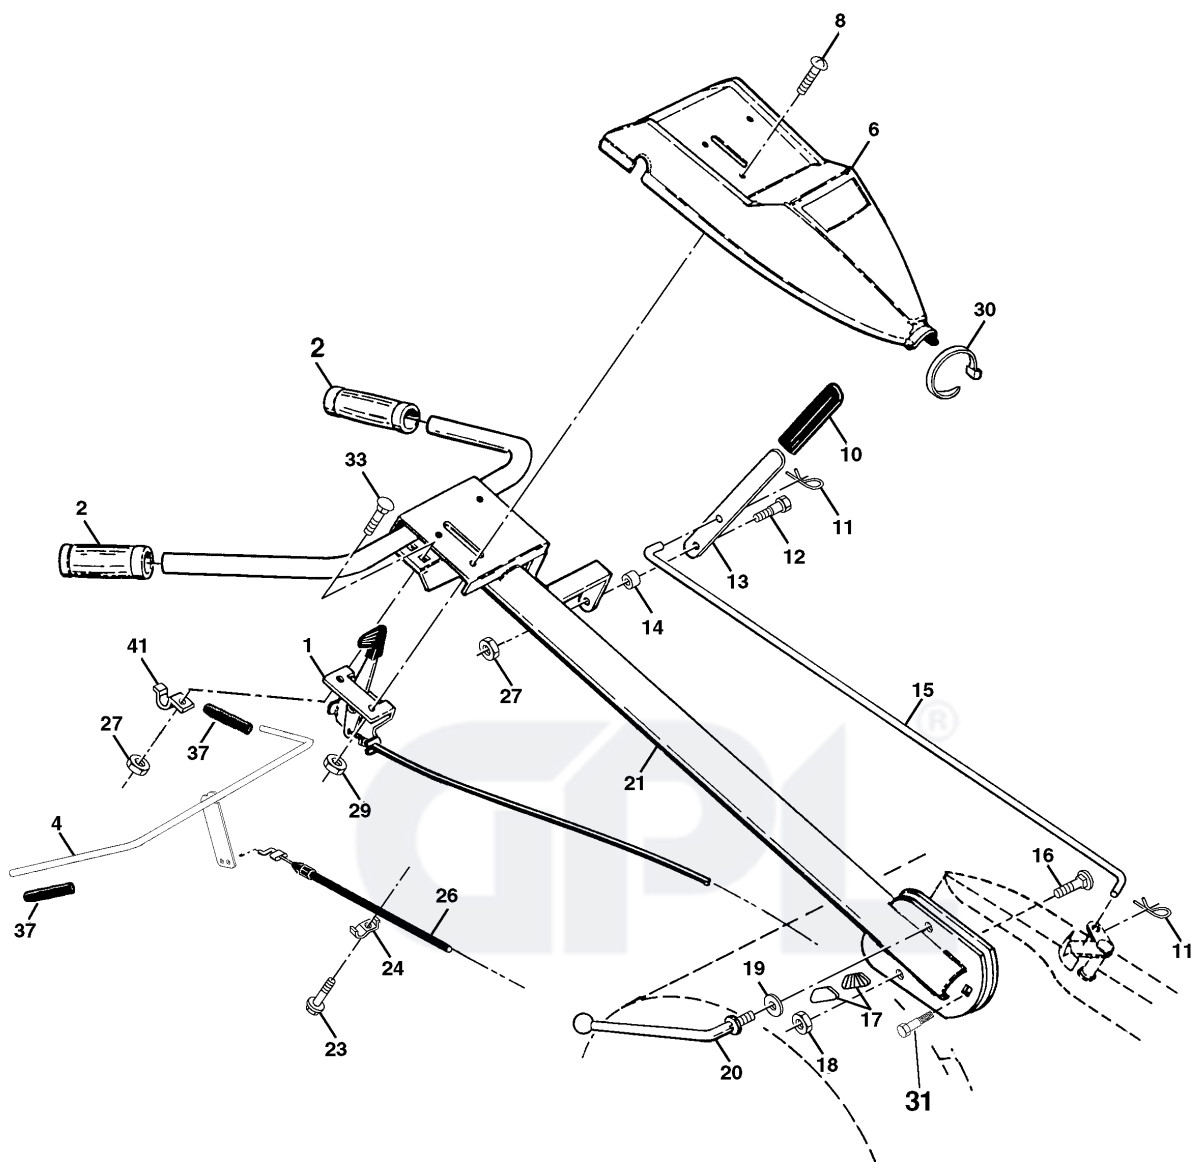


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532175250	Control, Throttle	20	532109228	Lever, Lock, Handle
2	532009266	Grip, Handle	21	532154106	Handle
4	532159228	Bar Assembly, Control	23	532086777	Screw Hex Wsh Slit #10-24 x .50
6	532126951	Panel, Control	24	532009484	Clip
8	871191008	Screw, Truss Hd. #10-24 UNC x 1/2	26	532159231	Cable, Clutch
10	532124797	Grip, Handle	27	873900400	Nut Hex Flange 1/4-20 UNC
11	532124788	Clip, Hairpin	29	873731000	Nut, Keps #10-24 UNC
12	532081328	Bolt, Shoulder	30	532104164	Tie, Cable
13	532109335	Handle, Shift	31	532150696	Bolt, Pivot
14	532109313	Grommet, Rubber	33	872140404	Bolt, Carriage 1/4-20 UNC x 1/2
15	532109337	Rod, Shift	37	532102604	Grip, Bar, Control
16	872110608	Bolt, Carriage 3/8-16 x 1 Gr. 5	41	532102744	Clamp, Bar, Control
17	532109229	Lock, Handle			
18	873680600	Nut Crownlock 3/8-16 UNC			
19	819131611	Washer 13/32 x 1 x 11 Ga.			

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

TILLER - - MODEL NUMBER RT5 (JRT5Q)

MAINFRAME, LEFT SIDE

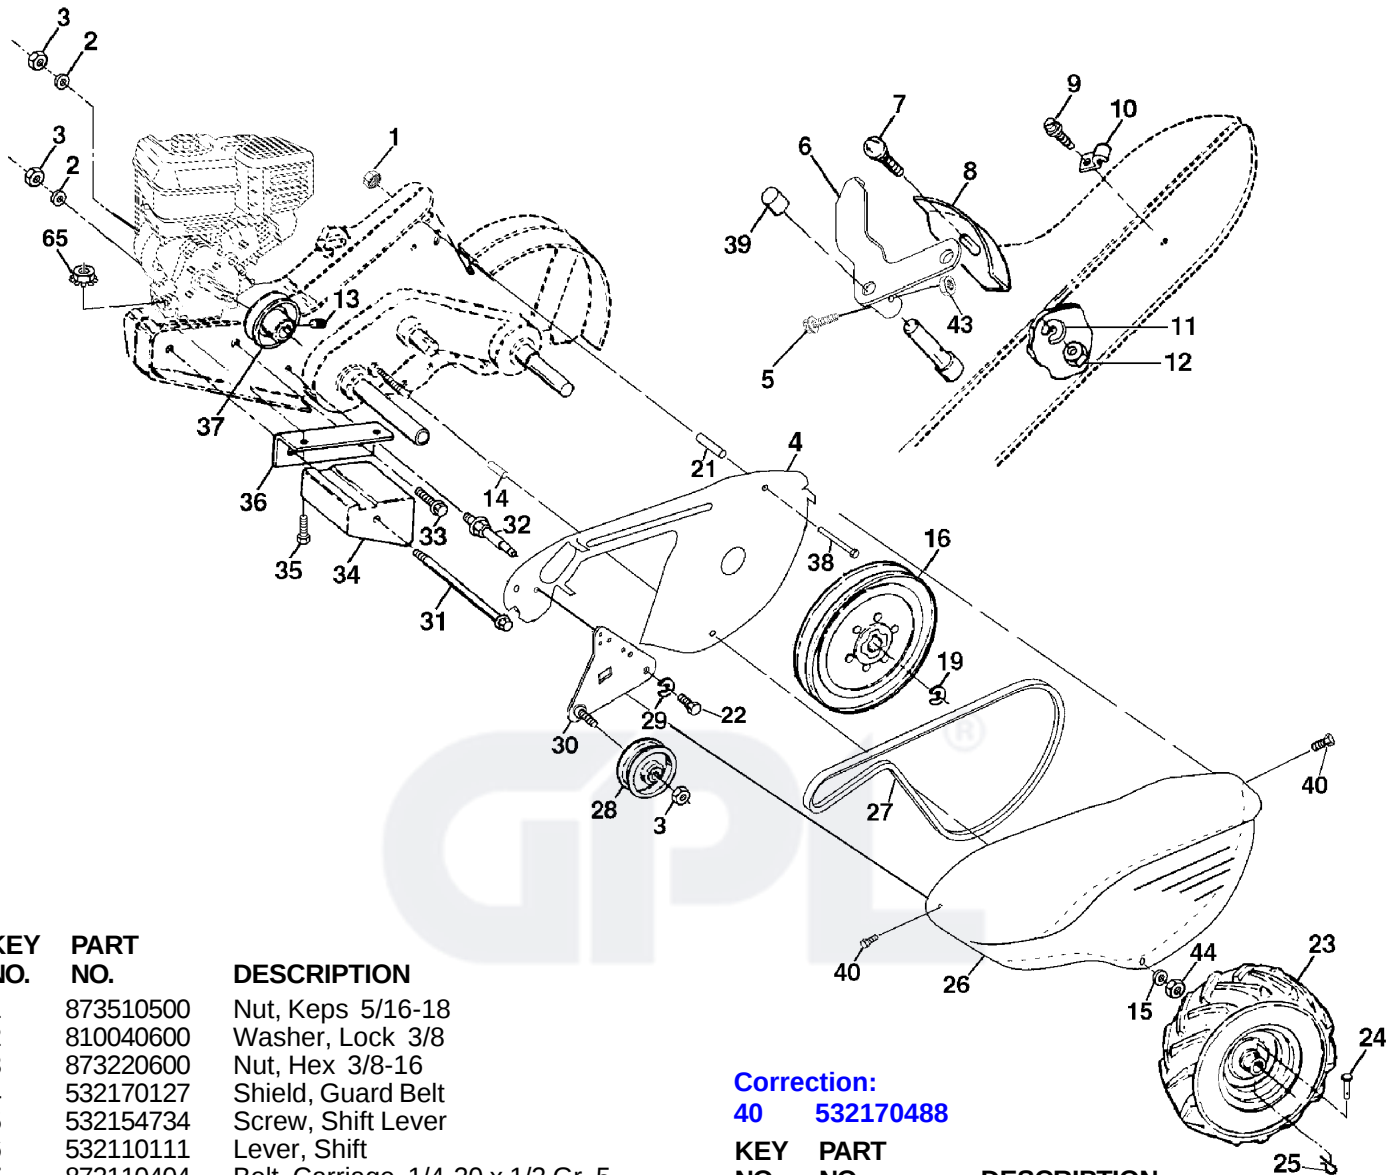

KEY NO.	PART NO.	DESCRIPTION
1	873510500	Nut, Keps 5/16-18
2	810040600	Washer, Lock 3/8
3	873220600	Nut, Hex 3/8-16
4	532170127	Shield, Guard Belt
5	532154734	Screw, Shift Lever
6	532110111	Lever, Shift
7	872110404	Bolt, Carriage 1/4-20 x 1/2 Gr. 5
8	532008700	Plate, Shift Indicator
9	532086777	Screw, Hex, Washer Head, Slotted #10-24 x 1/2
10	532009484	Clip
11	810040400	Washer, Lock 1/4
12	873220400	Nut, Hex 1/4-20
13	823230506	Screw, Set, Hex 5/16-18 x 3/8
14	532156117	Spacer, Split 0.327 x 0.42 x 1.220
15	819111116	Washer 11/32 x 11/16 x 16 Ga.
16	532145102	Sheave, Transmission
19	812000028	Ring, Retainer
21	532110652	Spacer, Split 0.327 x 0.42 x 2.09
22	874770508	Bolt, Fin Hex 5/16-24 x 1/2
23	532005015	Tire
	532124366	Rim
	532124718	Tire Valve
24	532126875	Rivet, Drilled
25	532124788	Clip, Hairpin

Correction:
40 532170488


KEY NO.	PART NO.	DESCRIPTION
26	532167488	Guard, Belt
27	532132801	Belt, V
28	532104679	Pulley, Idler
29	812000032	Ring, Klip
30	532159229	Bracket, Idler
31	532102384	Bolt, Hex 5/16-16 x 12
32	532102141	Shaft, Idler Arm
33	874760616	Bolt, Hex 3/8-16 x 1
34	532102383	Counterweight, L. H.
35	874760532	Bolt, Hex 5/16-18 x 2
36	532102331	Bracket, Reinforcement, L. H.
37	532130812	Sheave, Engine
38	874760544	Bolt, Fin Hex 5/16-18 x 2-3/4
39	532140062	Cap Plunger
40	532140788	Screw Hex Wsh Slt #10-24 x .50
43	532069180	Nut, Lock #10-24
44	873800400	Nut Lock 5/16-18 UNC
65	873970500	Nut Lock Hex Flange

NOTE: All component dimensions given in U.S. inches.
 1 inch = 25.4 mm

REPAIR PARTS

TILLER - - MODEL NUMBER RT5 (JRT5Q)

MAINFRAME, RIGHT SIDE

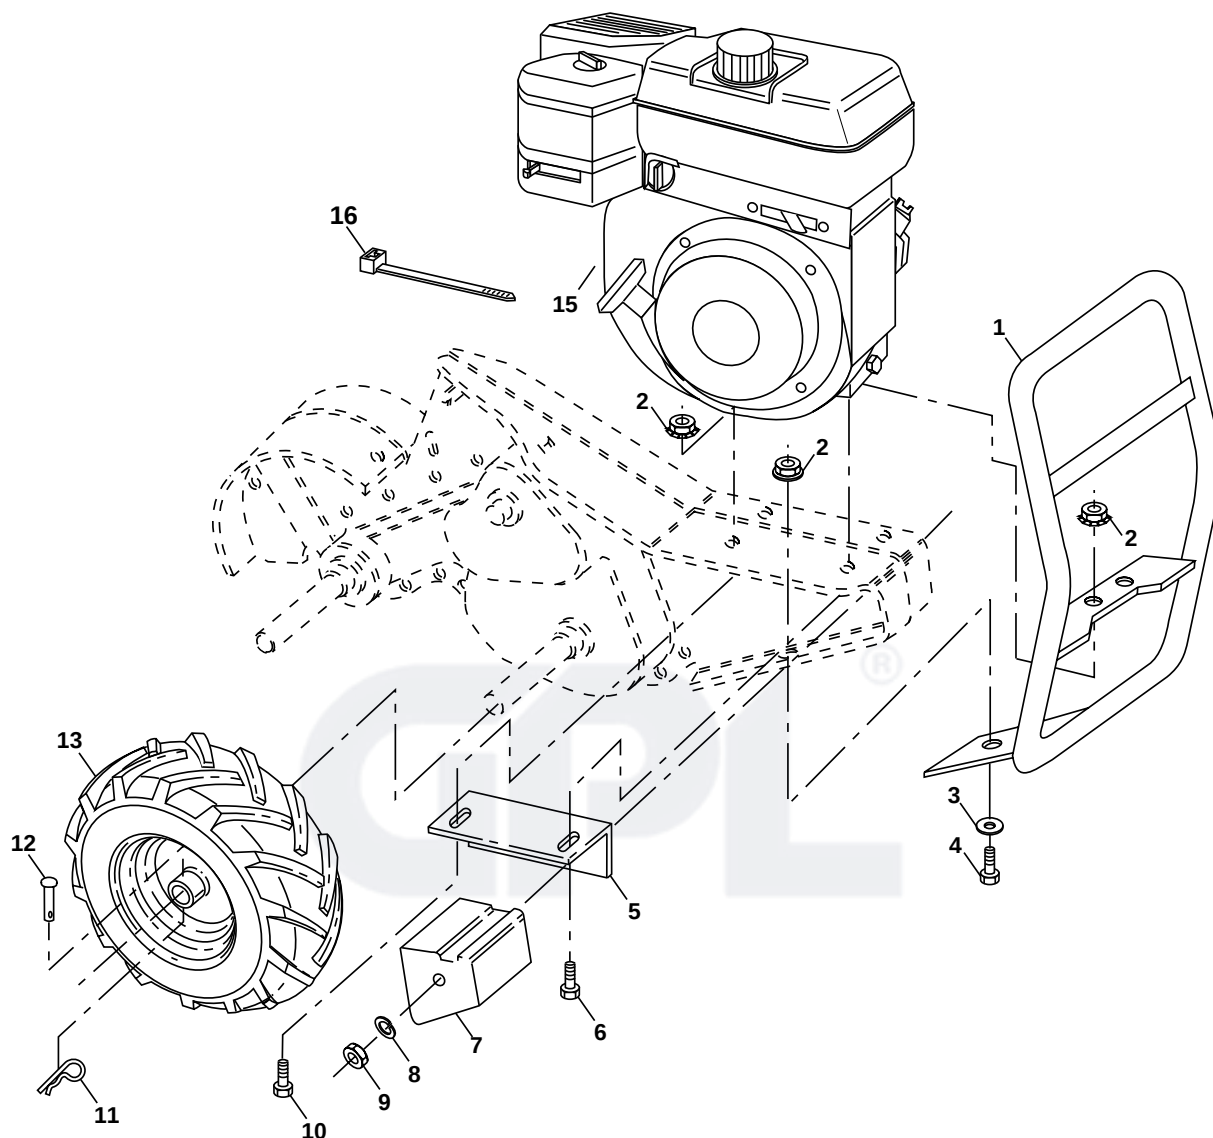

KEY NO.	PART NO.	DESCRIPTION
1	532166532	Bumper
2	873970500	Nut, Lock Hex Flange
3	819111116	Washer 11/32 x 11/16 x 16 Ga.
4	874760512	Bolt Hex Hd 5/16-18 x 3/4
5	532102332	Bracket, Reinforcement
6	874760532	Bolt, Hex 5/16-18 x 2
7	532102173	Counter Weight, R.H.
8	810040600	Washer, Lock 3/8
9	873220600	Nut, Hex 3/8-16
10	874760524	Bolt, Hex 5/16-18 x 1-1/2
11	532124788	Clip, Hairpin
12	532126875	Rivet, Drilled


KEY NO.	PART NO.	DESCRIPTION
13	532005015	Tire
	532124366	Rim
	532124718	Tire Valve
15	-----	Engine, Briggs & Stratton Model No. 110402 (Order parts from engine manufacturer)
16	532124756	Tie, Cable

NOTE: All component dimensions given in U.S.inches.
1 inch = 25.4 mm

REPAIR PARTS

TILLER - - MODEL NUMBER RT5 (JRT5Q)

TRANSMISSION

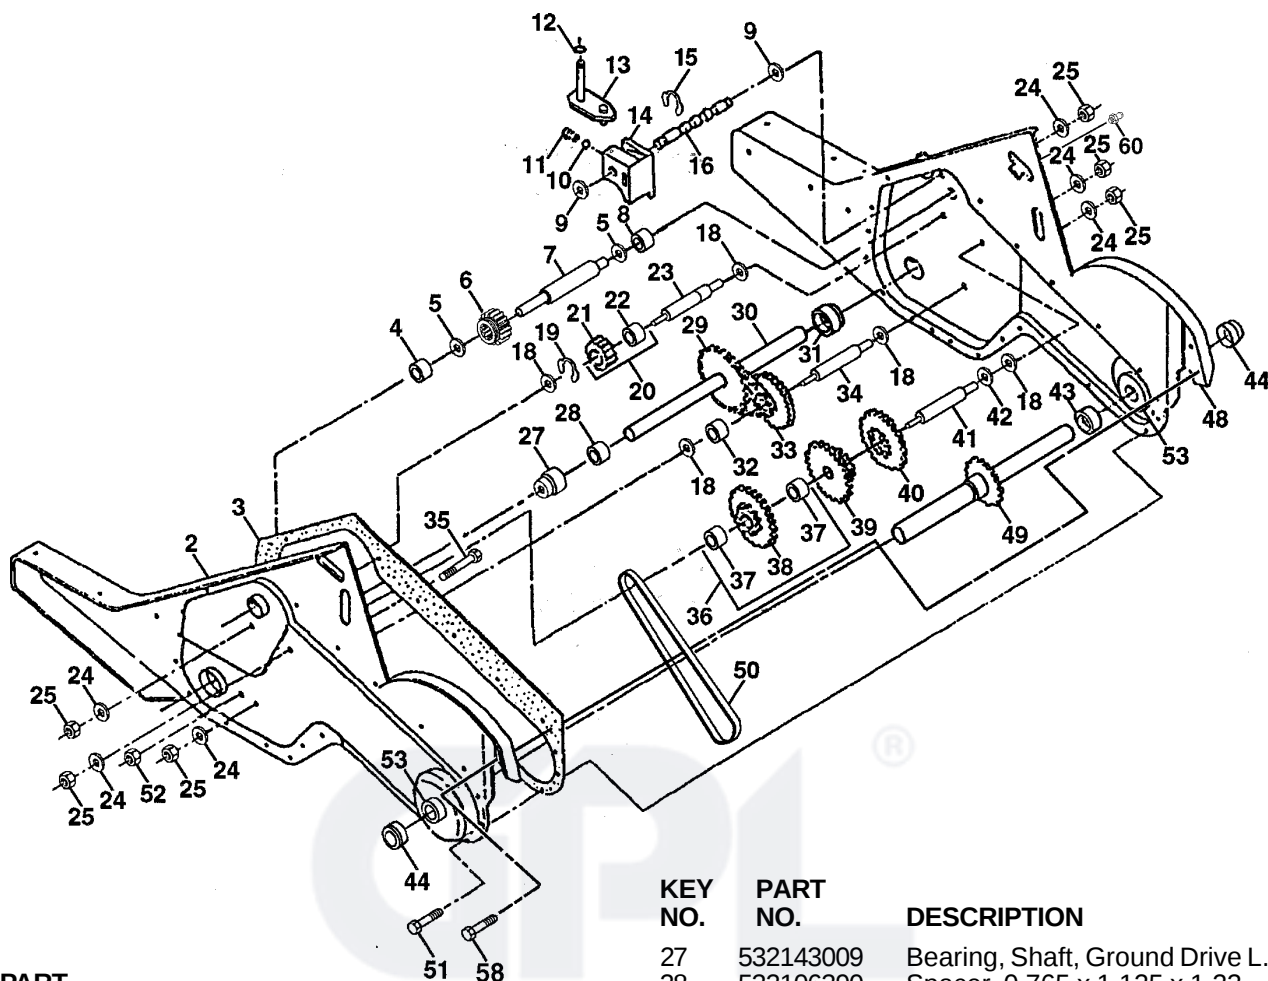


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532170337	Transmission Assembly (Includes Key Nos. 2-53)	27	532143009	Bearing, Shaft, Ground Drive L.H.
2	532165729	Gearcase, L.H. w/Bearing (Includes Key No. 4)	28	532106390	Spacer 0.765 x 1.125 x 1.23
3	532161963	Gasket, Gearcase	29	532102134	Chain #35-50 Pitch
4	532005020	Bearing, Needle	30	532150737	Ground Shaft Assembly
5	532001370	Washer, Thrust 5/8 x 1.10 x 1/32	31	532143008	Bearing, Shaft, Ground Drive R.H.
6	532137335	Pinion, Input	32	532106388	Spacer 0.70 x 1.00 x 1.150
7	532145101	Shaft, Input	33	532102121	Sprocket and Gear Assembly
8	532124792	Bearing, Needle	34	532102112	Shaft, Reduction (2nd)
9	532154467	Washer, Seal	35	532102101	Screw, Whiz, Lock 5/16-18 x 3-1/2
10	532124697	Ball, Steel	36	532154355	Sprocket Assembly w/Bearing (Includes Key Nos. 37 and 38)
11	532100371	Spring, Shift, Fork	37	532124791	Bearing, Needle
12	532106160	O-Ring	38	532154356	Sprocket, Tine
13	532142145	Bracket, Asm. Shift CRT	39	532105345	Gear, Cluster, Red 1st & 2nd
14	532008353	Fork, Shift	40	532105346	Gear, Reverse
15	812000039	Ring, Klip	41	532008358	Shaft, Reduction (1st)
16	532154466	Shaft, Shift	42	532004220	Washer, Thrust
18	532004358	Washer	43	532106146	Spacer 1.01 x 1.75 x 0.760
19	812000040	Ring, Klip	44	532155236	Seal, Asm Oil
20	532102114	Gear, Assembly, Reverse Idler (Includes Key Nos. 21 and 22)	48	532170338	Gearcase, R.H. w/Bearing (Includes Key No. 8)
21	532102115	Gear, Reverse Idler	49	532132688	Shaft, Tine
22	532006803	Bearing, Needle	50	532106147	Chain, Roller #50-50 Pitch
23	532102111	Shaft, Reverse Idler	51	817720408	Screw, Thd Cut 1/4-20 x 1/2
24	810040700	Washer, Lock 7/16	52	873220500	Nut, Hex 5/16-18
25	873610700	Nut, Hex 7/16-20	53	532165140	Kit Bearing
			54	817720412	Screw, Thd Cut 1/4-20 x 3/4
			60	532006855	Fitting Grease
			--	532006066	Grease, Plastilube #1

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

TILLER - - MODEL NUMBER RT5 (JRT5Q)

TINE SHIELD

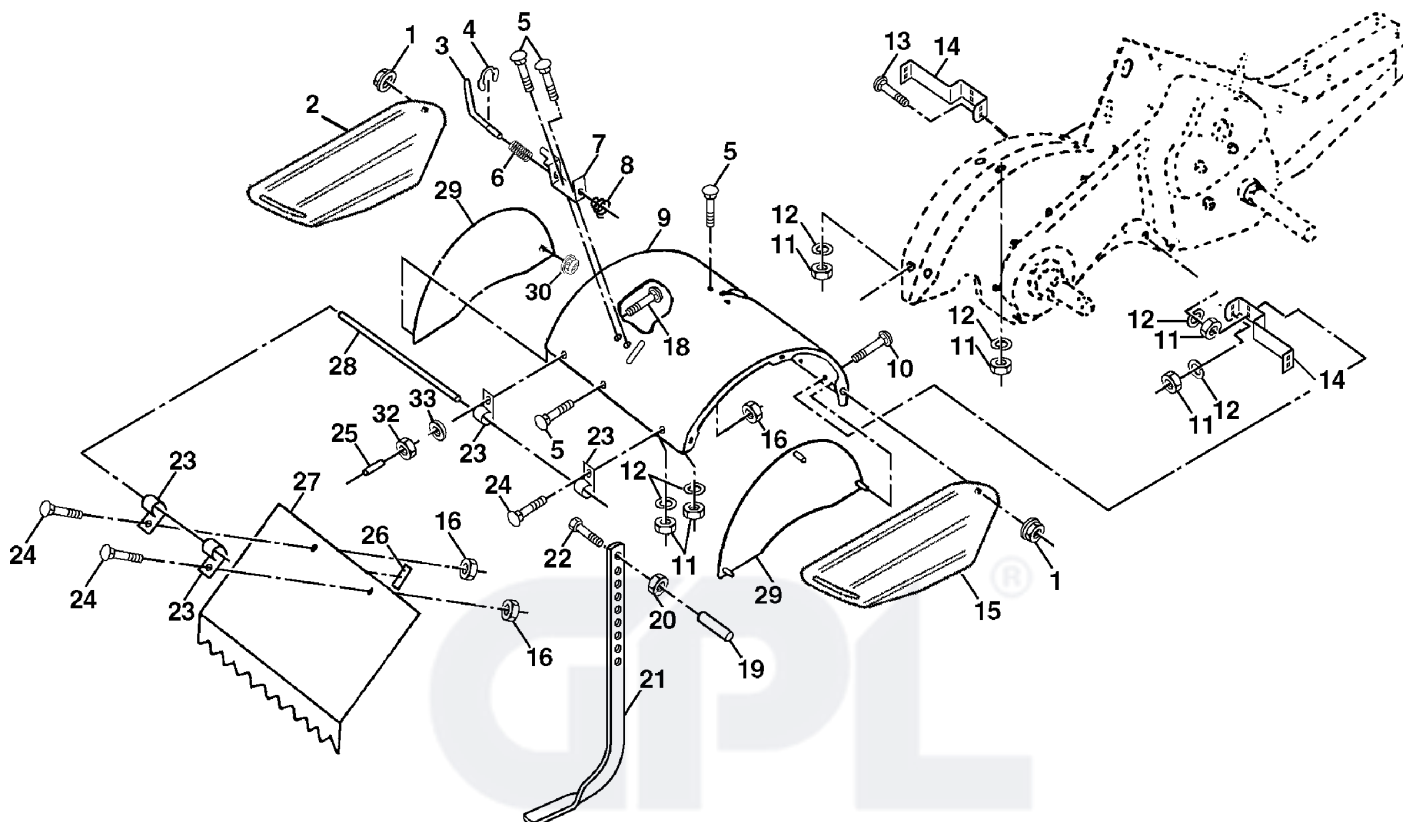

KEY NO.	PART NO.	DESCRIPTION
1	873900500	Nut, Flange 5/16-18
2	532164062	Shield, Side, Outer L. H.
3	532008393	Pin, Stake, Depth
4	812000036	Ring, Klip
5	872140506	Bolt, Carriage 5/16-18 x 3/4 Gr 5
6	532008394	Spring
7	532008392	Bracket, Latch
8	532109230	Spring, Depth Stake
9	532142036	Shield, Tine
10	872140508	Bolt, Carriage 5/16-18 x 1
11	873220500	Nut, Hex 5/16-18
12	810040500	Washer, Lock 5/16
13	872110510	Bolt, Carriage 5/16-18 x 1-1/4
14	532124311	Bracket, Shield Tine
15	532164061	Shield, Side, Outer R.H.
16	873900400	Nut Hex Flange 1/4-20
18	872040410	Bolt, Carriage 1/4-20 x 1-1/4 Gr. 5


KEY NO.	PART NO.	DESCRIPTION
19	532102701	Grip
20	873220600	Nut, Hex 3/8-16
21	532102156	Stake, Depth
22	874930632	Bolt, Hex 3/8-16 x 2
23	532004440	Hinge
24	872140404	Bolt, Carriage 1/4-20 x 1/2 Gr. 5
25	532124717	Cap, Vinyl
26	532109227	Pad, Idler
27	532125410	Shield, Leveling
28	532120588	Pin, Hinge
29	532142037	Shield, Side
30	873970500	Nut, Lock Hx Flange
32	873220400	Nut Fin Hex 1/4-20 UNC
33	810040400	Washer Lock Hvy Hcl 1/4

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

TILLER - - MODEL NUMBER RT5 (JRT5Q)

TINE ASSEMBLY

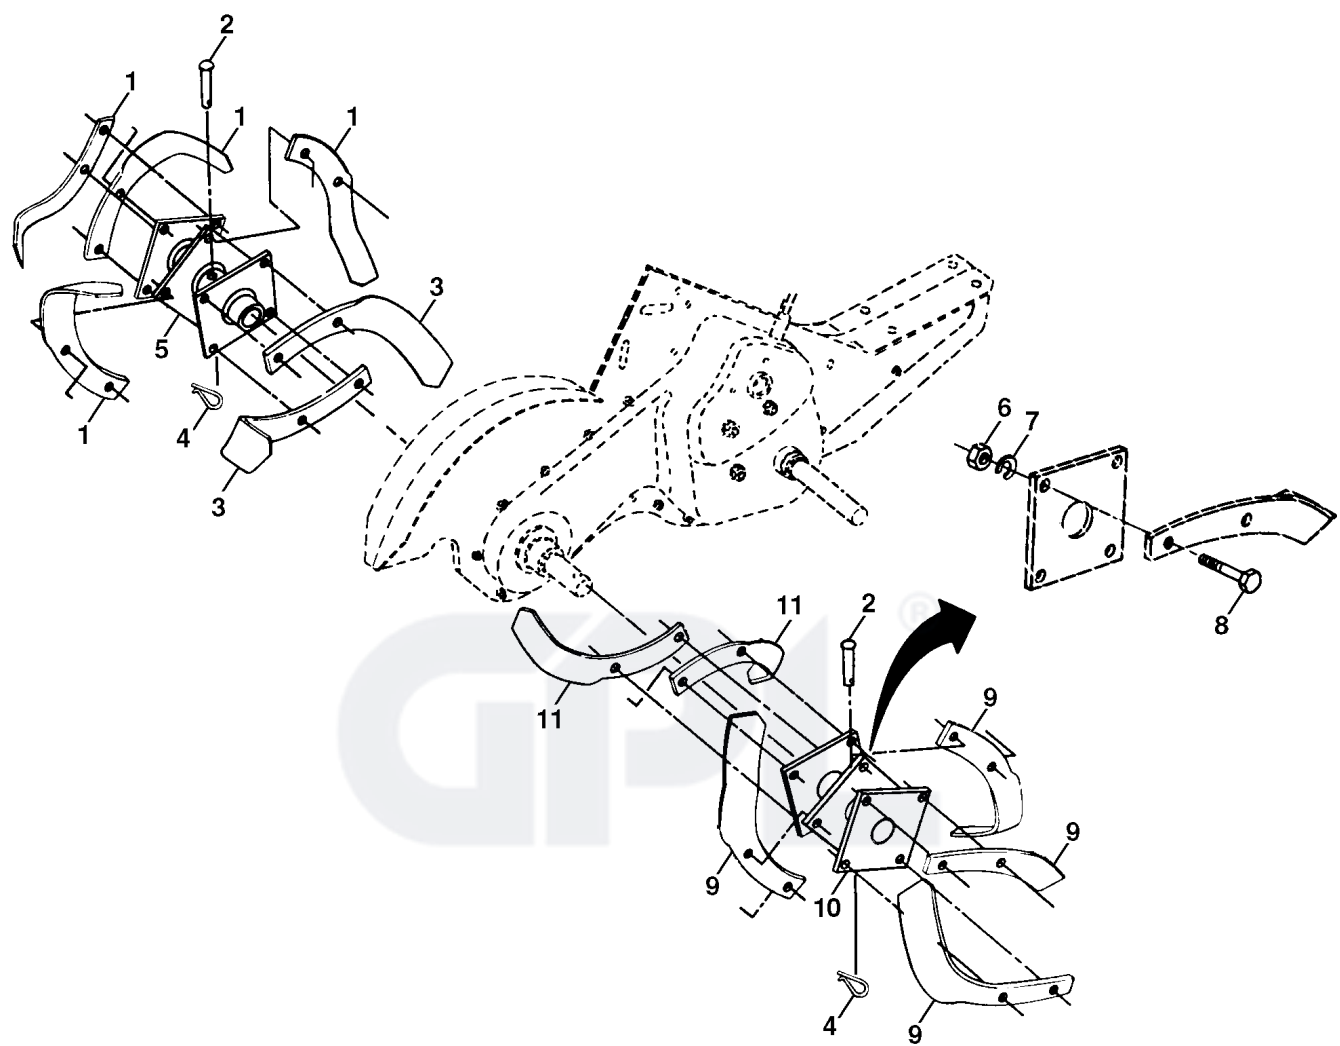

KEY NO.	PART NO.	DESCRIPTION
1	532004459	Tine, Outer, L.H.
2	532132673	Clevis Pin
3	532006554	Tine, Inner, L.H.
4	532124660	Retainer Spring
5	532132727	Assembly, Hub and Plate, L.H.
6	873610600	Nut, Hex 3/8-24
7	810040600	Washer, Lock 3/8


KEY NO.	PART NO.	DESCRIPTION
8	874610616	Bolt, Hex 3/8-24 x 1
9	532004460	Tine, Outer, R.H.
10	532132728	Assembly, Hub and Plate, R.H.
11	532006555	Tine, Inner, R.H.

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

TILLER - - MODEL NUMBER RT5 (JRT5Q)

DECALS

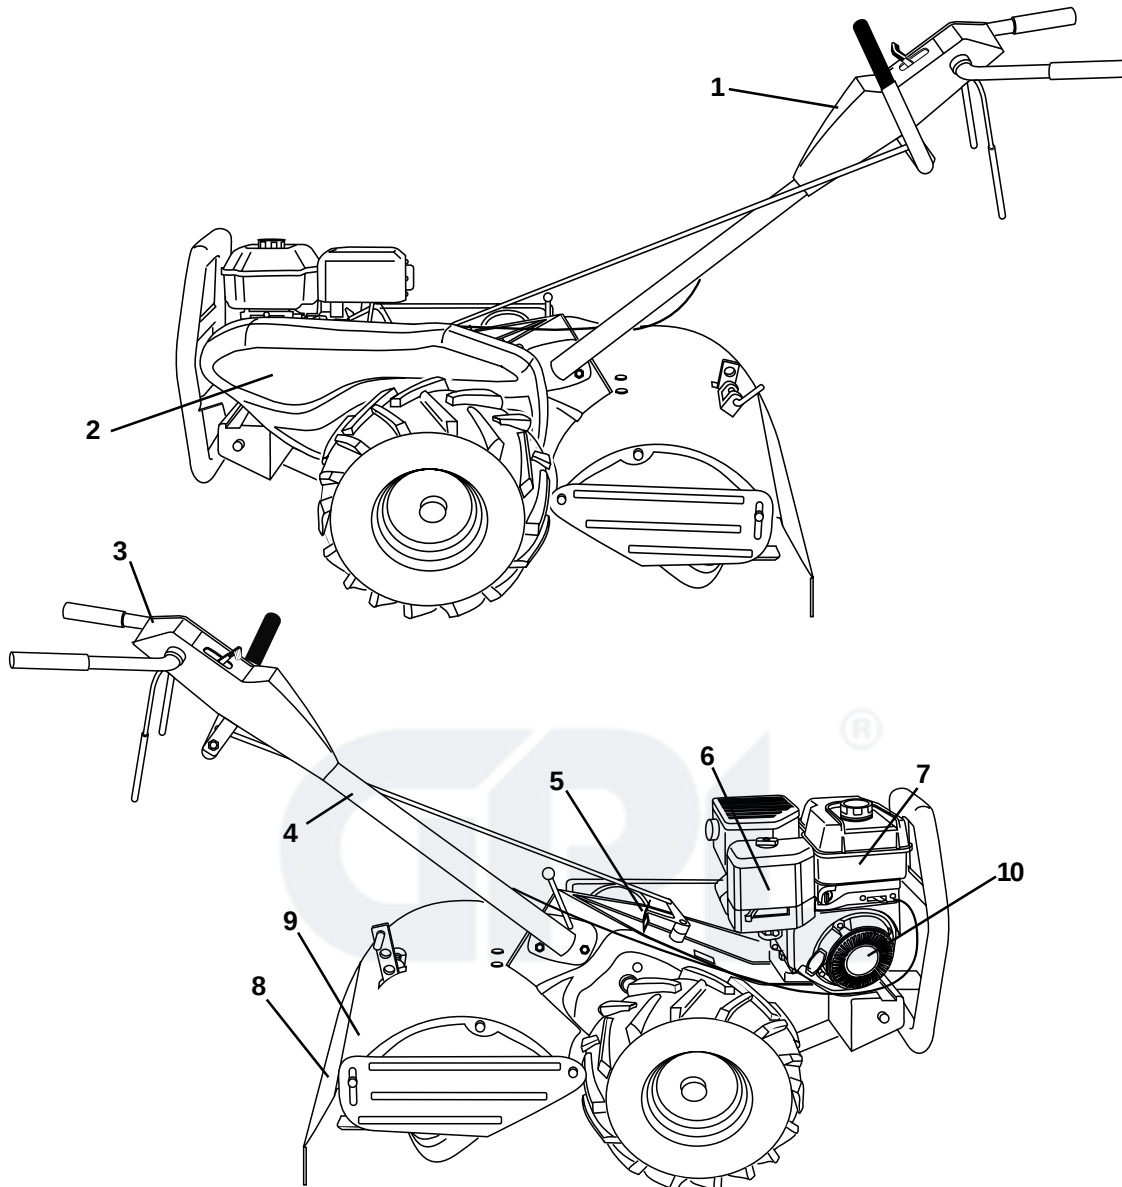

KEY NO.	PART NO.	DESCRIPTION
1	532141946	Decal, Logo
2	532170754	Decal, Belt Guard
3	532136945	Decal, Instruction, Tilling
4	532159877	Decal, Hand Placement
5	532102180	Decal, Shift Indicator
6	532175643	Decal, Caution
7	532171077	Decal 5 HP
8	532176557	Decal, Warning, Rotating Tines
9	532145437	Decal, Europe Stand CE
10	532171078	Decal Recoil
--	532175657	Manual, Operator's (Euro.)
--	532175658	Manual, Operator's (Scan.)