


326 RX, from 20091800001-current


SPARE PARTS LIST

L 326LS, Lx, LDx, Rx, RJx
CYLINDER PISTON & MUFFLER

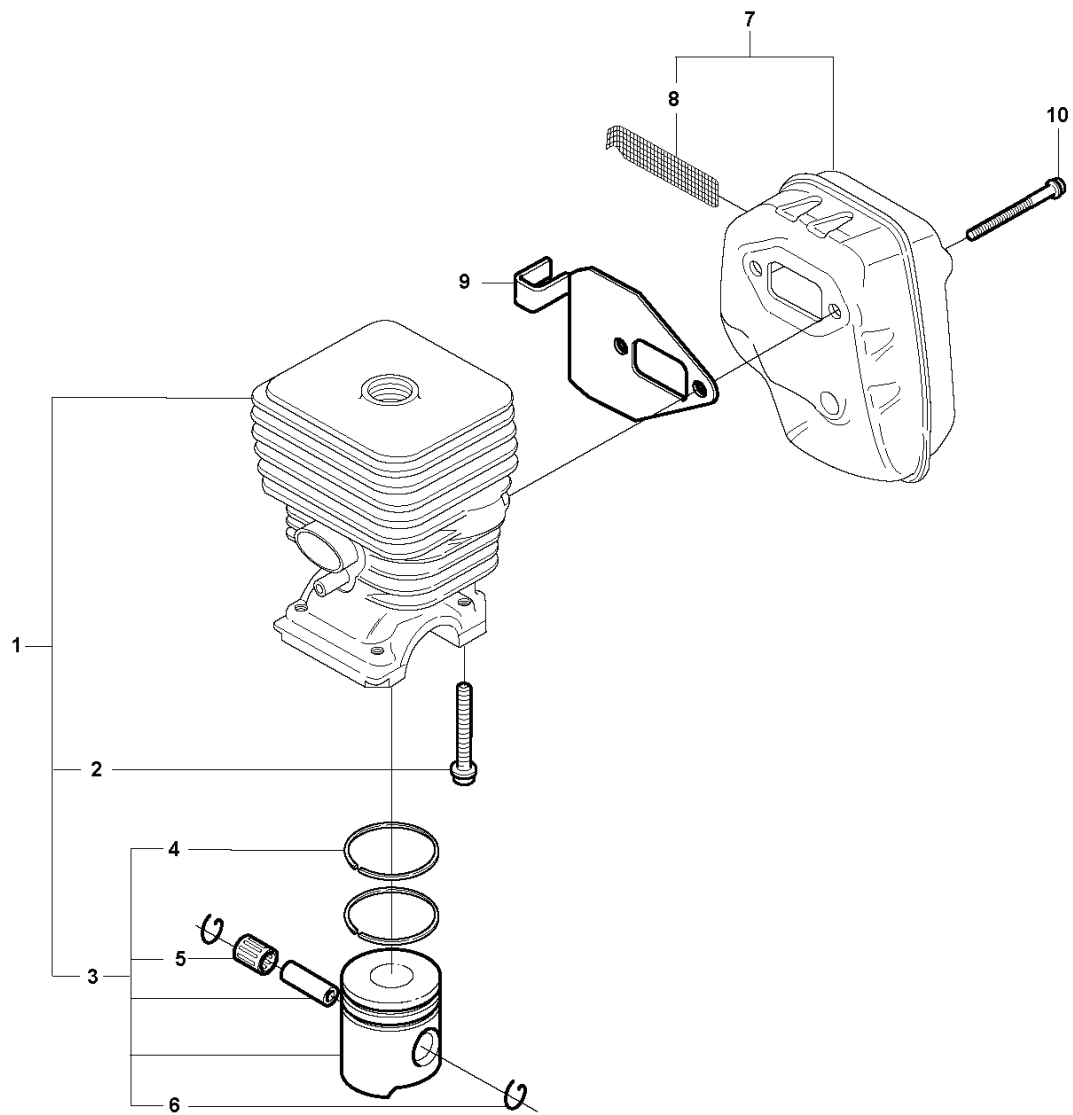


REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	537085102	PISTON	Ø=34mm	1	
2	503200735	SCREW IHSCFM		4	1
3	537405902	PISTON		1	1
4	537406201	PISTON RING		2	3
5	503712201	BEARING		1	3
6	737440800	CIRCLIP		2	3
7	537221703	MUFFLER ASSY	Cat.	1	
8	537221801	SPARK ARRESTER SCREEN		1	7
9	537014101	GASKET		1	
10	503202956	SCREW IHSCFM		3	

J 326LS, Lx, LDx, Rx, RJx
FUEL TANK

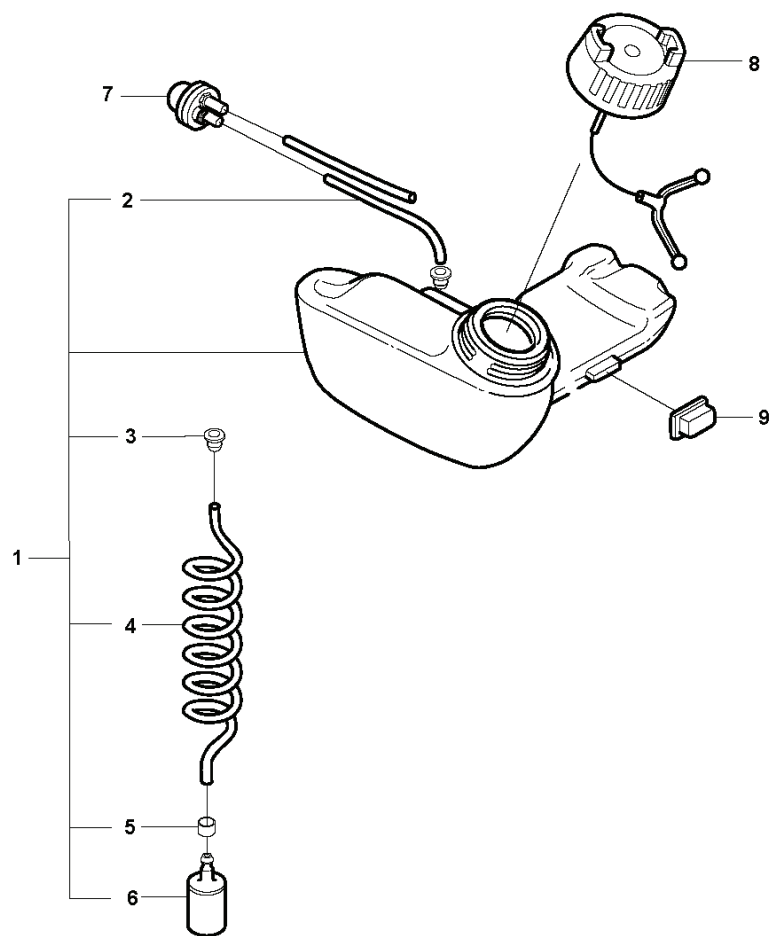


REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	537068602	FUEL TANK		1	
2	537042401	FUEL HOSE		2	1
3	503735801	BUSHING		2	1
4	544325001	FUEL HOSE		1	1
5	504022401	HOSE CLAMP		1	1
6	503443201	FUEL FILTER		1	1
7	503936601	PURGE		1	
8	544889702	TANK CAP		1	
9	503911001	SUSPENSION		4	

S Duo Balance HARNESS

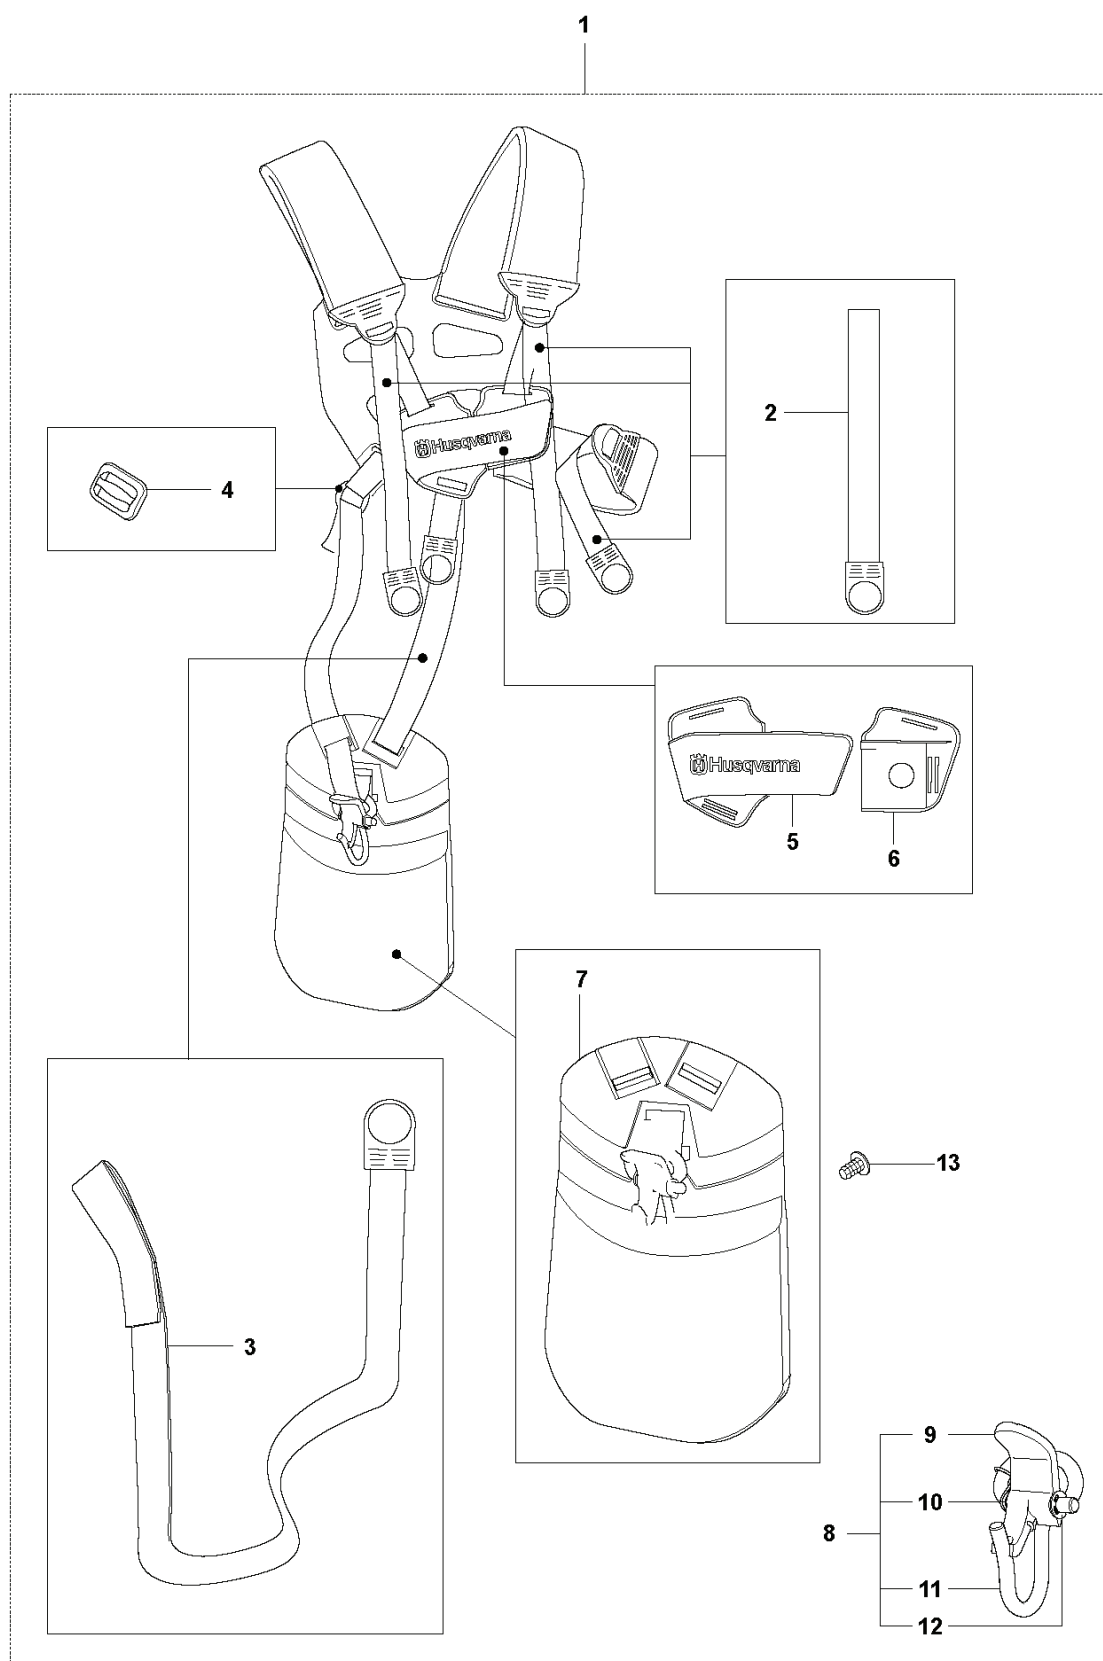


REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	537275701	HARNESS		1	
1	537275703	HARNESS	US	1	1
2	503996101	BAND		3	1
3	503996103	BAND		1	1
4	537113501	RETAINER		1	1
5	537288401	BUCKLE		1	1
6	537288301	BUCKLE		1	1
7	537275901	HIP PAD		1	1
8	502022801	HOOK		1	1
9	502023002	LOCK		1	1.8
10	502023801	SPRING		1	1.8
11	502022902	HOOK		1	1.8
12	735310920	E-CLIP		1	1.8
13	537175401	HIP PAD		3	1

K 326LS, Lx, LDx, Rx, RJx
IGNITION & CLUTCH

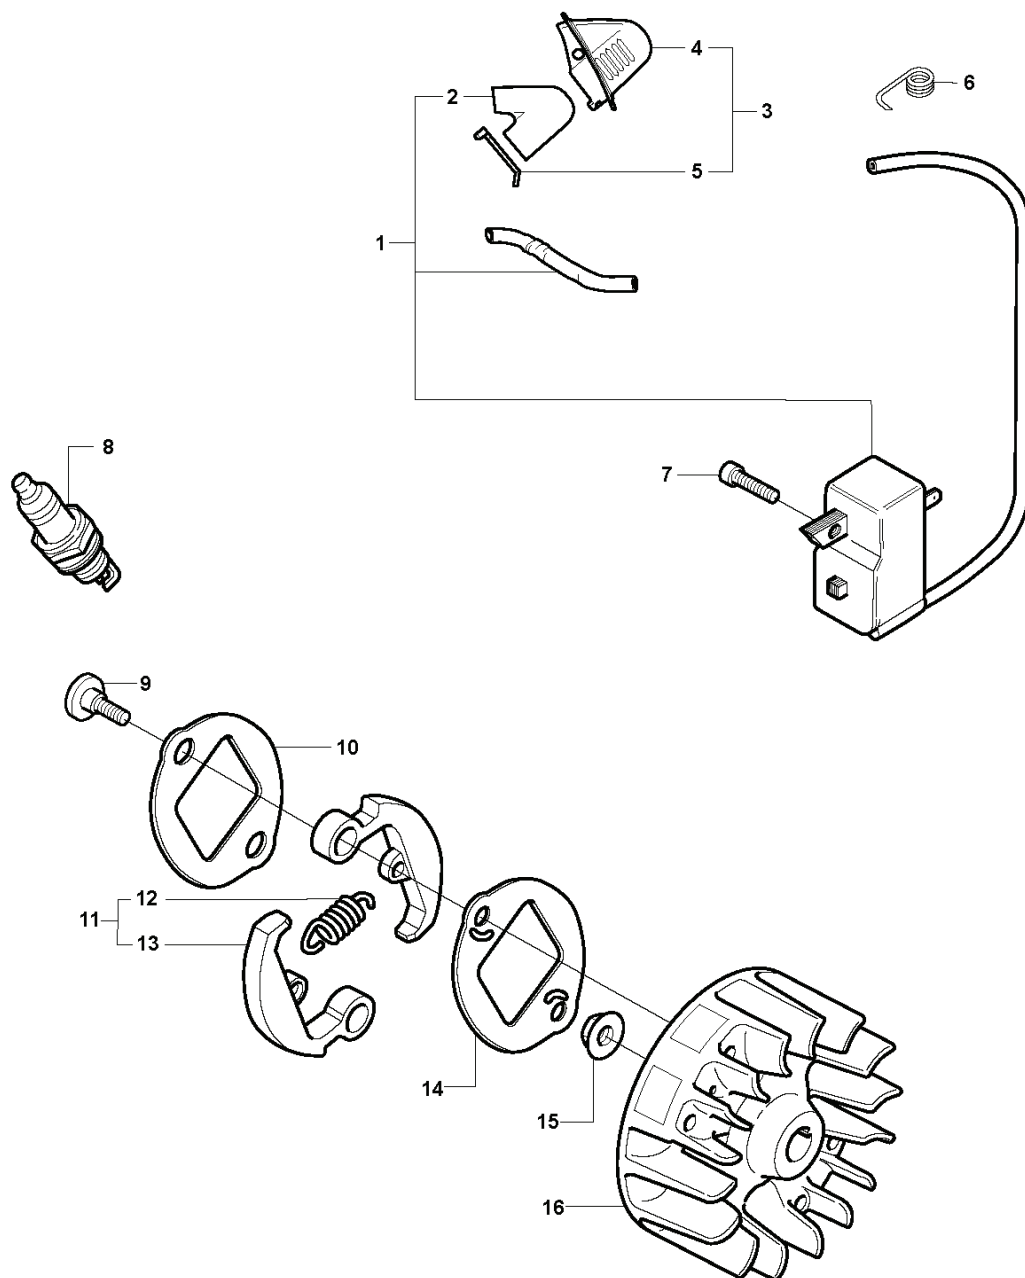

REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	537418701	IGNITION MODULE		1	
2	537239601	SPARK PLUG CAP		1	1
3	537063302	COVER		1	
4	537064403	COVER		1	3
5	537091701	SECURING PLATE		1	3
6	501485601	CONTACT SPRING		1	
7	503217116	SCREW IHSCT		2	
8	503235109	SPARK PLUG	Champion RCJ 6Y	1	
9	503842902	SCREW		2	
10	537046702	WASHER		1	
11	537032201	CLUTCH ASSY		1	
12	503816001	CLUTCH SPRING		1	11
13	503842801	CLUTCH SHOE		2	11
14	537046802	WASHER		1	
15	731711651	HEXAGON NUT FLANGE		1	
16	537249602	FLYWHEEL		1	

C 326LDx
SHAFT

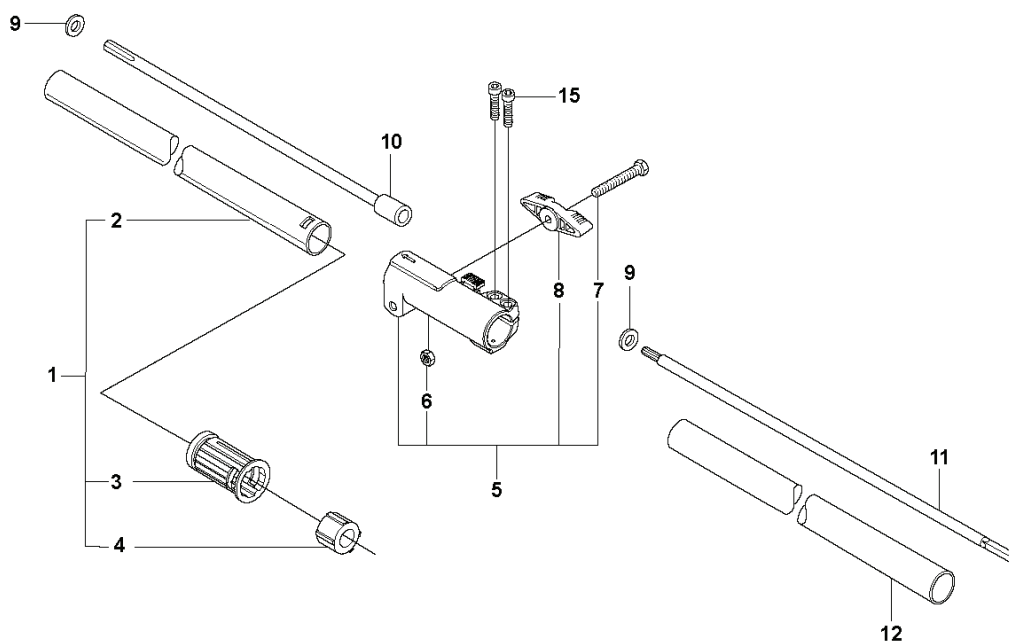


13



14


REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	537079901	TUBE		1	
2	537082701	TUBE		1	1
3	503985401	BEARING CAGE		1	1
4	503785201	SUPPORTING BEARING		1	1
5	544367501	CLAMPING SLEEVE		1	
6	731231601	HEXAGON NUT		1	5
7	725237651	SCREW EHHM		1	5
8	502203801	KNOB		1	5
9	735580810	LOCKWASHER		2	
10	537011901	DRIVE SHAFT		1	
11	544113701	DRIVE SHAFT ASSY		1	
12	537011601	TUBE		1	
13	537294801	LABEL		1	
14	503795601	LABEL		1	
15	725237651	SCREW EHHM		2	

D 326Rx SHAFT & HANDLE


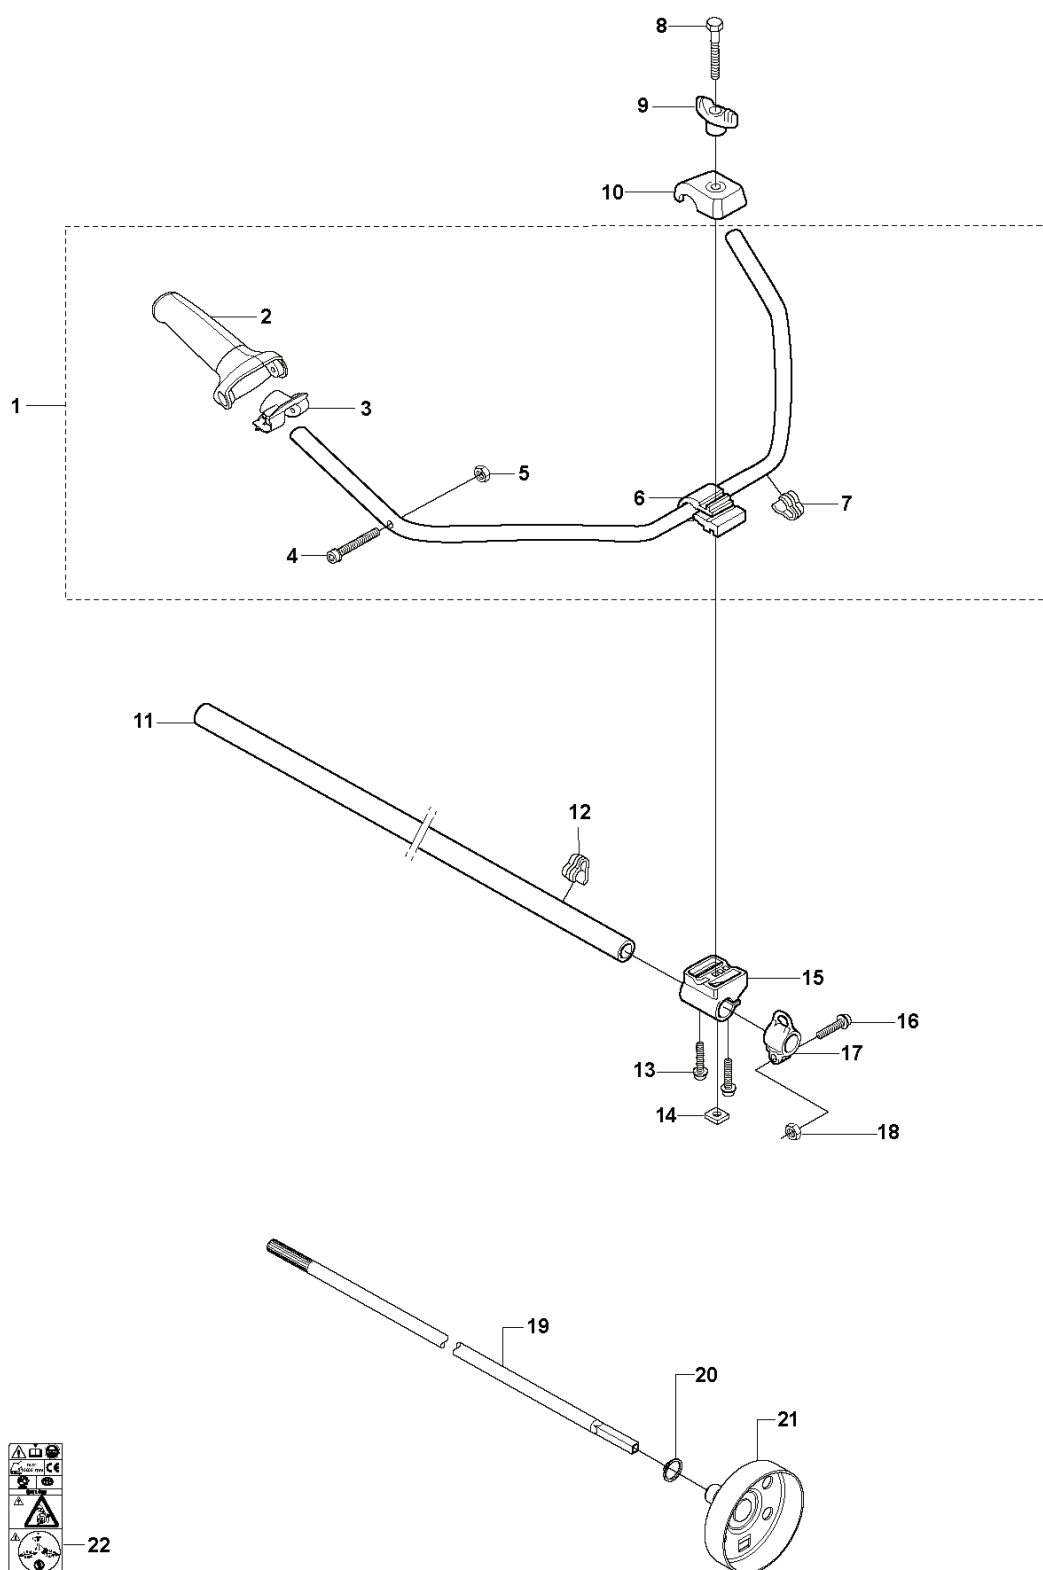


REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	503724309	HANDLEBAR		1	
2	537172801	HANDLE		1	1
3	537172901	COVER		1	1
4	503200245	SCREW IHSCFM		1	1
5	731231401	HEXAGON NUT		1	1
6	503750001	HANDLEBAR BRACKET		1	1
7	502211201	STAPLE		1	1
8	725238651	SCREW EHHM		0	
9	502203801	KNOB		1	
10	503722901	COVER		1	
11	503888801	TUBE		1	
12	502211201	STAPLE		1	
13	503217525	SCREW IHSCFT		2	
14	502197101	SQUARE NUT		1	
15	503882301	BRACKET		1	
16	503200716	SCREW IHSCFM		1	
17	503941001	HOOK		1	
18	731231401	HEXAGON NUT		1	
19	537234801	DRIVE SHAFT		1	
20	735311200	CIRCLIP		1	
21	537237501	CLUTCH DRUM ASSY		1	
22	537294801	LABEL		1	

B 326LS, Lx, LDx, Rx, RJx
SHAFT & HANDLE

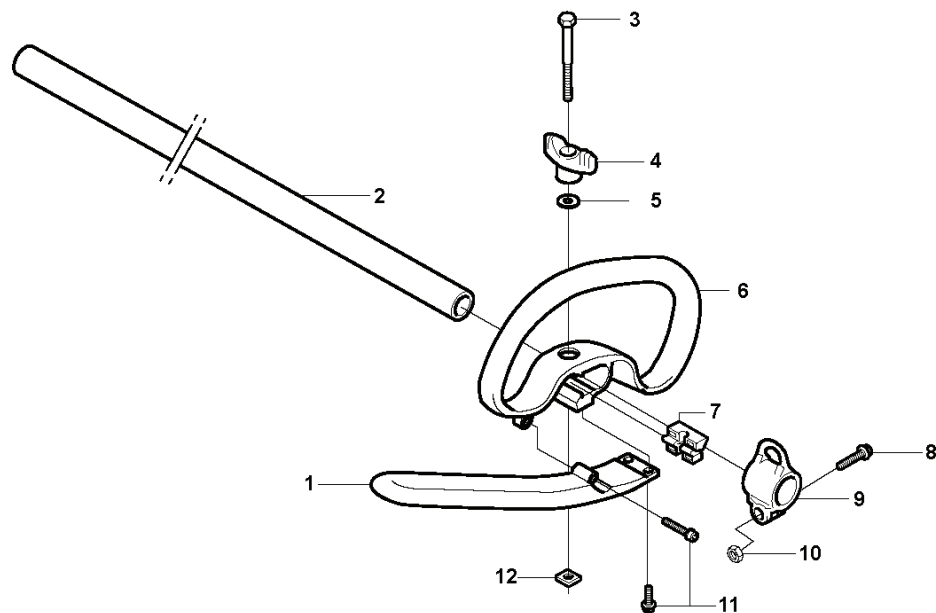


Captive screws

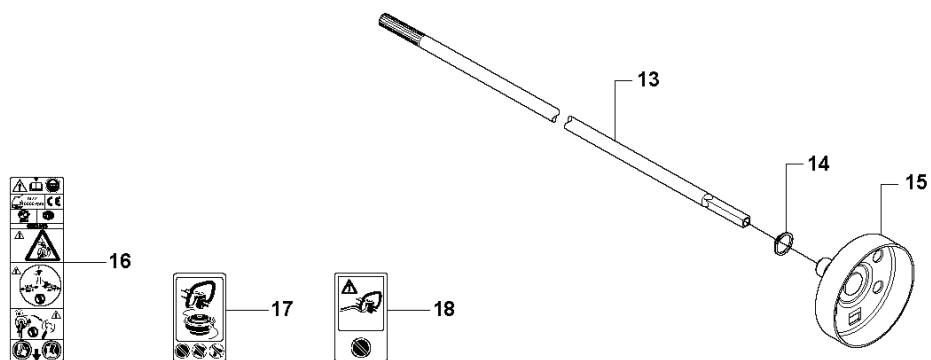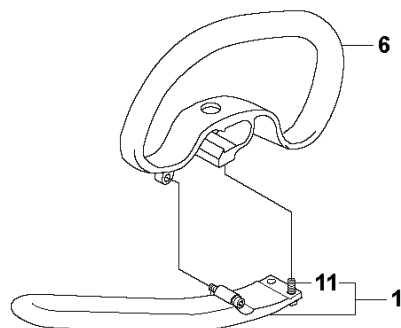


REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	503997801	HANDLE	326RJx	1	
1	503997804	HANDLE	Captive screws	1	
2	503888801	TUBE		1	
3	725237851	SCREW EHHM	326L, LS	1	
3	725238051	SCREW EHHM	326Lx.	1	
4	503879001	KNOB	326Lx	1	
5	503230061	WASHER	326L, LS	1	
6	503871903	HANDLE	326Lx	1	
6	503871908	HANDLE	Captive screws	1	
7	503940301	DISTANCE		1	
8	503200716	SCREW IHSCFM	326RJx	1	
9	503941001	HOOK	326RJx	1	
10	731231401	HEXAGON NUT	326RJx	1	
11	503216816	SCREW IH SCT	326RJx	3	
11	574181501	SCREW IHSCFTO	326RJx Captive screws	3	
12	502197101	SQUARE NUT		1	
13	537234801	DRIVE SHAFT		1	
14	735311200	CIRCLIP		1	
15	537237501	CLUTCH DRUM ASSY		1	
16	537294801	LABEL		1	
17	503795601	LABEL		1	
18	537101001	LABEL	326RJx	1	

H2 326Lx, LDx, Rx, RJx STARTER

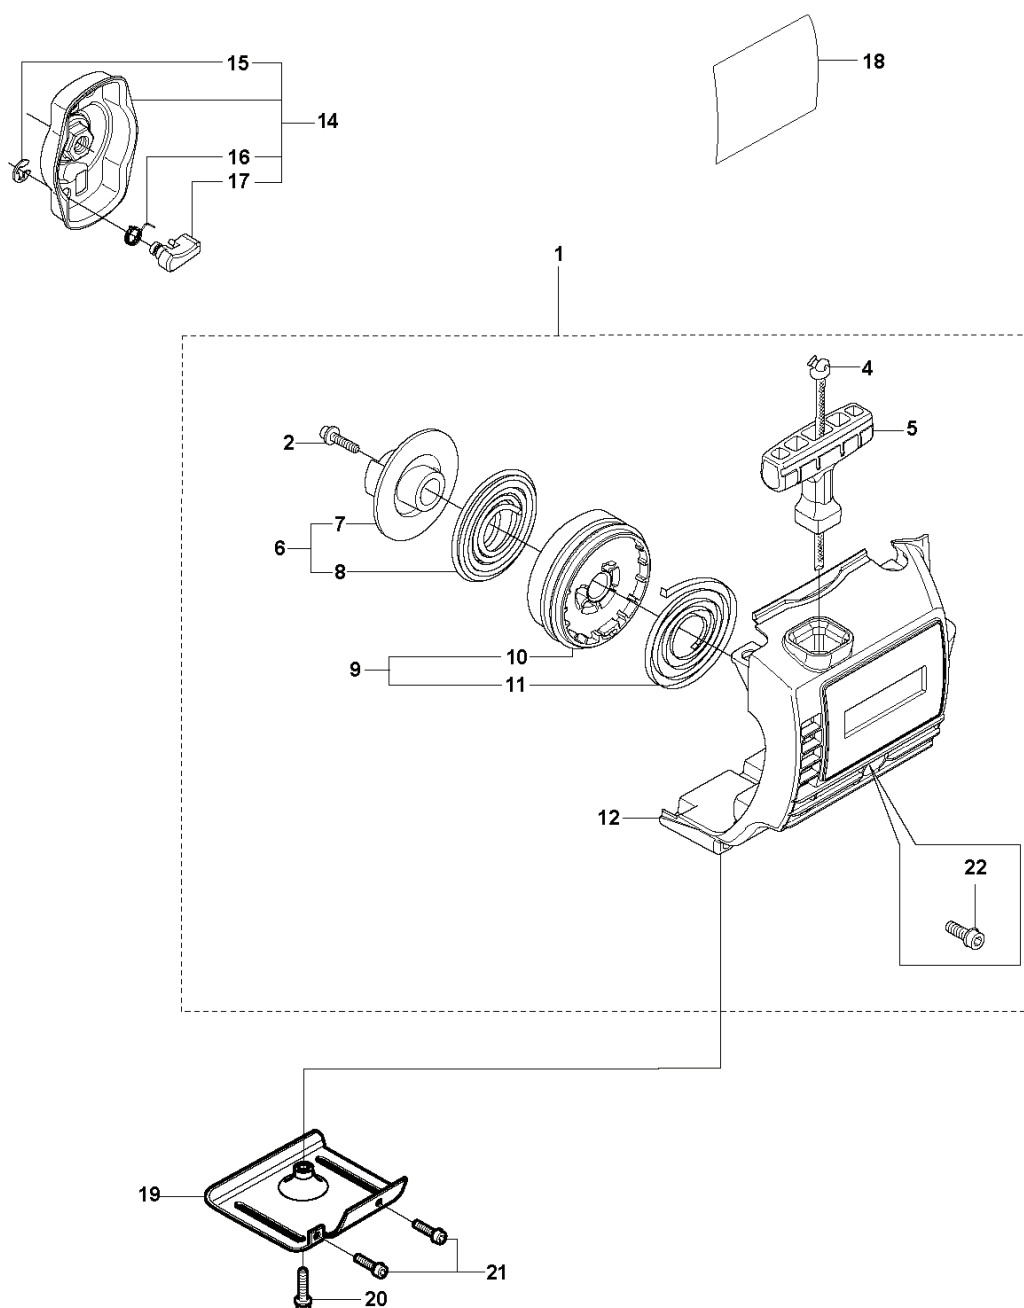


REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	544071103	STARTER ASSY	captive screws	1	
2	503217725	SCREW IH SCT		1	1
4	503858901	STARTER ROPE		1	1
5	537008401	STARTER HANDLE		1	1
6	502082401	DRIVER		1	1
7	544038702	DRIVER		1	1
8	544038802	SPRING		1	1
9	544166501	STARTER PULLEY ASSY		1	1
10	544038601	STARTER PULLEY		1	1
11	503859001	RECOIL SPRING		1	1
12	537411602	STARTER HOUSING	captive screws	1	1
14	503873305	STARTER PAWL		1	
15	735310820	E-CLIP		2	14
16	503873601	SPRING		2	14
17	503873502	STARTER PAWL		2	14
18	537353431	LABEL	326Lx	1	
18	537353433	LABEL	326Rx	1	
18	537353432	LABEL	326LDx	1	
18	537353434	LABEL	326RJx	1	
19	537034101	PROTECTIVE PLATE		1	
20	503200316	SCREW IHSCFM		1	
21	503216618	SCREW IH SCT		1	
22	574477003	SCREW IHSCFMO	captive screws	1	

H4 326LS STARTER

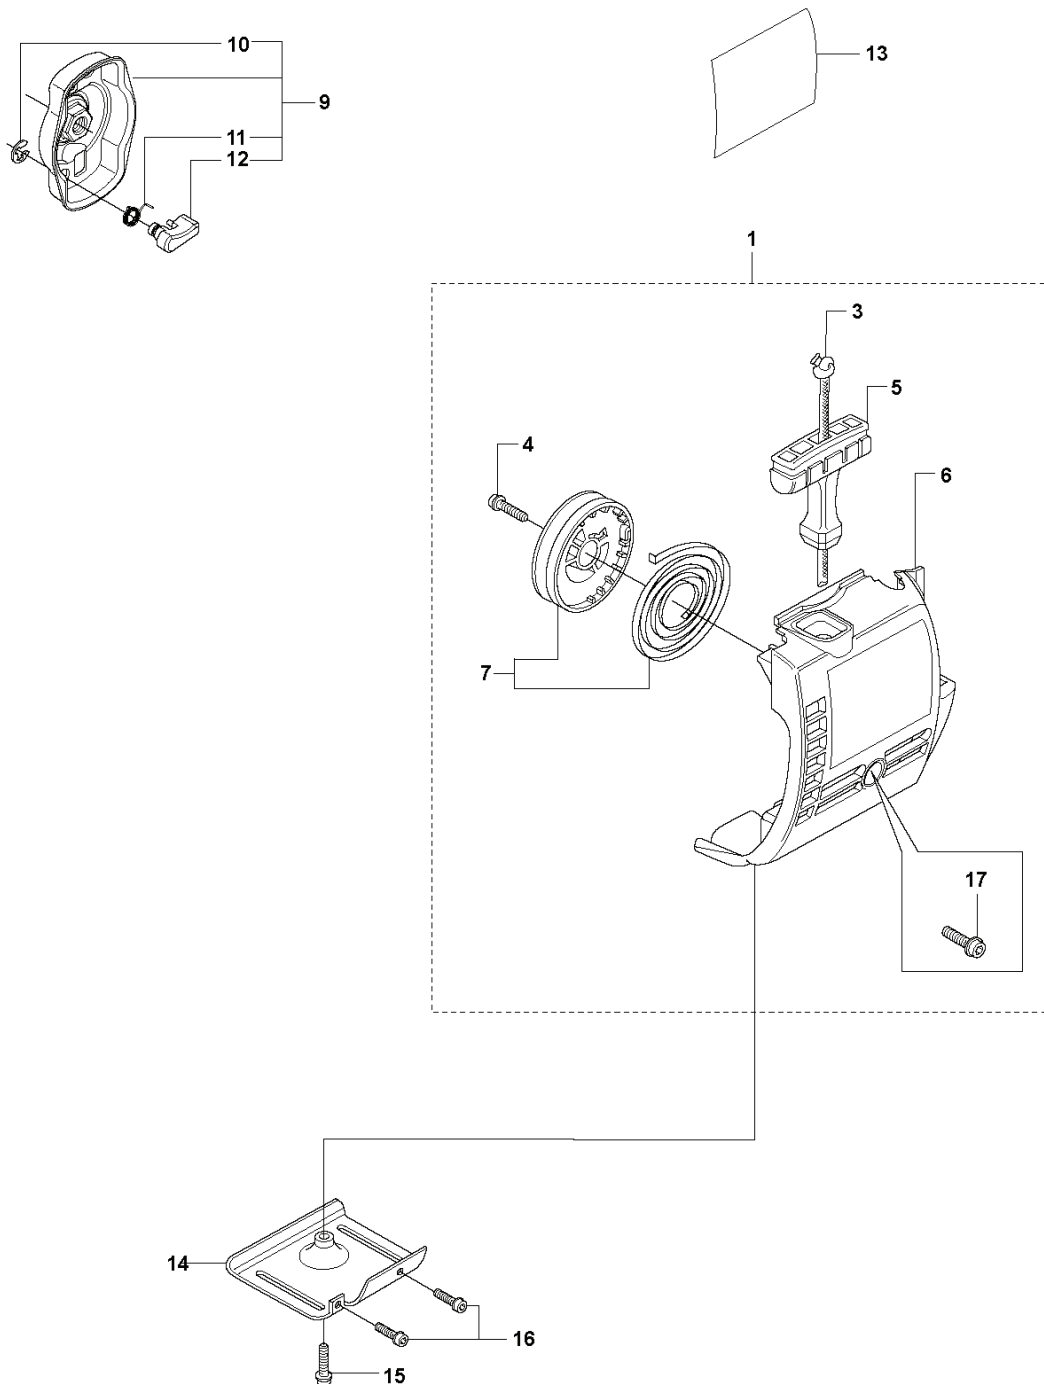





REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	503852807	STARTER ASSY	captive screws	1	
3	503858901	STARTER ROPE		1	1
4	503217716	SCREW IH SCT		1	1
5	537008401	STARTER HANDLE		1	1
6	503858703	STARTER HOUSING	captive screws	1	
7	503964901	STARTER PULLEY		1	1
9	503873305	STARTER PAWL		1	
10	735310820	E-CLIP		2	9
11	503873601	SPRING		2	9
12	503873502	STARTER PAWL		2	9
13	537353454	LABEL	326LS	1	
14	537034101	PROTECTIVE PLATE		1	
15	503200316	SCREW IH SCFM	M5x16	1	
16	503216618	SCREW IH SCT		2	
17	574477003	SCREW IH SCFMO	captive screws	1	

H1 326Lx, LDx, Rx, RJx STARTER

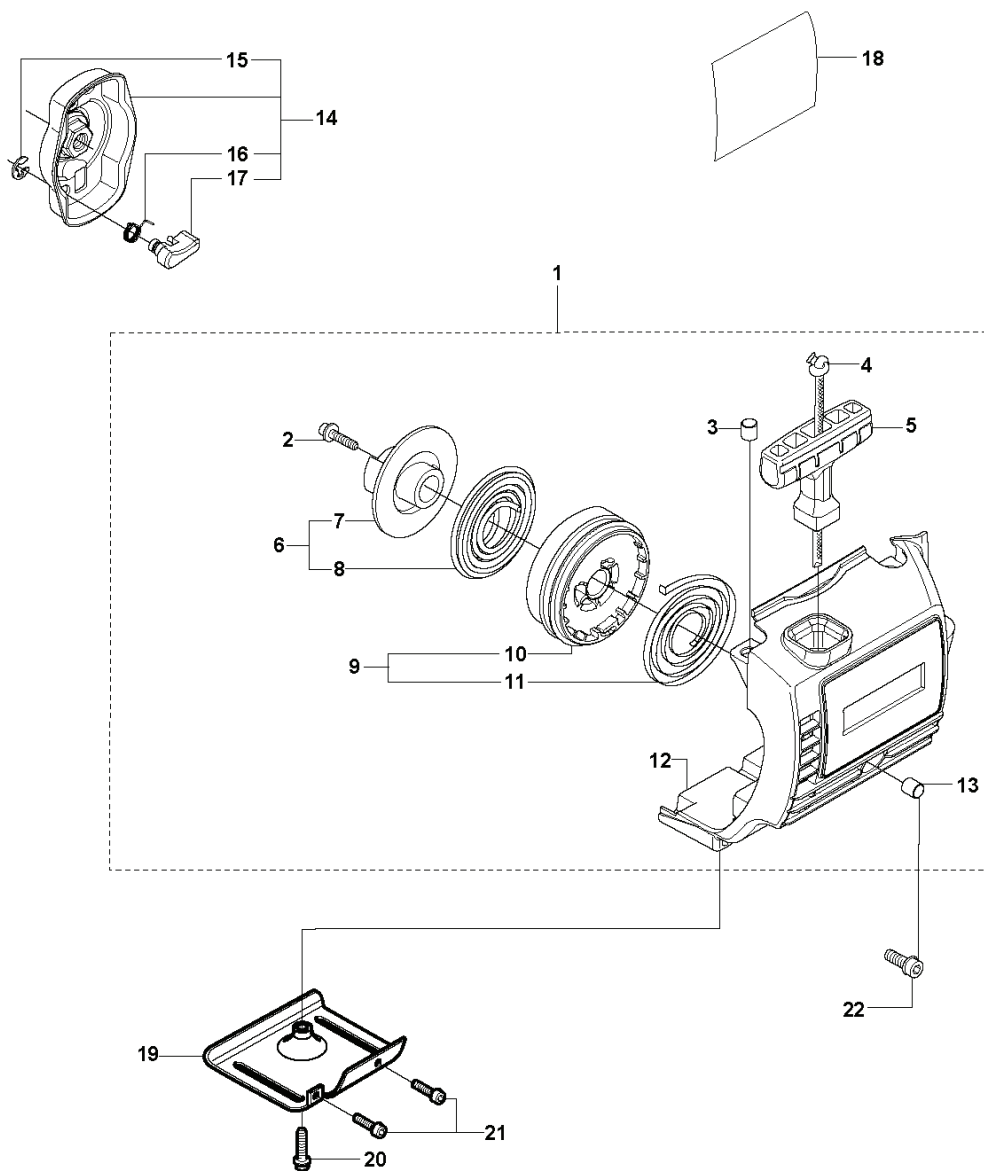


REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	544071102	STARTER ASSY		1	
2	503217725	SCREW IH SCT		1	1
3	537379302	SPACING SLEEVE		2	1
4	503858901	STARTER ROPE		1	1
5	537008401	STARTER HANDLE		1	1
6	502082401	DRIVER		1	1
7	544038702	DRIVER		1	1
8	544038802	SPRING		1	1
9	544166501	STARTER PULLEY ASSY		1	1
10	544038601	STARTER PULLEY		1	1
11	503859001	RECOIL SPRING		1	1
12	537411601	STARTER HOUSING		1	1
13	537379302	SPACING SLEEVE		1	1
14	503873305	STARTER PAWL		1	
15	735310820	E-CLIP		2	14
16	503873601	SPRING		2	14
17	503873502	STARTER PAWL		2	14
18	537353431	LABEL		1	
18	537353433	LABEL	326Lx	1	
18	537353432	LABEL	326Rx	1	
18	537353434	LABEL	326LDx	1	
19	537034101	PROTECTIVE PLATE	326RJx	1	
20	503200316	SCREW IHSCFM		1	
21	503216618	SCREW IH SCT		1	
22	503216820	SCREW IHSCFT		1	

H3 326LS STARTER

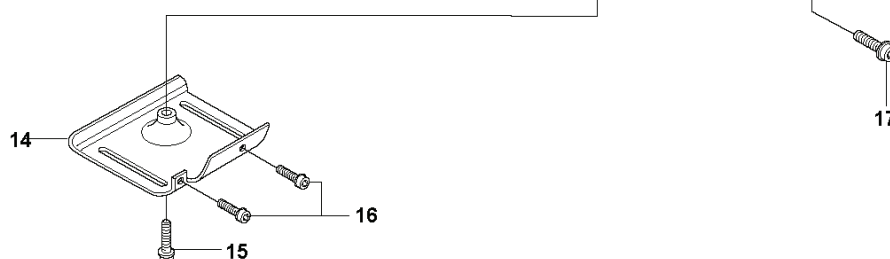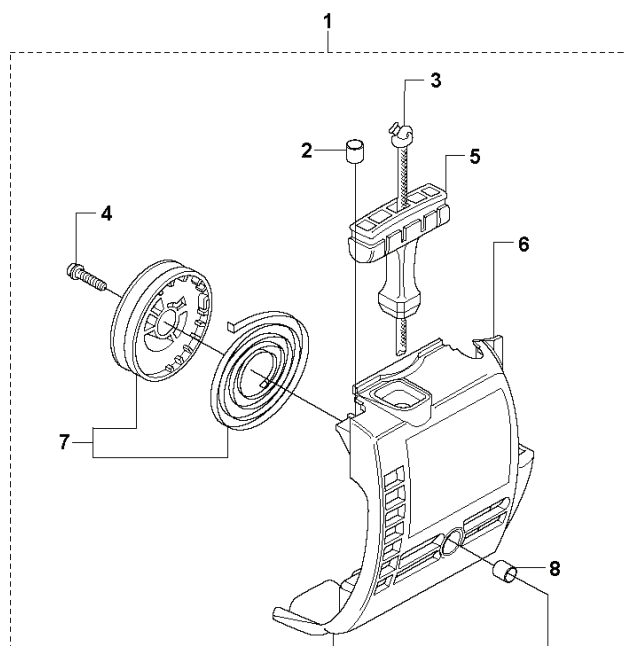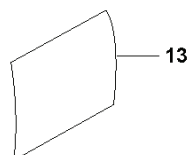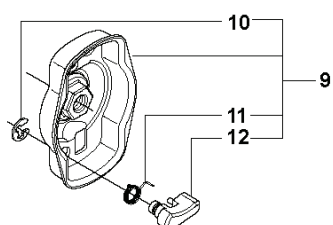



REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	503852806	STARTER ASSY		1	
2	537379302	SPACING SLEEVE		2	1
3	503858901	STARTER ROPE		1	1
4	503217716	SCREW IH SCT		1	1
5	537008401	STARTER HANDLE		1	1
6	503858702	STARTER HOUSING		1	1
7	503964901	STARTER PULLEY		1	1
8	537379302	SPACING SLEEVE		1	1
9	503873305	STARTER PAWL		1	
10	735310820	E-CLIP		2	9
11	503873601	SPRING		2	9
12	503873502	STARTER PAWL		2	9
13	537353454	LABEL		1	
14	537034101	PROTECTIVE PLATE		1	
15	503200316	SCREW IHSCFM	M5x16	1	
16	503216618	SCREW IH SCT		2	
17	503200316	SCREW IHSCFM	M5x16	1	

E1 326LS, Lx, LDx, Rx, RJx THROTTLE CONTROLS

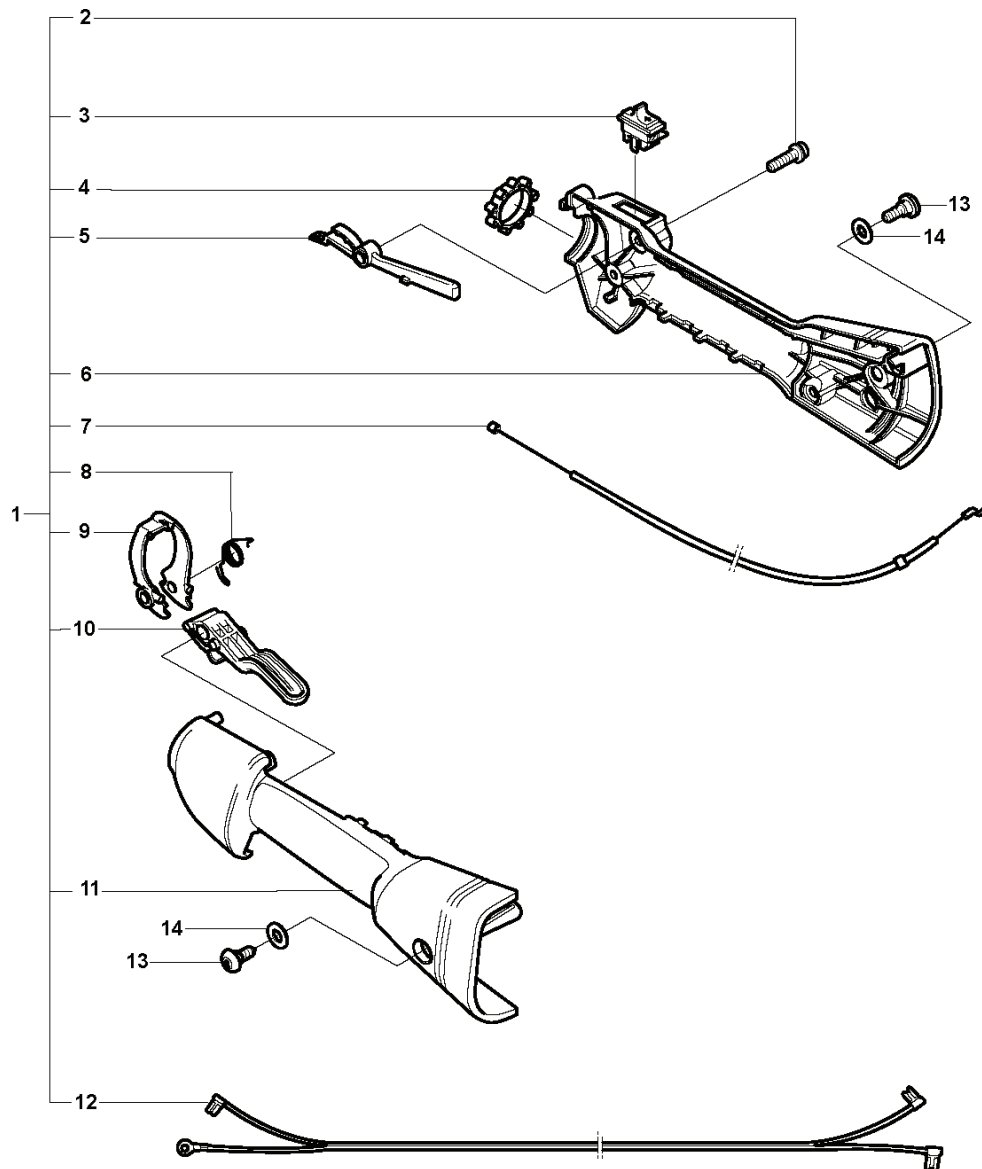


REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	503852902	HANDLE		1	
2	503216618	SCREW IHSC		5	1
3	537419001	SWITCH		1	1
4	503961401	ABSORBER	326L, Lx, LS, LDx	1	1
5	503878001	THROTTLE LOCKOUT		1	1
6	503995502	HANDLE HALF	326Lx, LDx	1	1
6	503995501	HANDLE HALF	326L, LS	1	
7	544171703	THROTTLE CABLE ASSY		1	1
8	537011301	RECOIL SPRING		1	1
9	503918101	THROTTLE LEVER		1	1
10	503877903	THROTTLE TRIGGER		1	
11	503995602	HANDLE HALF	326Lx, LDx	1	1
11	503995601	HANDLE HALF	326L, LS	1	
12	537414201	SHORT CIRCUIT CABLE		1	1
13	503961301	SCREW		2	
14	740420600	O-RING		2	

E2 326Rx THROTTLE CONTROLS

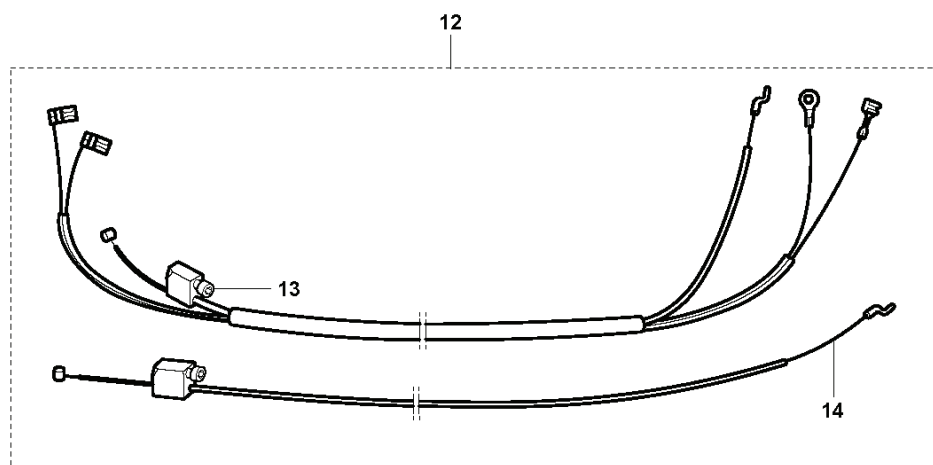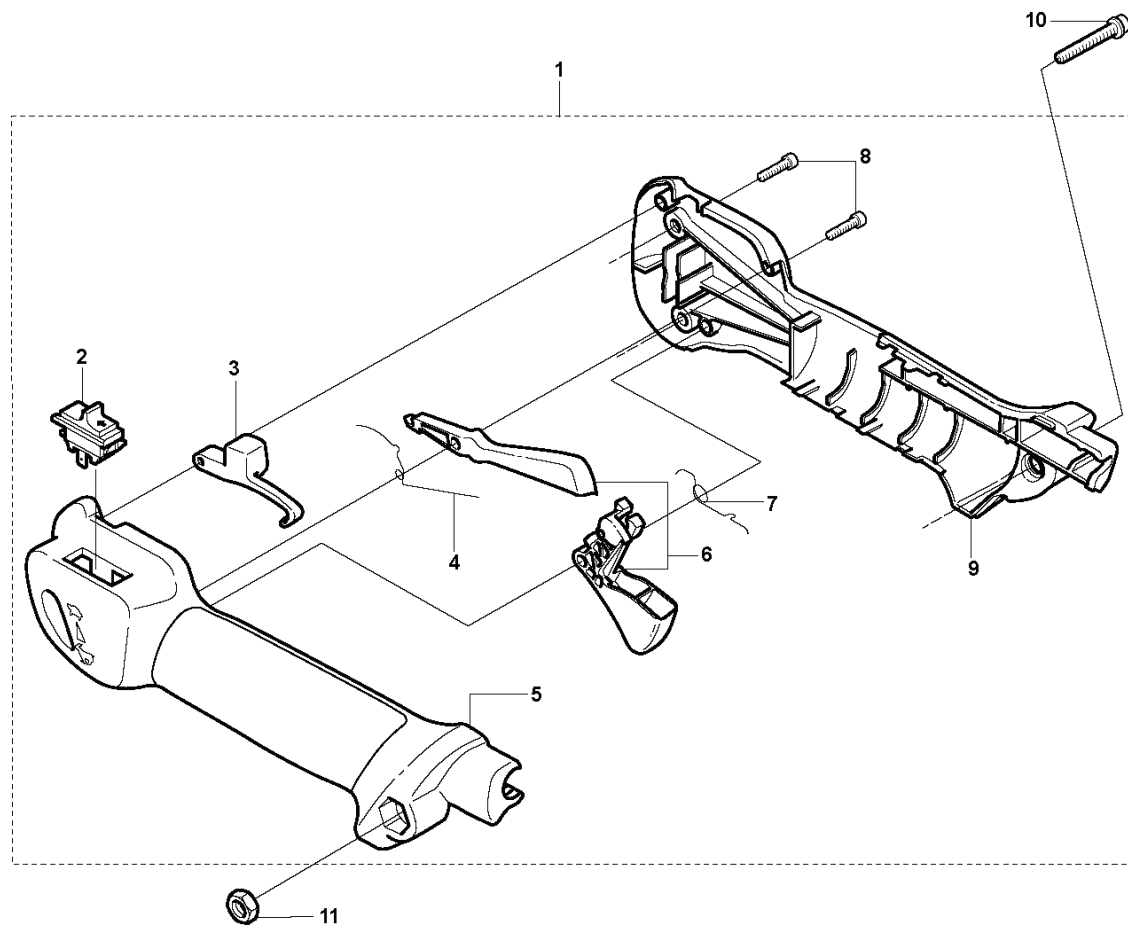




REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	537424513	HANDLE ASSY		1	
2	537419001	SWITCH		1	1
3	537160701	THROTTLE LOCKOUT		1	1
4	537174301	SPRING		1	1
5	537160202	HANDLE HALF		1	1
6	506497701	THROTTLE CONTROL		1	1
7	537174201	SPRING THROTTLE TRIG		1	1
8	503216616	SCREW IH SCT		2	1
9	537160302	HANDLE HALF		1	1
10	503200735	SCREW IH SCFM		1	
11	503221013	HEXAGON NUT		1	
12	537424401	WIRING ASSY		1	
13	503216616	SCREW IH SCT		1	12
14	537173901	THROTTLE CABLE ASSY		1	12

R 326LS, Lx, LDx, Rx, RJx
ACCESSORIES

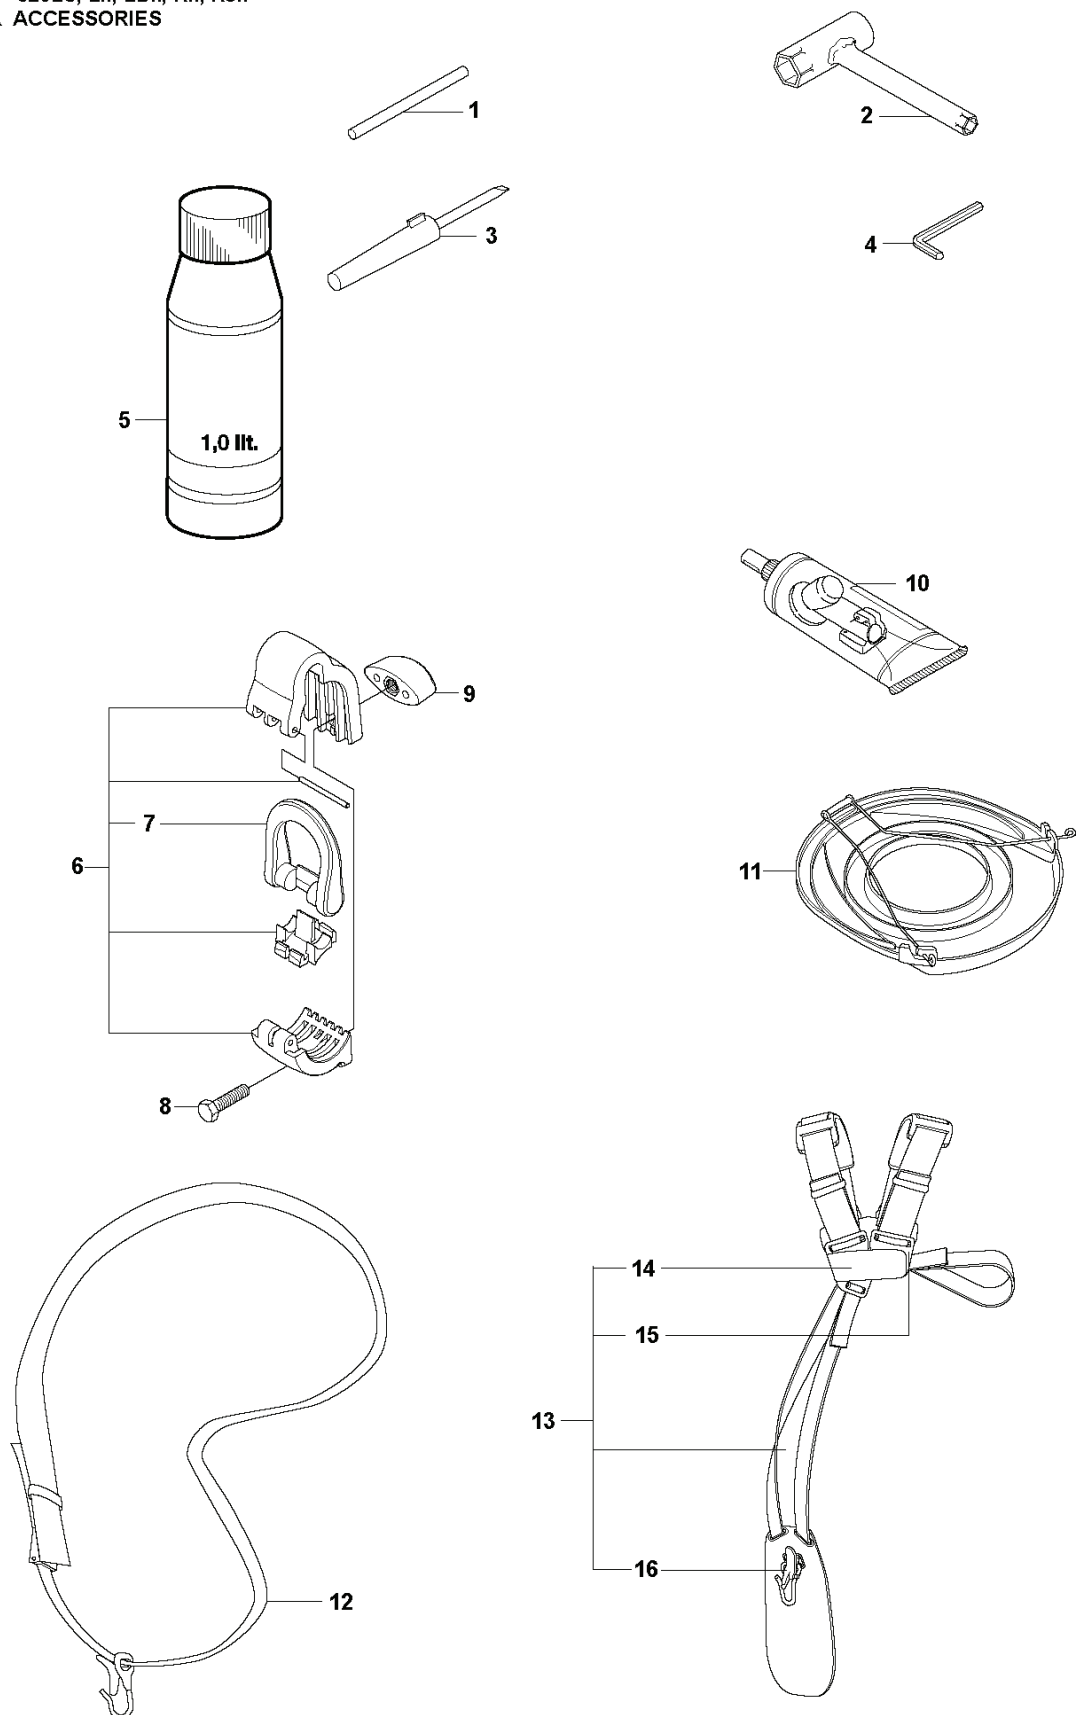

REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	502285901	STOP		1	
2	502114602	SOCKET WRENCH		1	
3	501600203	SCREWDRIVER		1	
4	502215801	WRENCH		1	
5	531009248	FILTER OIL	Oil Air filter	1	
6	537353601	LOOP		1	
7	537350101	LOOP		1	6
8	725233151	SCREW		1	
9	537130402	KNOB		1	
10	503976401	GREASE		1	
11	537312901	TRANSPORT GUARD	200–275 mm	1	
12	537216201	HARNESS		1	
12	537216202	HARNESS	US	1	
13	537216301	HARNESS		1	
13	537216302	HARNESS	US	1	
14	503734102	BUCKLE		1	13
15	503734101	HARNESS		1	13
16	502022802	WELT HOOK		1	13


Q 326LS, Lx, LDx, Rx, RJx
ACCESSORIES

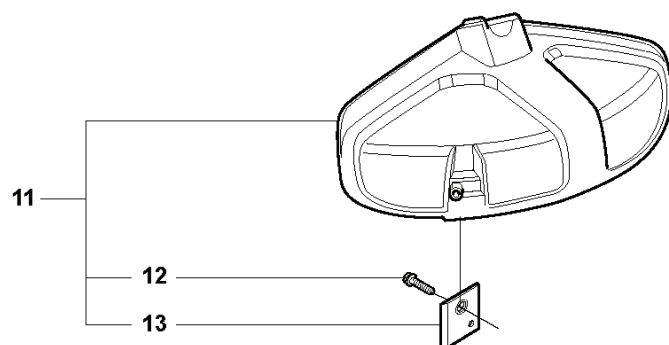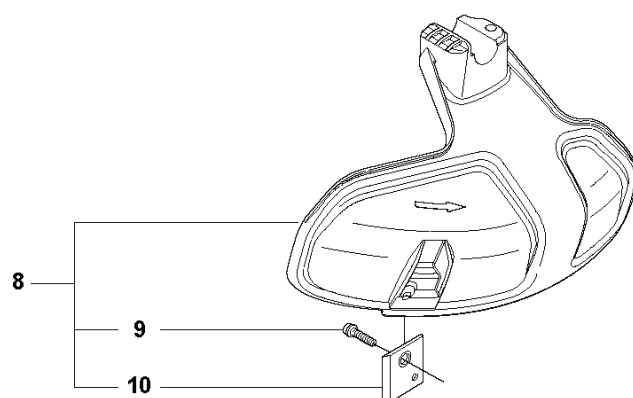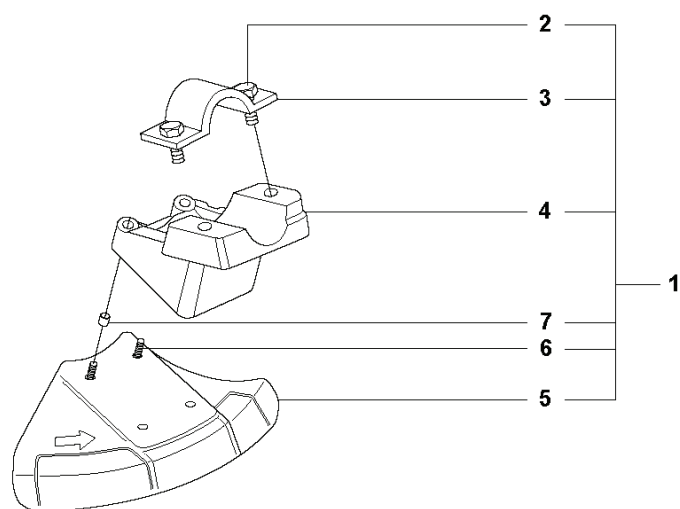

REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	544044210	SAW BLADE GUARD	Captive screws	1	
2	573994304	SCREW IHSCFMO	Captive screws	2	1
3	574568001	CLAMP	Captive screws	1	1
4	537293401	ADAPTER		1	1
5	574564902	BLADE GUARD	Captive screws	1	1
6	503200316	SCREW IHSCFM	Captive screws	4	1
7	574039501	LOCK NUT	Captive screws	4	1
8	503977101	TRIMMER GUARD ASSY		1	
9	503210716	SCREW IH SCT		1	8
10	503798801	BLADE		1	8
11	503934202	COMBINATION GUARD		1	
12	503210716	SCREW IH SCT		1	11
13	503798801	BLADE		1	11


CARBURETOR (only option for US)

Hualong HQ-2

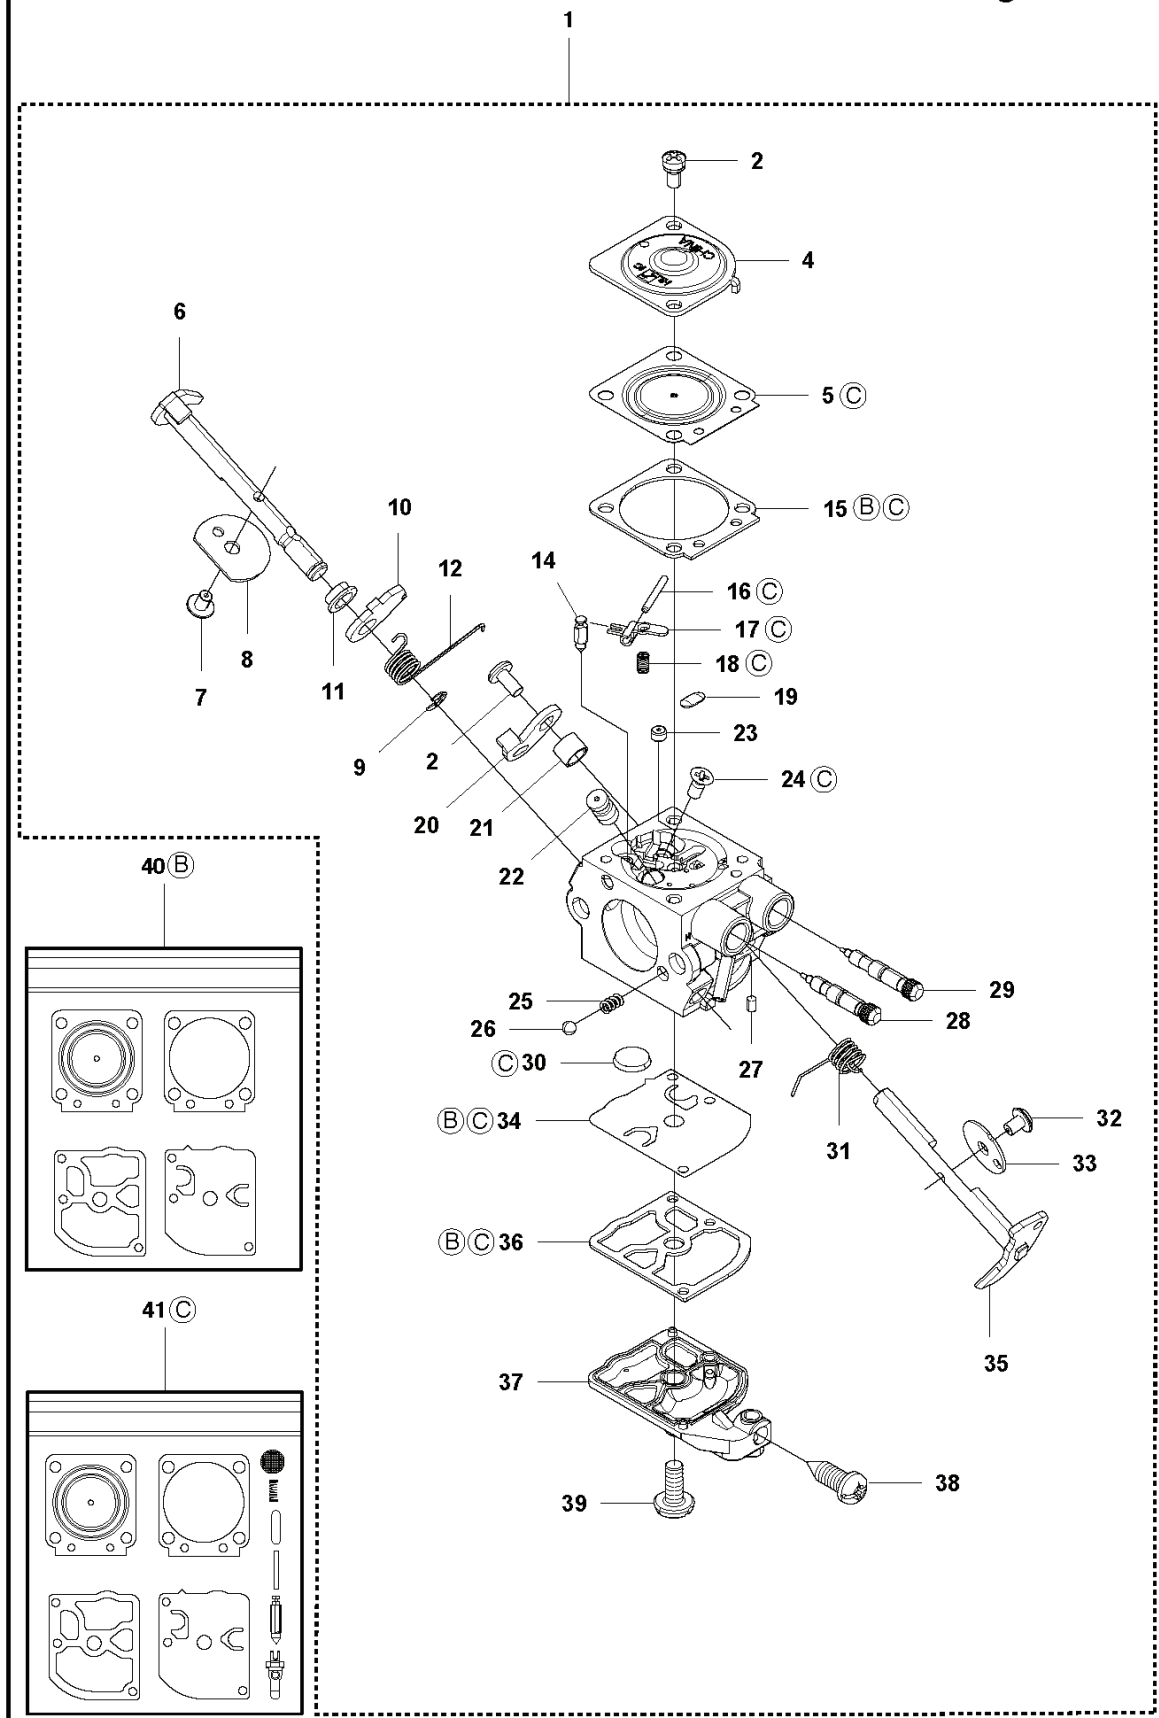




REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	576019801	CARBURETTOR	Hualong HQ-2, only option for US	1	
40	581743501	GASKET KIT		1	1
41	581743701	REPAIR KIT		1	1

G 326LS, Lx, LDx, Rx, RJx
CARBURETOR & AIR FILTER

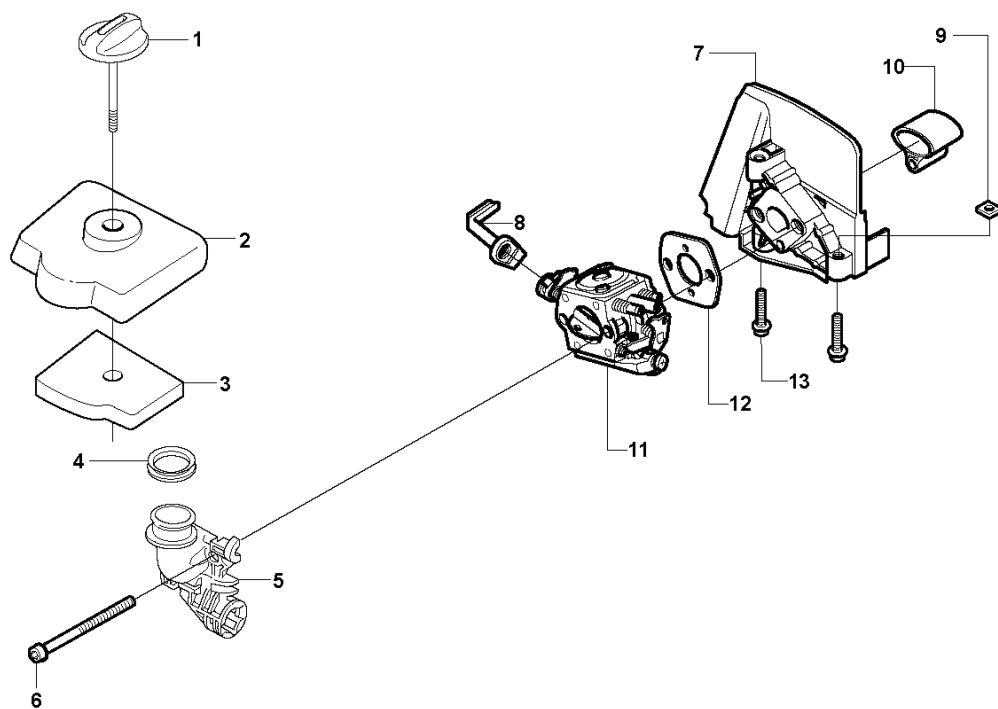


REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	537213210	KNOB		1	
2	537066302	FILTER COVER		1	
3	537143101	AIR FILTER ASSY		1	
4	740681121	V-RING		1	
5	537057801	BRACKET		1	
6	503217550	SCREW IHSCFT		2	
7	503910901	INSULATION WALL		1	
8	503962501	CHOKE CONTROL		1	
9	503226504	SQUARE NUT		2	
10	503942601	INLET PIPE		1	
11	503283401	CARBURETTOR	Zama C1Q-EL24 (Not for US)	1	
11	576019801	CARBURETTOR	Hualong HQ-2 (Only option for US)	1	
12	503497101	GASKET		1	
13	503200325	SCREW IHSCFM		2	

M 326LS, Lx, LDx, Rx, RJx
CRANK CASE

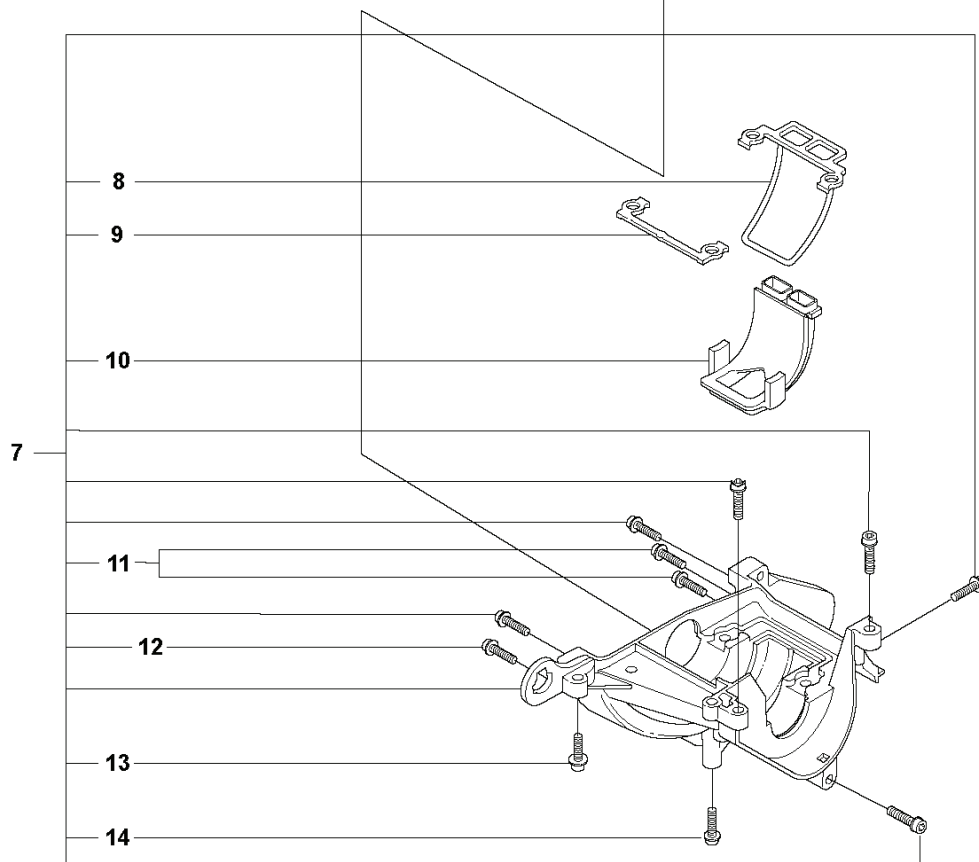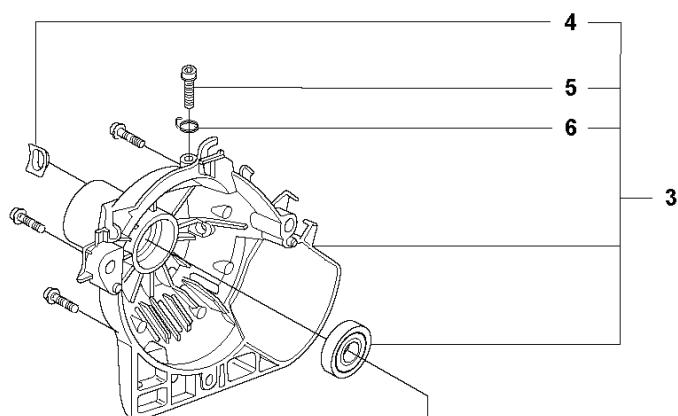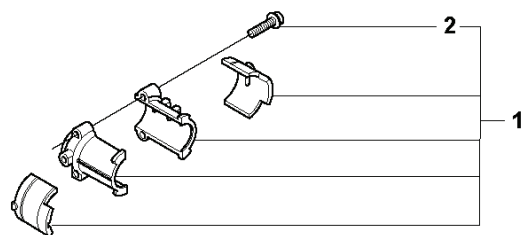

REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	537309601	SLEEVE		1	
2	503216825	SCREW IHSCFT		2	1
3	537041207	CLUTCH COVER		1	
4	537425001	PROTECTIVE PLATE		1	3
5	503200316	SCREW IHSCFM	M5x16	1	3
6	537073601	SPRING		1	3
7	537085203	CRANKCASE		1	
8	537066901	GASKET		1	7
9	537088501	GASKET		1	7
10	537066801	INSERT CRANKCASE		1	7
11	503216618	SCREW IHSCFT		1	7
12	503200316	SCREW IHSCFM	M5x16	8	7
13	503217716	SCREW IHSCFT		1	7
14	503201412	SCREW IHSCFMO		1	7


A 326LS, Lx, LDx, Rx, RJx
BEVEL GEAR

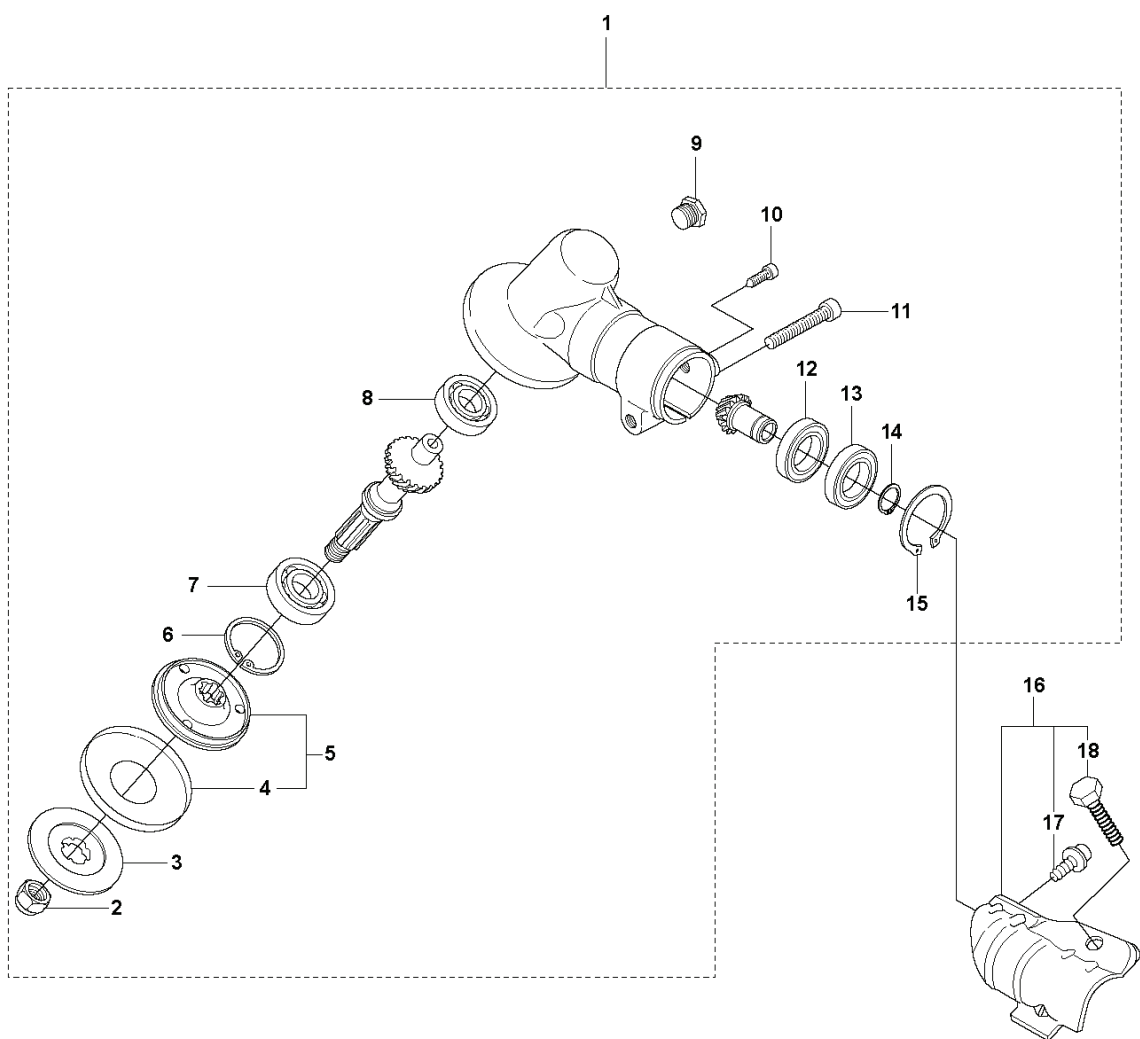

REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	537333802	BEVEL GEAR		1	
2	503856301	NUT		1	1
3	537285601	SUPPORT FLANGE		1	1
4	537292601	CUP		1	1
5	537234901	DRIVER ASSY		1	1
6	735312810	CIRCLIP		1	1
7	503252401	BALL BEARING		1	1
8	738219800	BALL BEARING		1	1
9	503201501	SCREW		1	1
10	503201412	SCREW IHSCFMO		1	1
11	503200725	SCREW IHSCFM		1	1
12	738219900	BALL BEARING		1	1
13	738219902	BALL BEARING		1	1
14	735311100	CIRCLIP		1	1
15	735312510	CIRCLIP		1	1
16	574306901	CLAMP		1	
17	503200712	SCREW IHSCFM		1	16
18	725237051	SCREW		1	16


P 326LS, Lx, LDx, Rx, RJx
CARBURETOR (not for US)

Zama C1Q-EL24

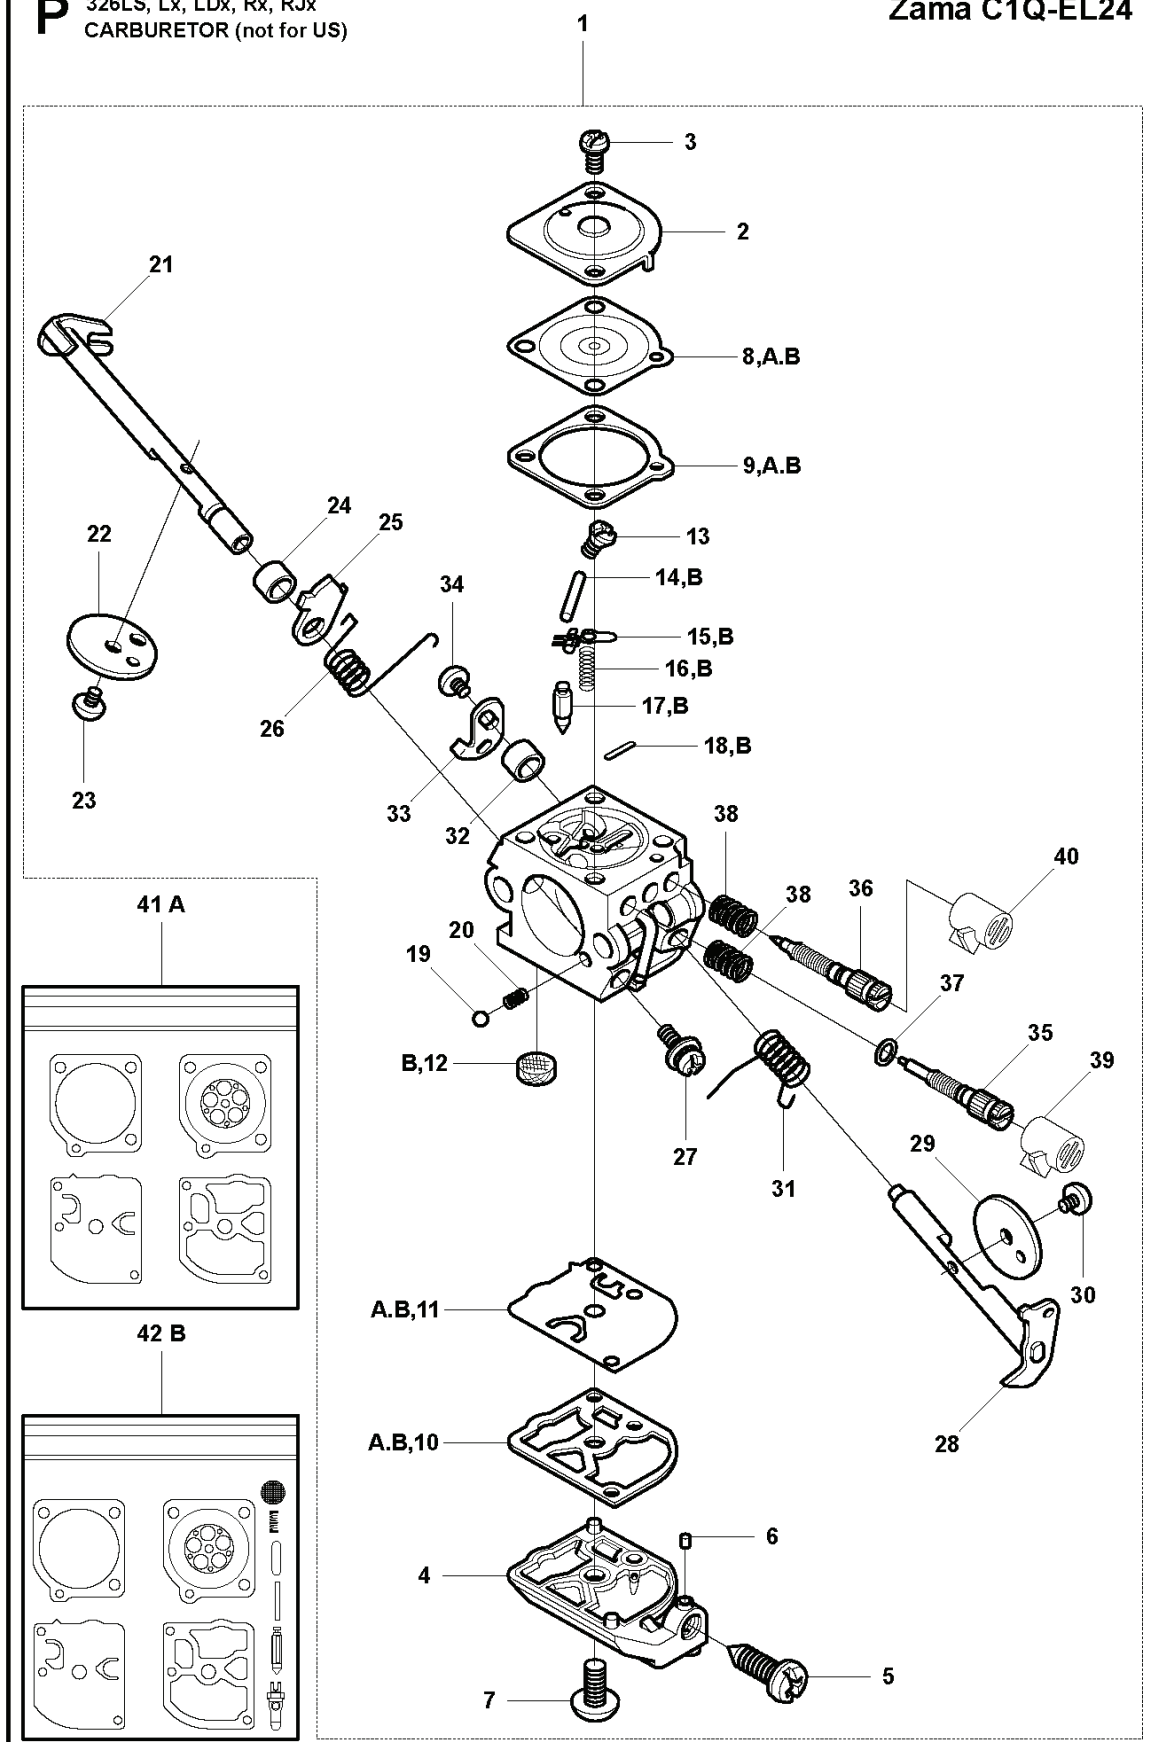


REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	503283401	CARBURETTOR	Zama C1Q-EL24 (Not for US)	1	
2	503974301	COVER		1	1
3	503480501	SCREW		2	1
4	537020201	COVER		1	1
5	537020701	SCREW		1	1
6	503481101	PIECE		1	1
7	503479601	SCREW		1	1
8	537048901	DIAPHRAGM		1	1.A.B
9	537020401	GASKET		1	1.A.B
10	537020101	GASKET		1	1.A.B
11	537020001	DIAPHRAGM PUMP		1	1.A.B
12	503535701	STRAINER		1	1.B
13	503480101	SCREW		1	1
14	503480001	PIN RETAINING SCREW		1	1.B
15	503665901	LEVER		1	1.B
16	537020301	SPRING		1	1.B
17	503479701	VALVE		1	1.B
18	537020801	PLUG		1	1.B
19	537012501	BALL		1	1
20	537012601	SPRING		1	1
21	537020901	SHAFT ASSY		1	1
22	537370301	VALVE		1	1
23	503481801	SCREW		1	1
24	503481901	COLLAR		1	1
25	537049001	LEVER		1	1
26	537021001	SPRING		1	1
27	503755301	SCREW		1	1
28	537019601	SHAFT ASSY		1	1
29	537019901	VALVE		1	1
30	503479201	SCREW		1	1
31	537019701	SPRING		1	1
32	503478901	COLLAR		1	1
33	537019801	LEVER		1	1
34	503479001	SCREW		1	1
35	537020601	SCREW		1	1
36	537127801	SCREW		1	1
37	503974001	WASHER		1	1
38	503480801	SPRING		1	1
39	537021601	LIMITER CAP		1	1
40	537021601	LIMITER CAP		1	1
41	531004552	GASKET KIT		1	
42	531004553	GASKET KIT		1	

F2 326LS, Lx, LDx, Rx, RJx COVERS

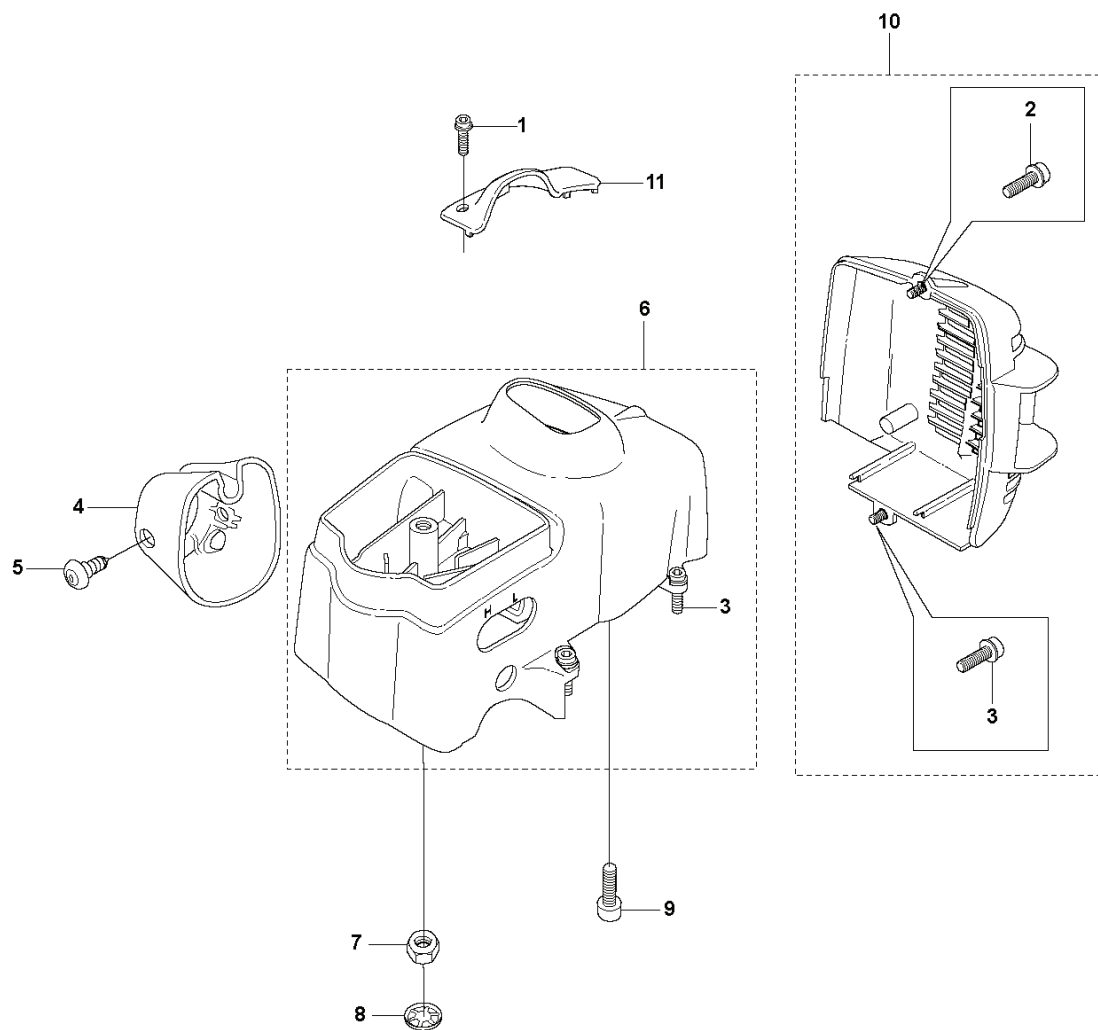


REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
11	537104401	ARM PROTECTION		0	
8	544908501	WASHER		1	
10	537066502	HEAT PROTECTOR		1	
5	503961301	SCREW	326Rx	2	
6	537066103	CYLINDER COVER	captive screws	1	
7	503222401	LOCK NUT		1	
3	574477003	SCREW IHSCFMO	captive screws M5x16	4	6, 10
9	503217116	SCREW IH SCT		1	
4	503972101	COVER	326Rx	1	
1	503213512	SCREW CCRPANT		1	
2	574181501	SCREW IHSCFTO		1	10

F1 326LS, Lx, LDx, Rx, RJx
COVERS

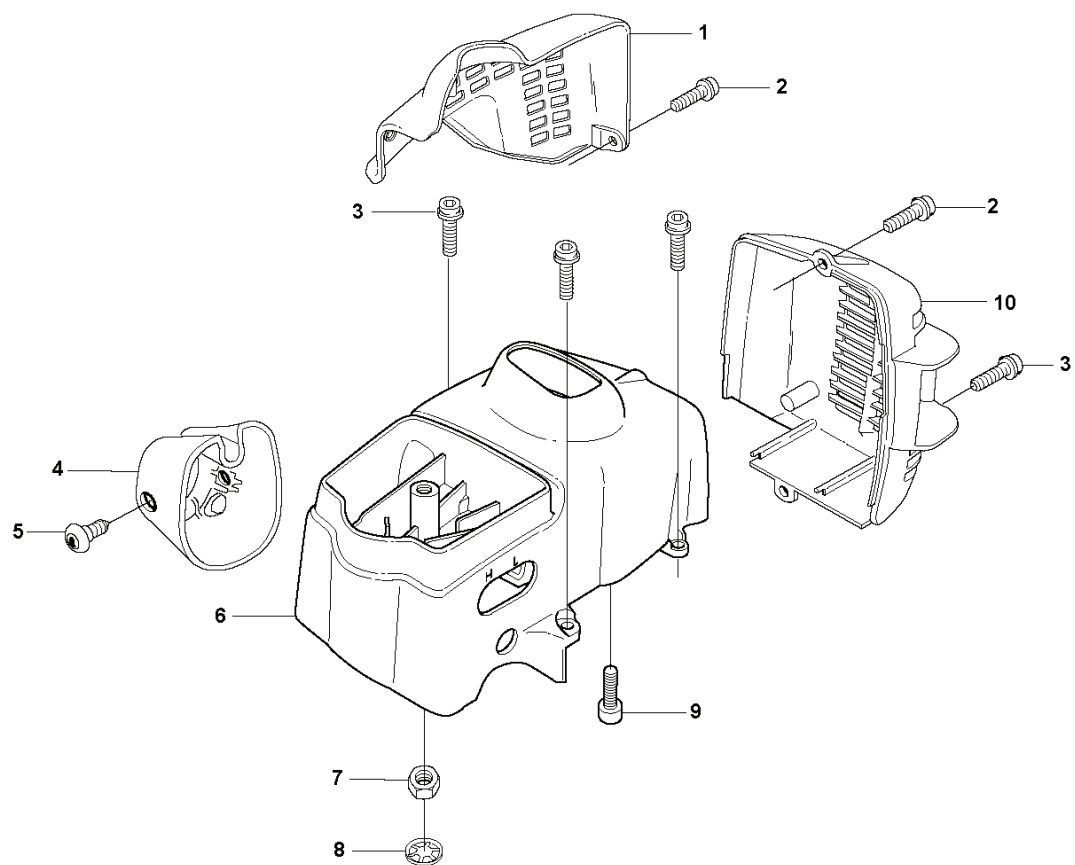

REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	537066601	ARM PROTECTION		1	
2	503216820	SCREW IHSCFT		2	
3	503200316	SCREW IHSCFM	M5x16	4	
4	503972101	COVER	326Rx	1	
5	503961301	SCREW	326Rx	2	
6	537066102	CYLINDER COVER		1	
7	503222401	LOCK NUT		1	
8	544908501	WASHER		1	
9	503217116	SCREW IHSCFT		1	
10	537066502	HEAT PROTECTOR		1	

N 326LS, Lx, LDx, Rx, RJx
CRANK SHAFT

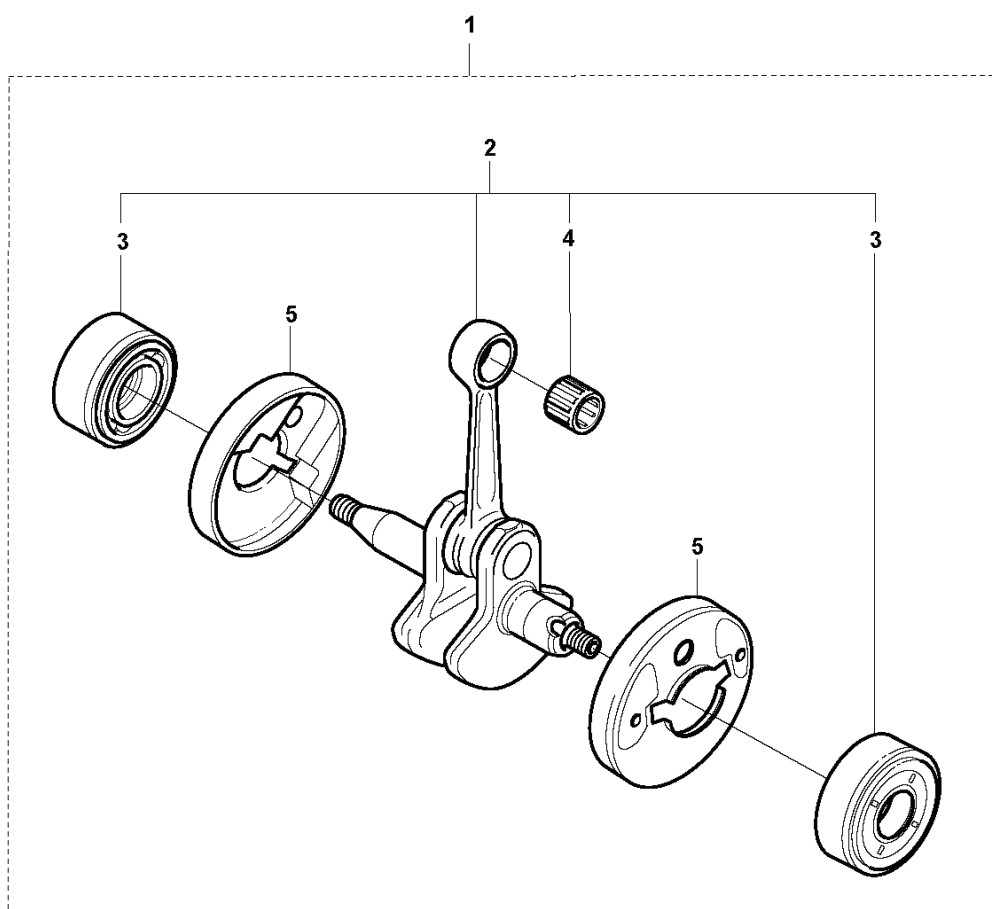

REF.	PART NO.	DESCRIPTION	REMARK	QTY.	KIT
1	503852474	CRANKSHAFT ASSY		1	
2	503852475	CRANKSHAFT ASSY		1	1
3	503940203	BEARING CAGE		2	1,2
4	503712201	BEARING		1	1,2
5	503940501	CUP		2	1